





Grune Post - wings

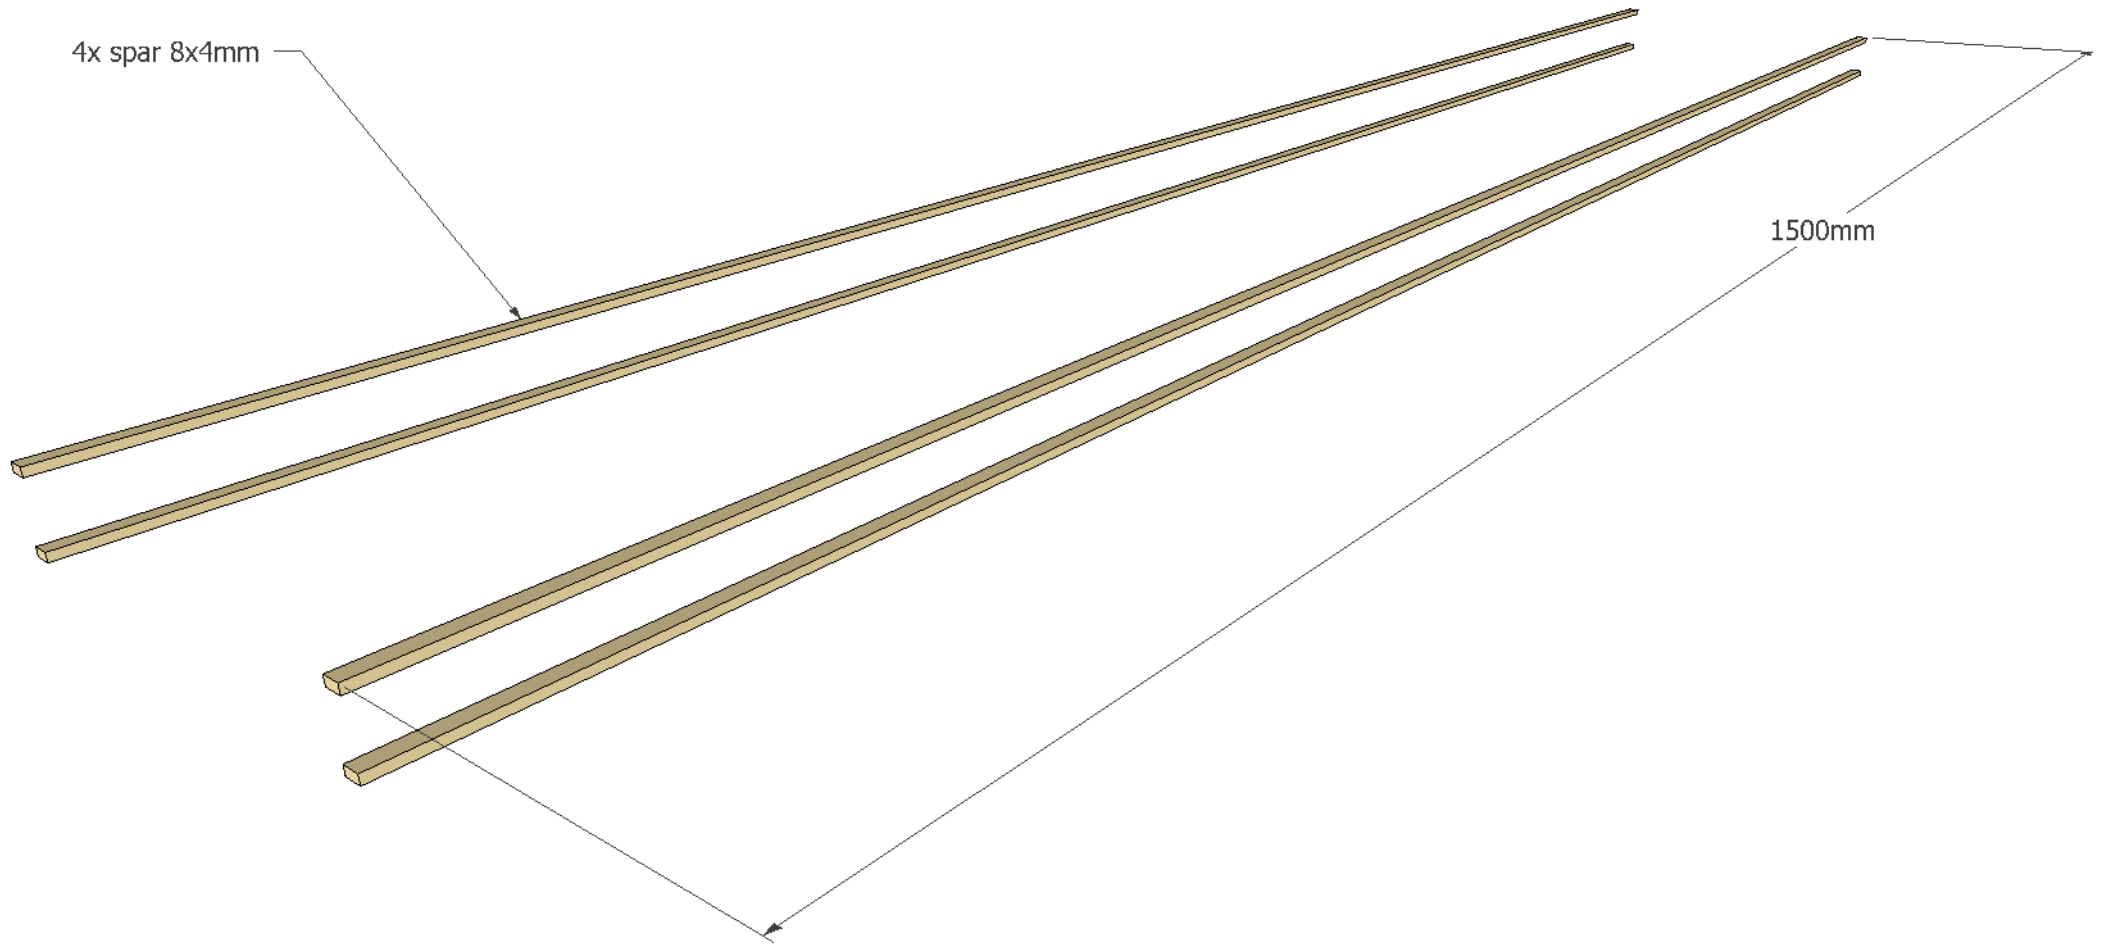


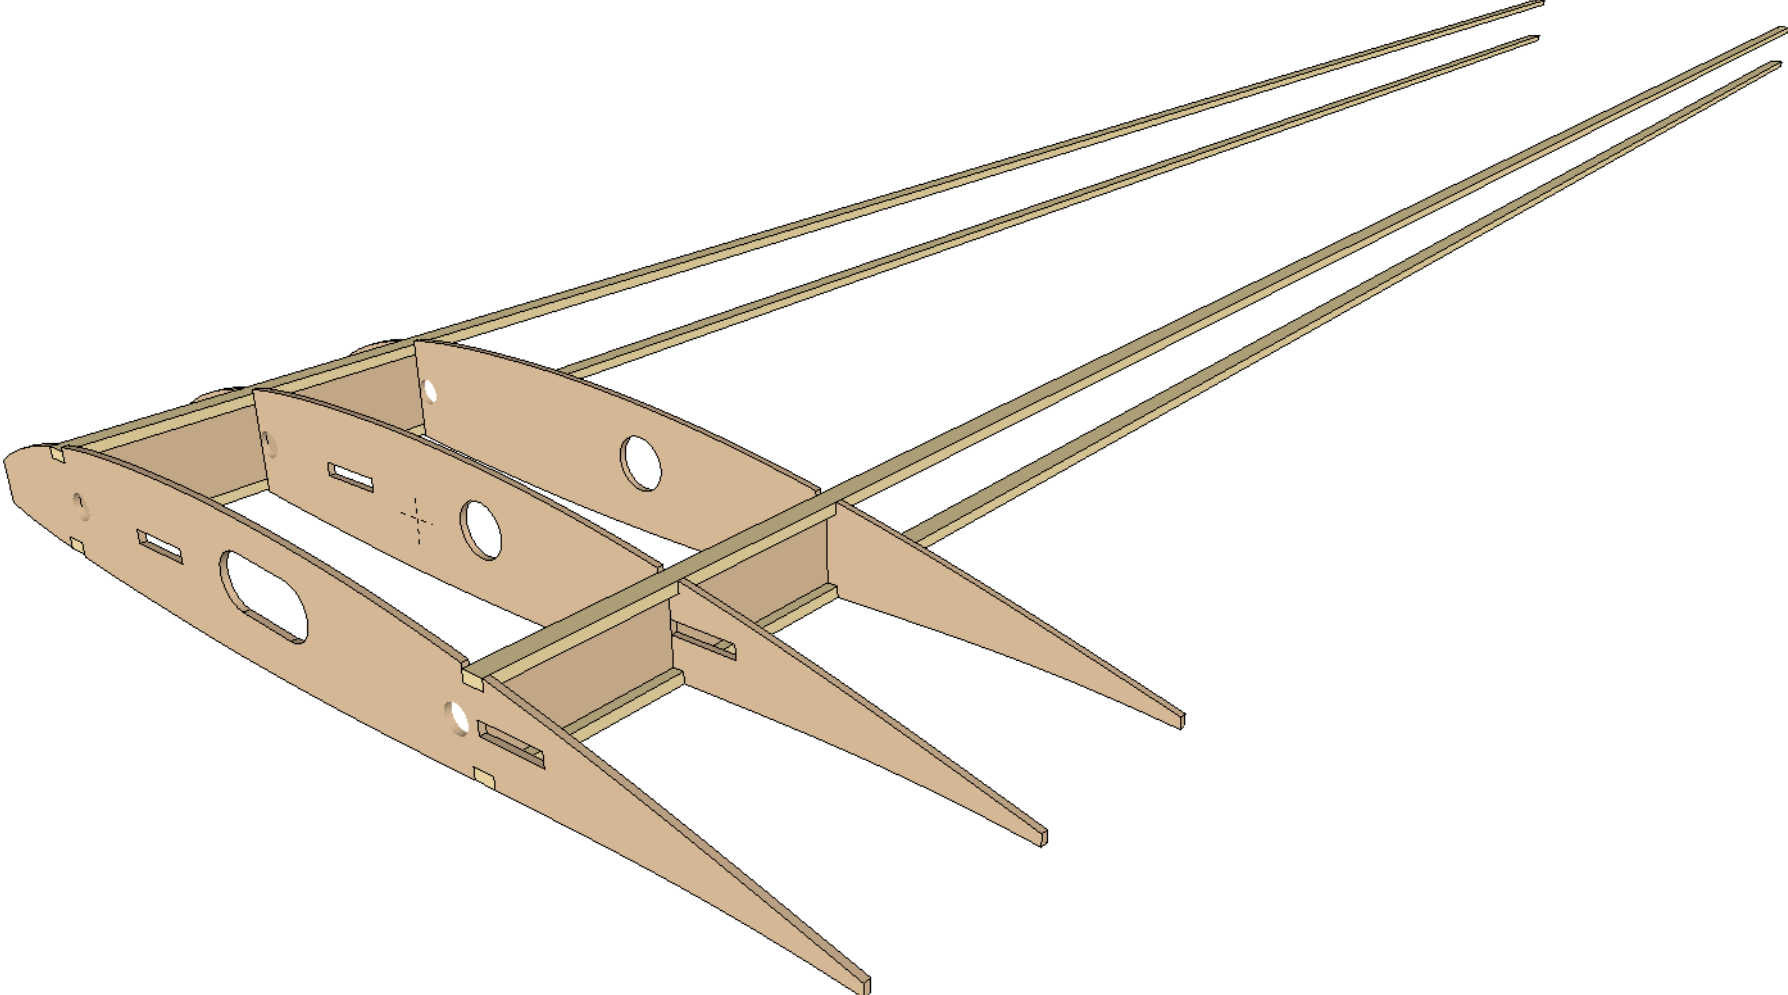


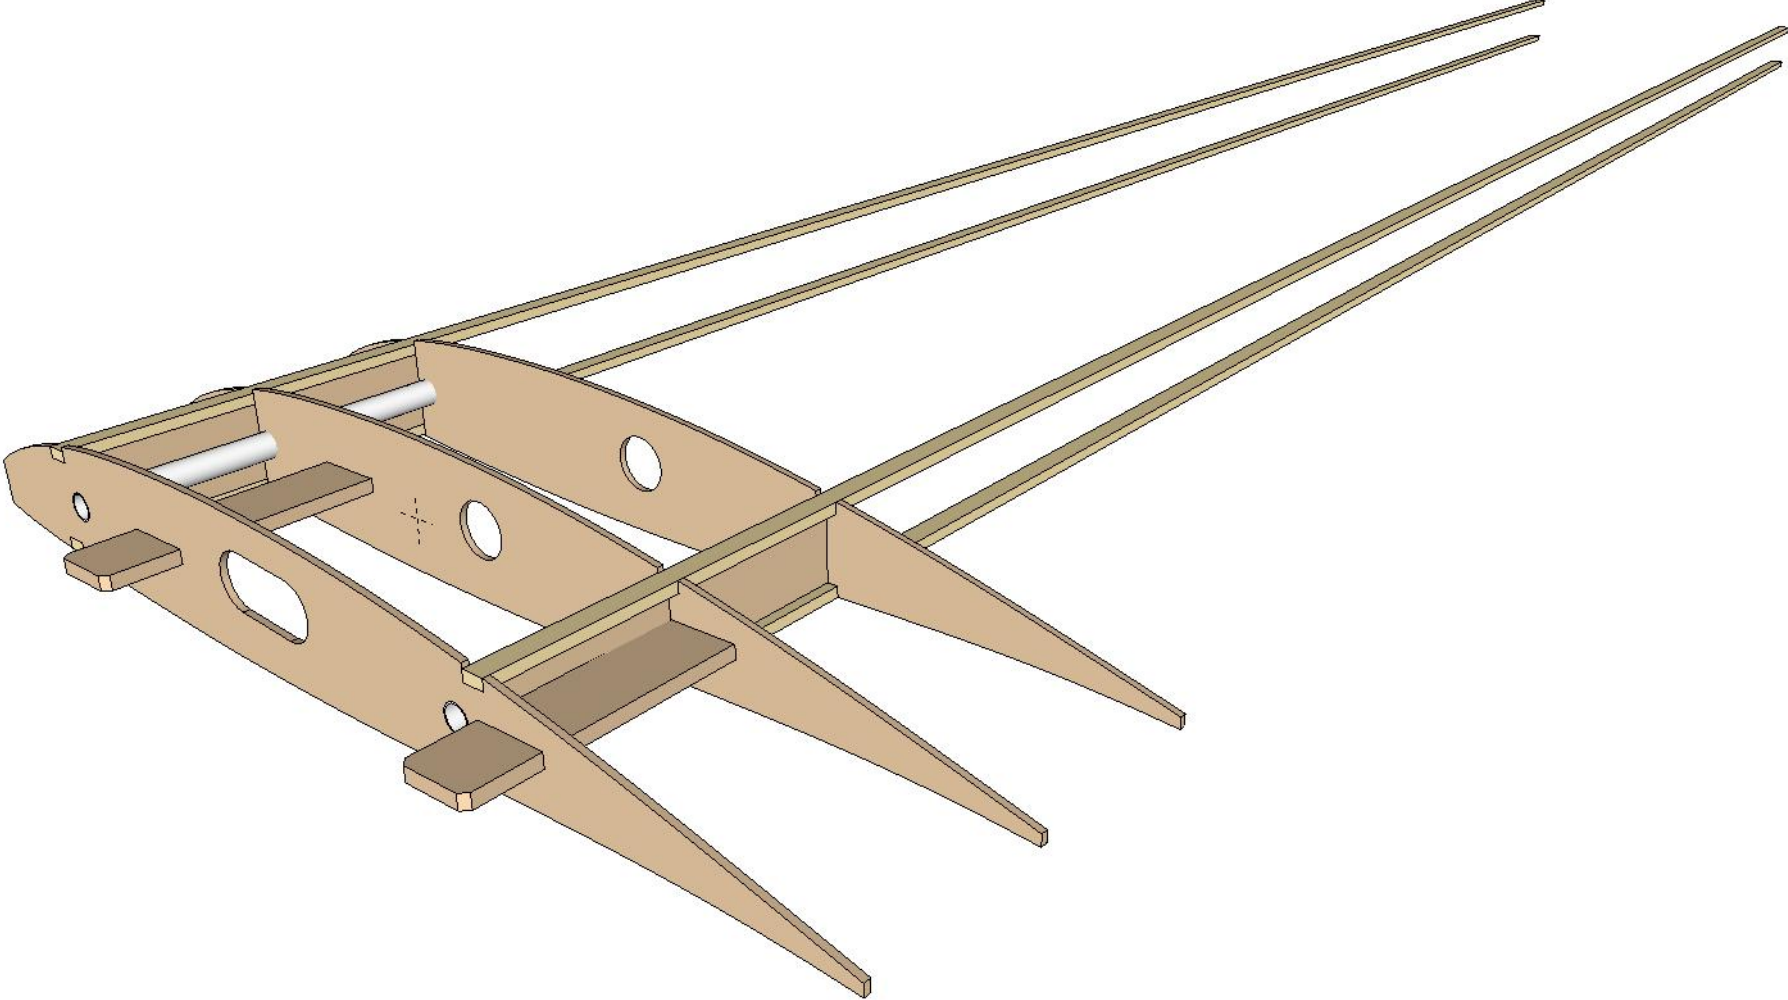


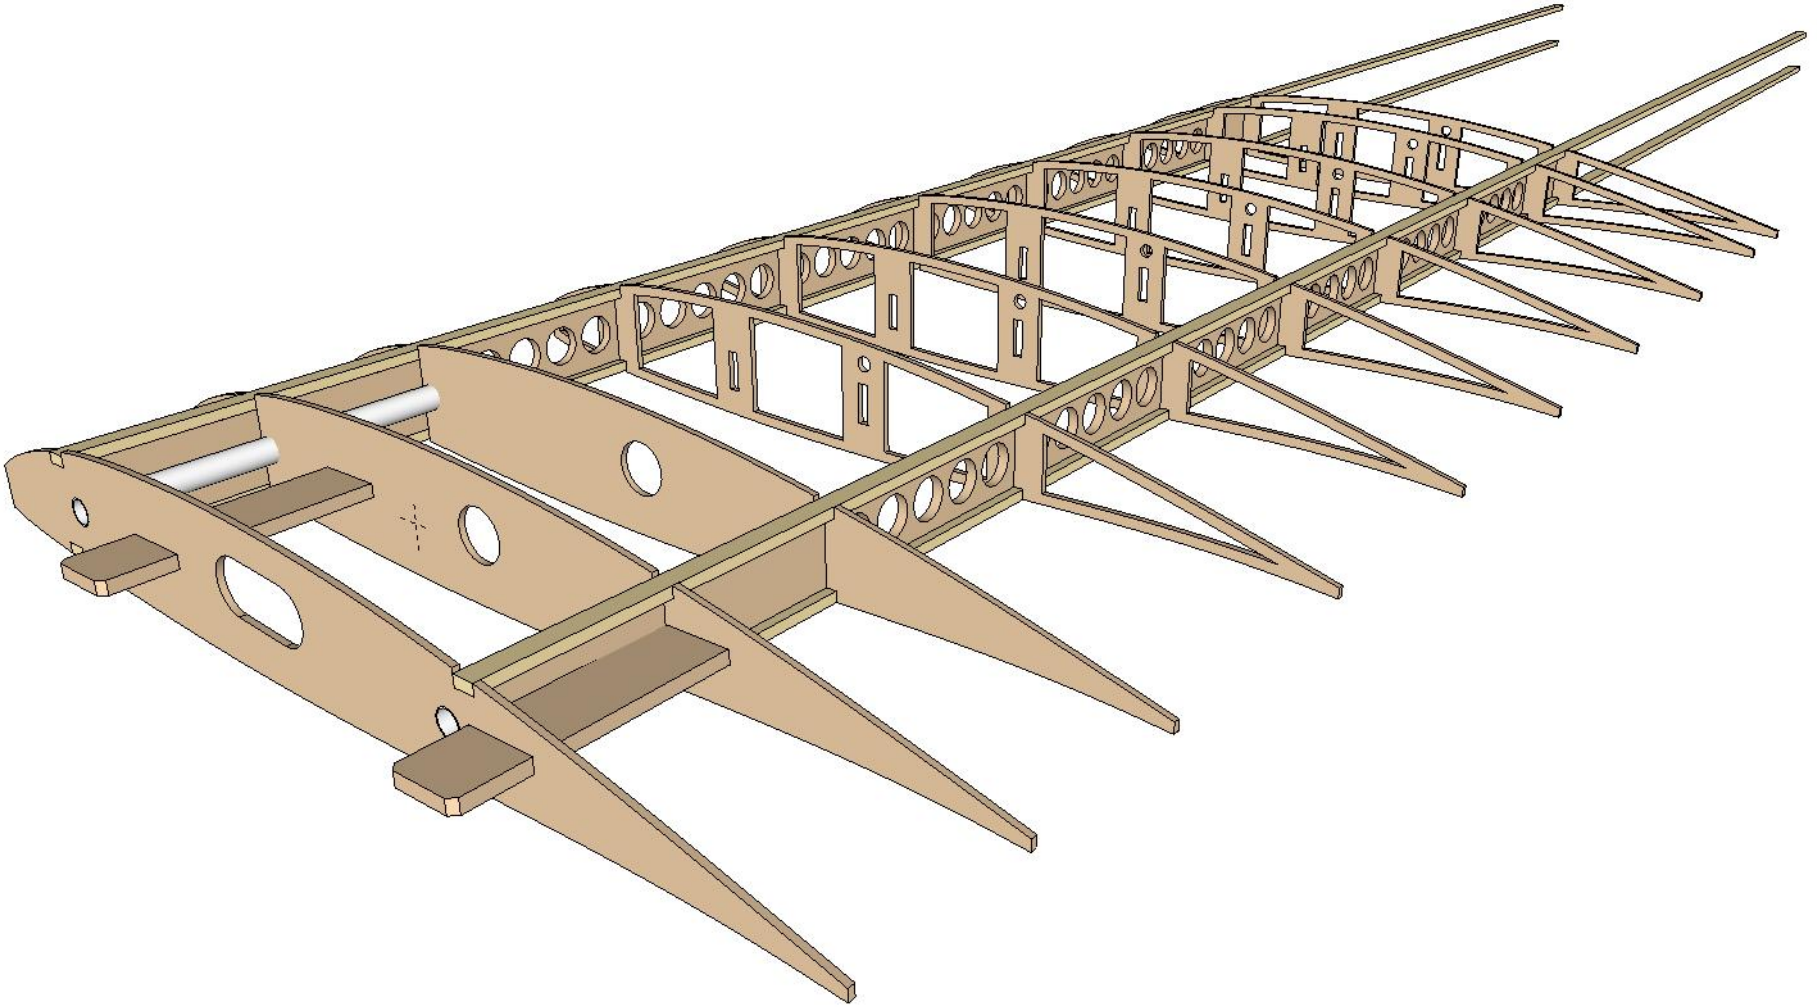




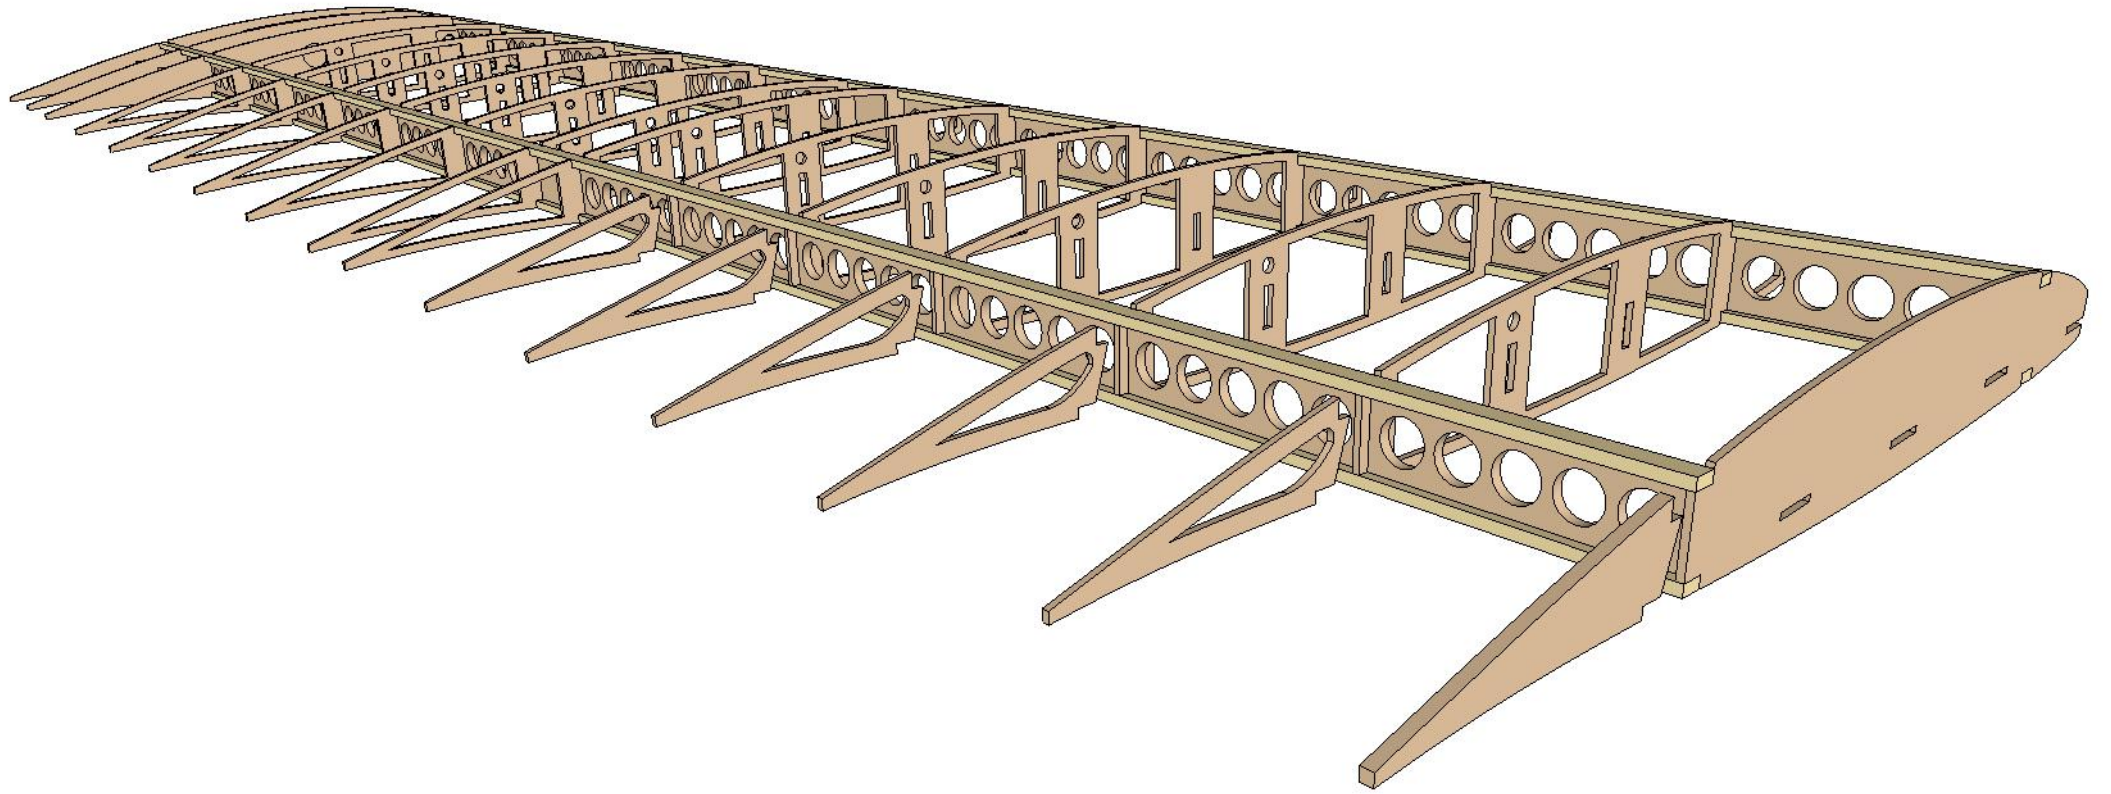


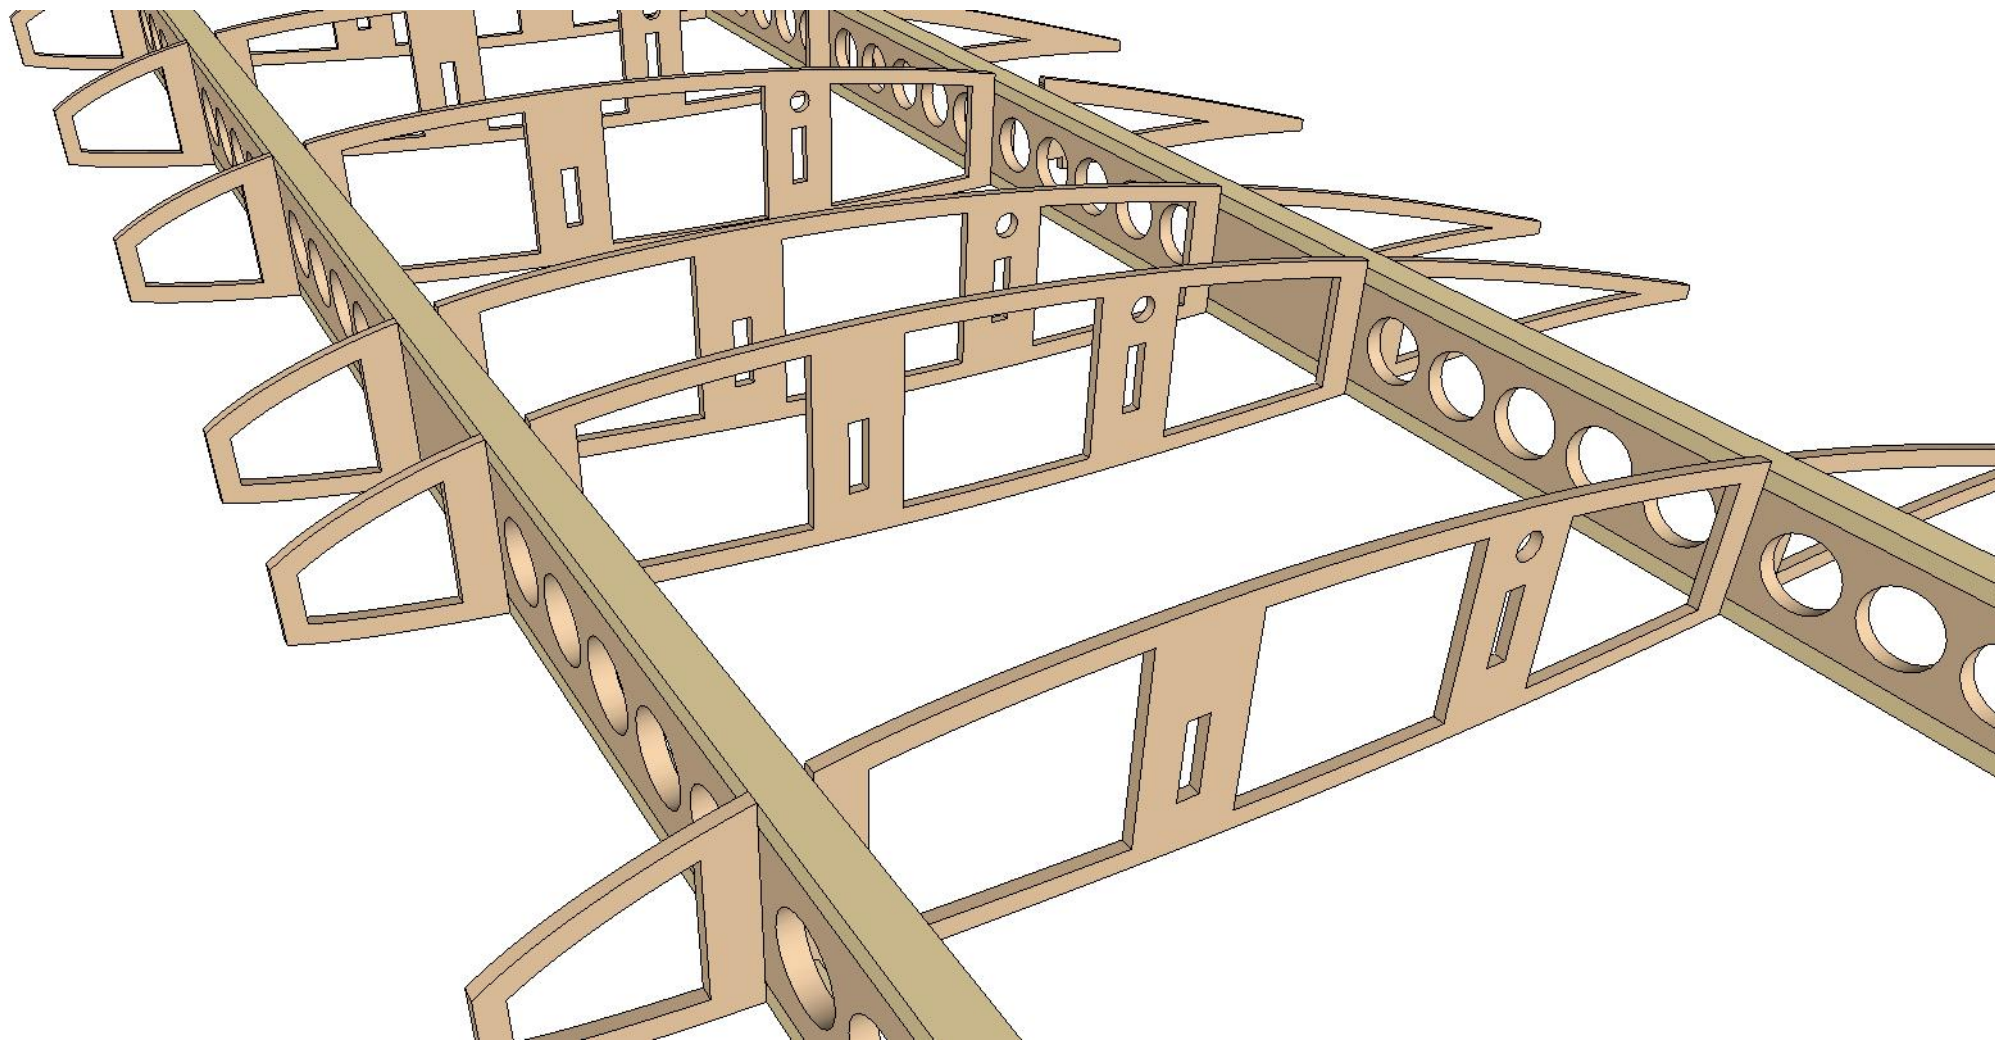


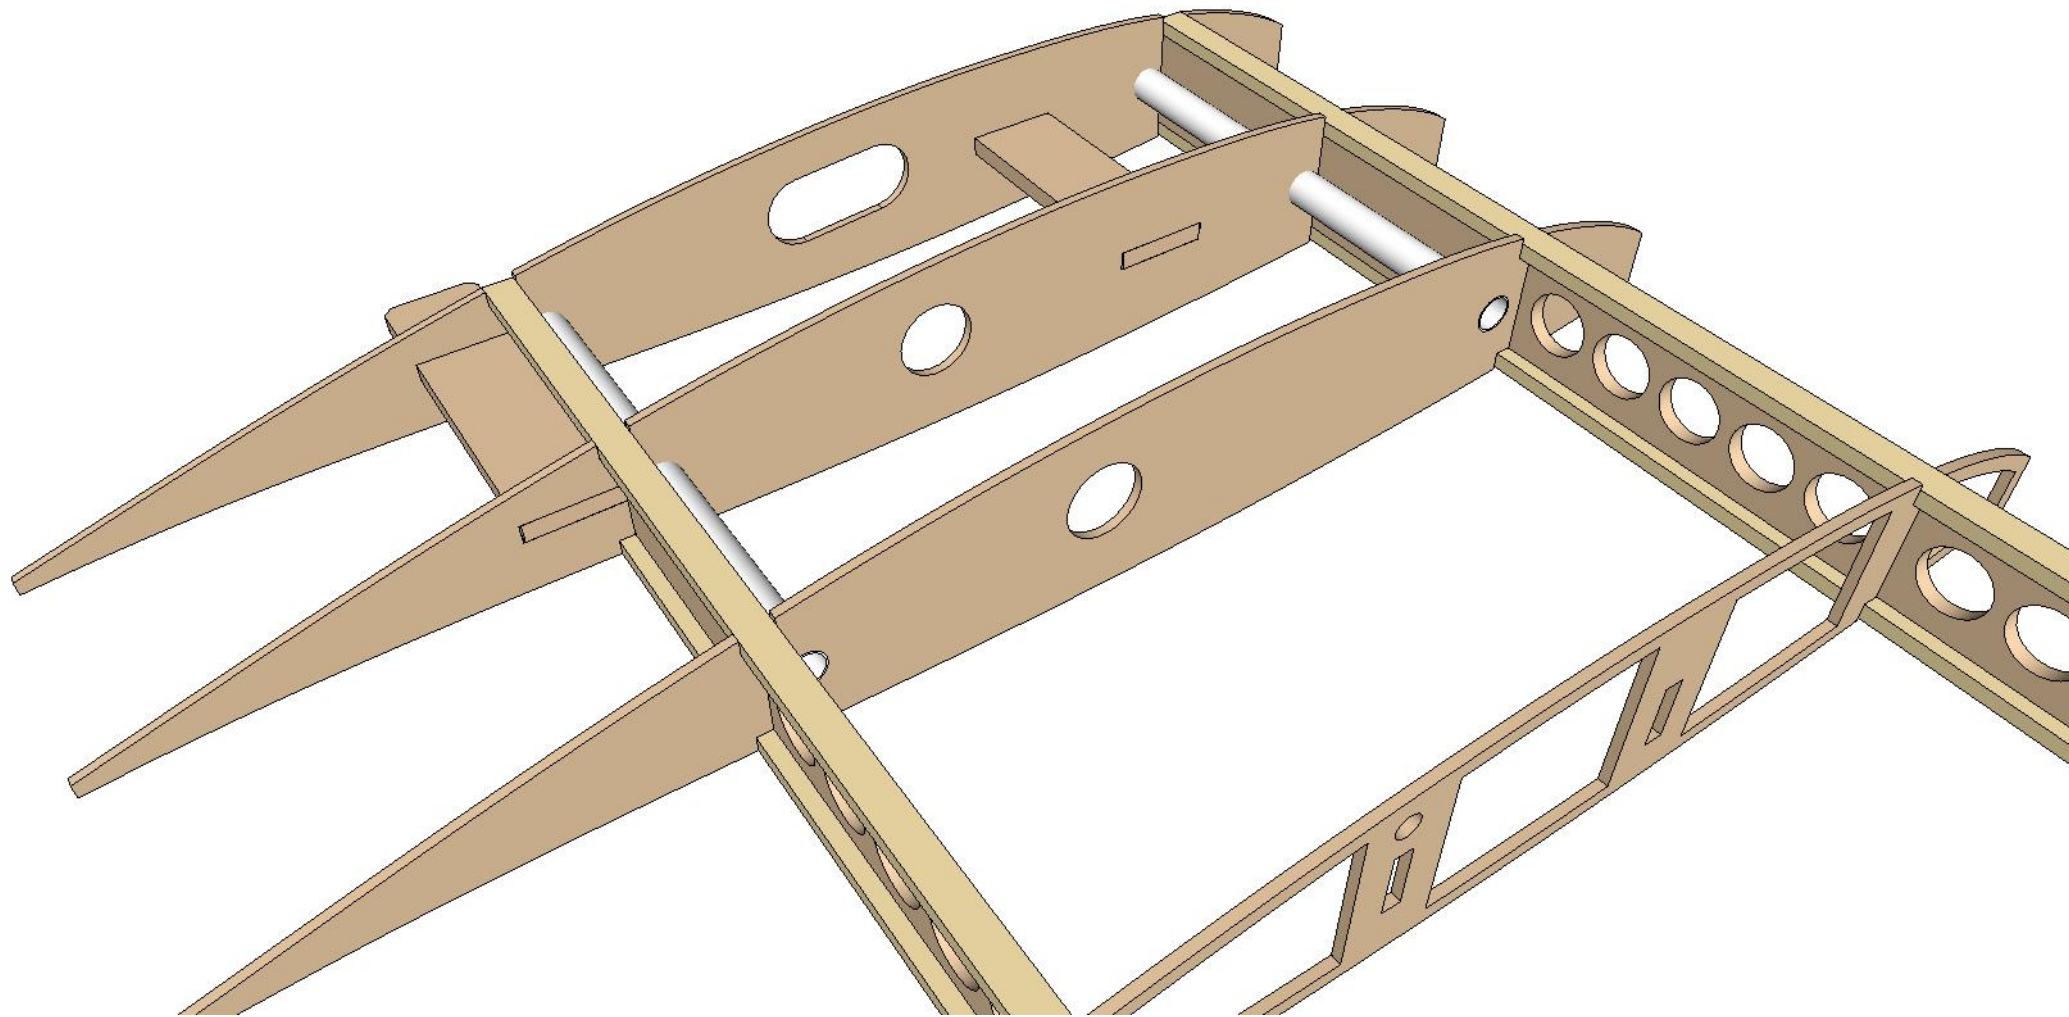




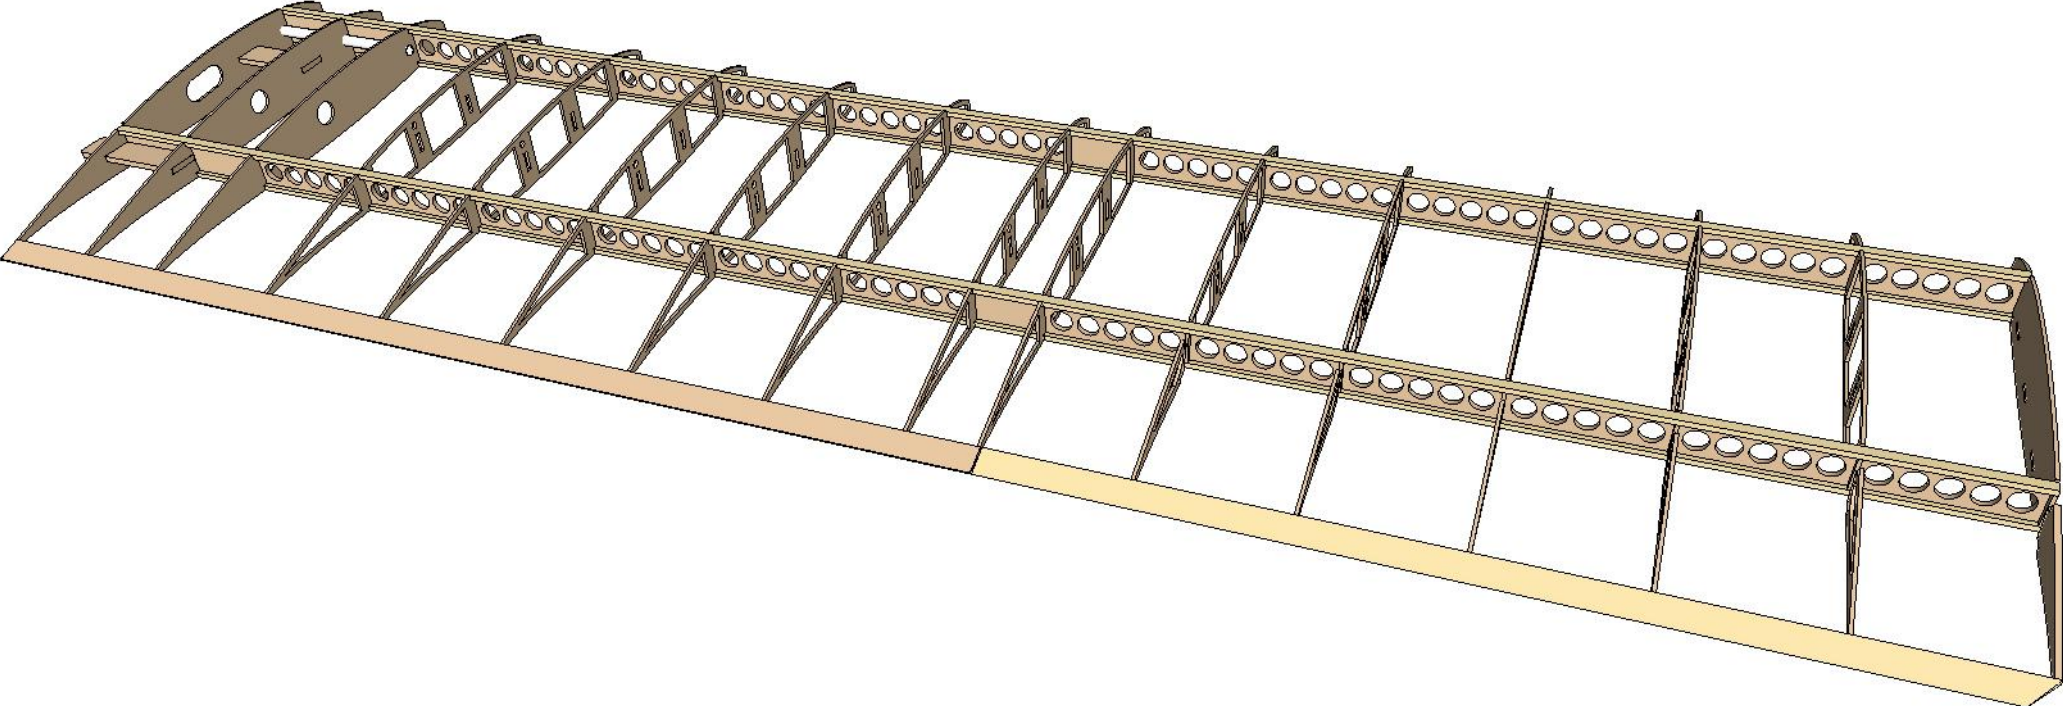

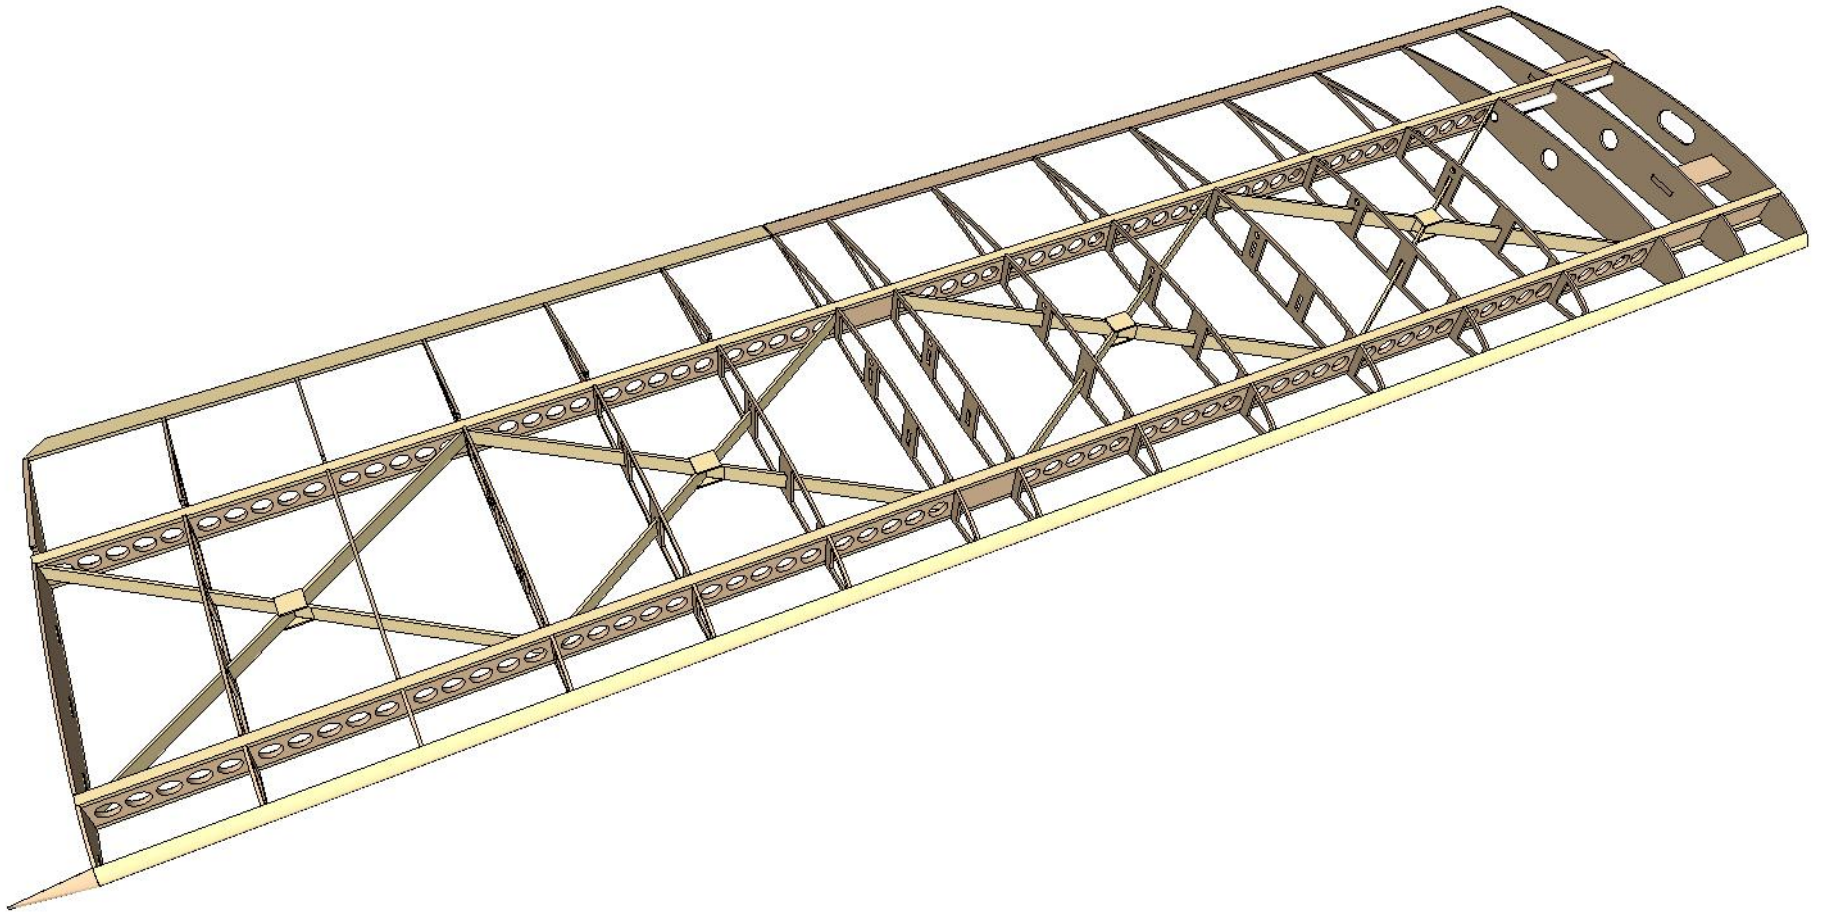


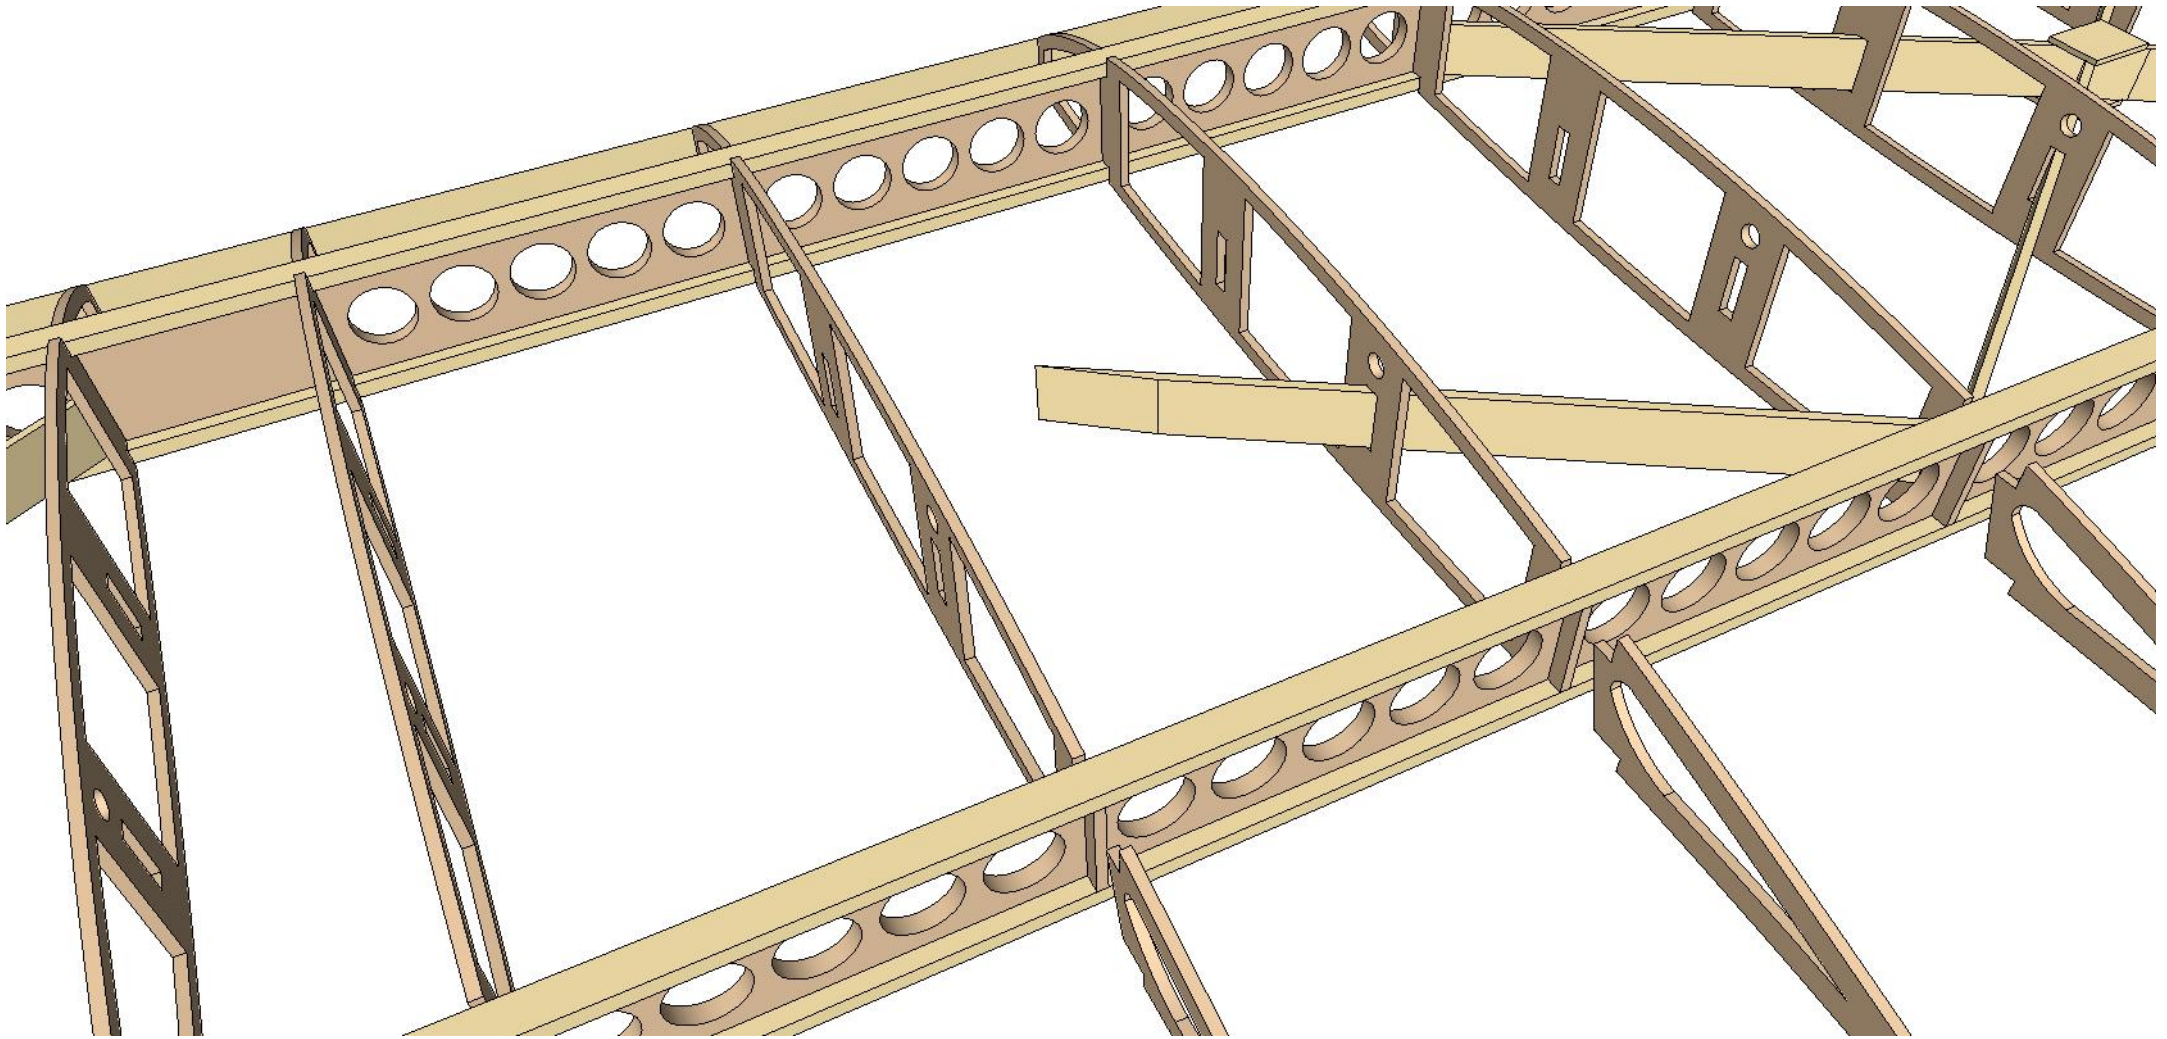




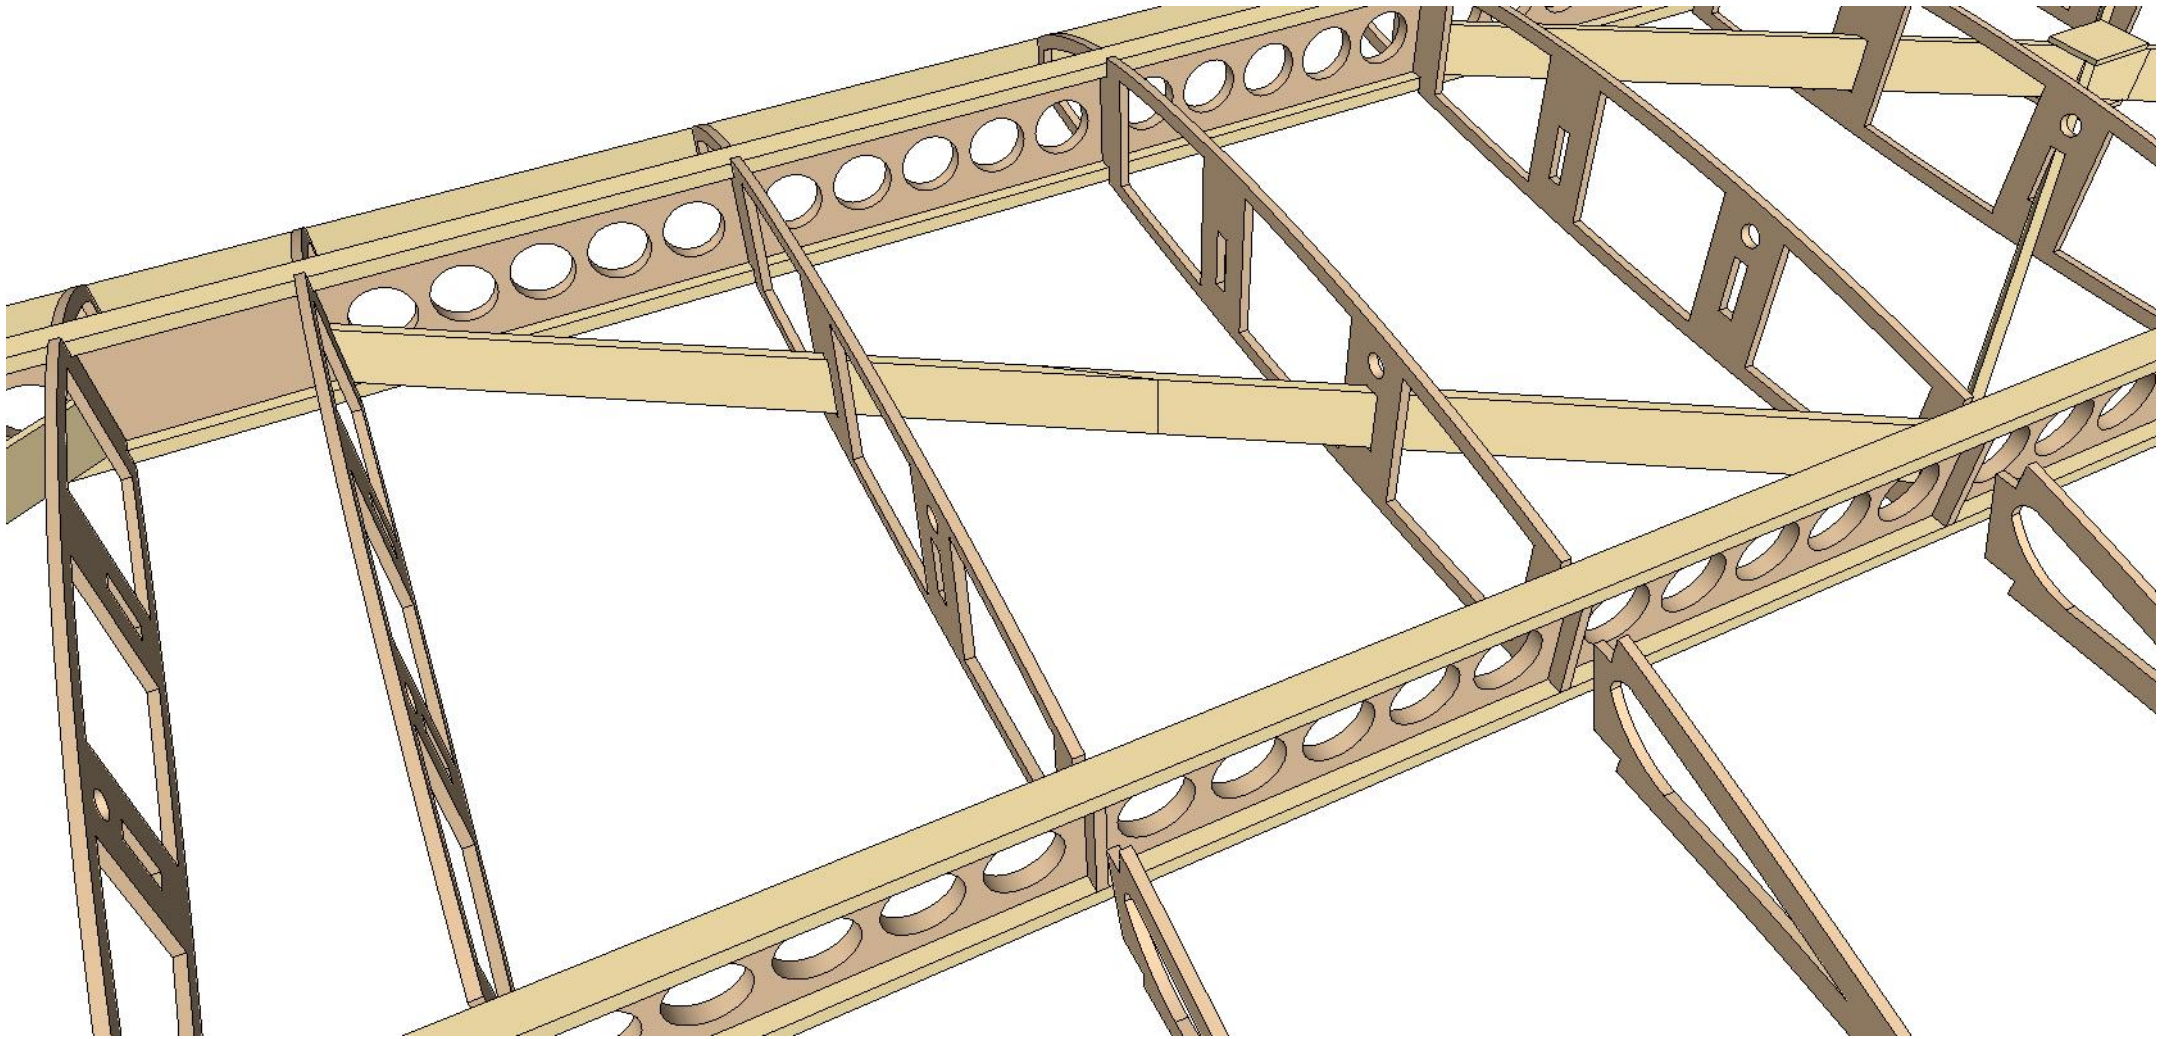





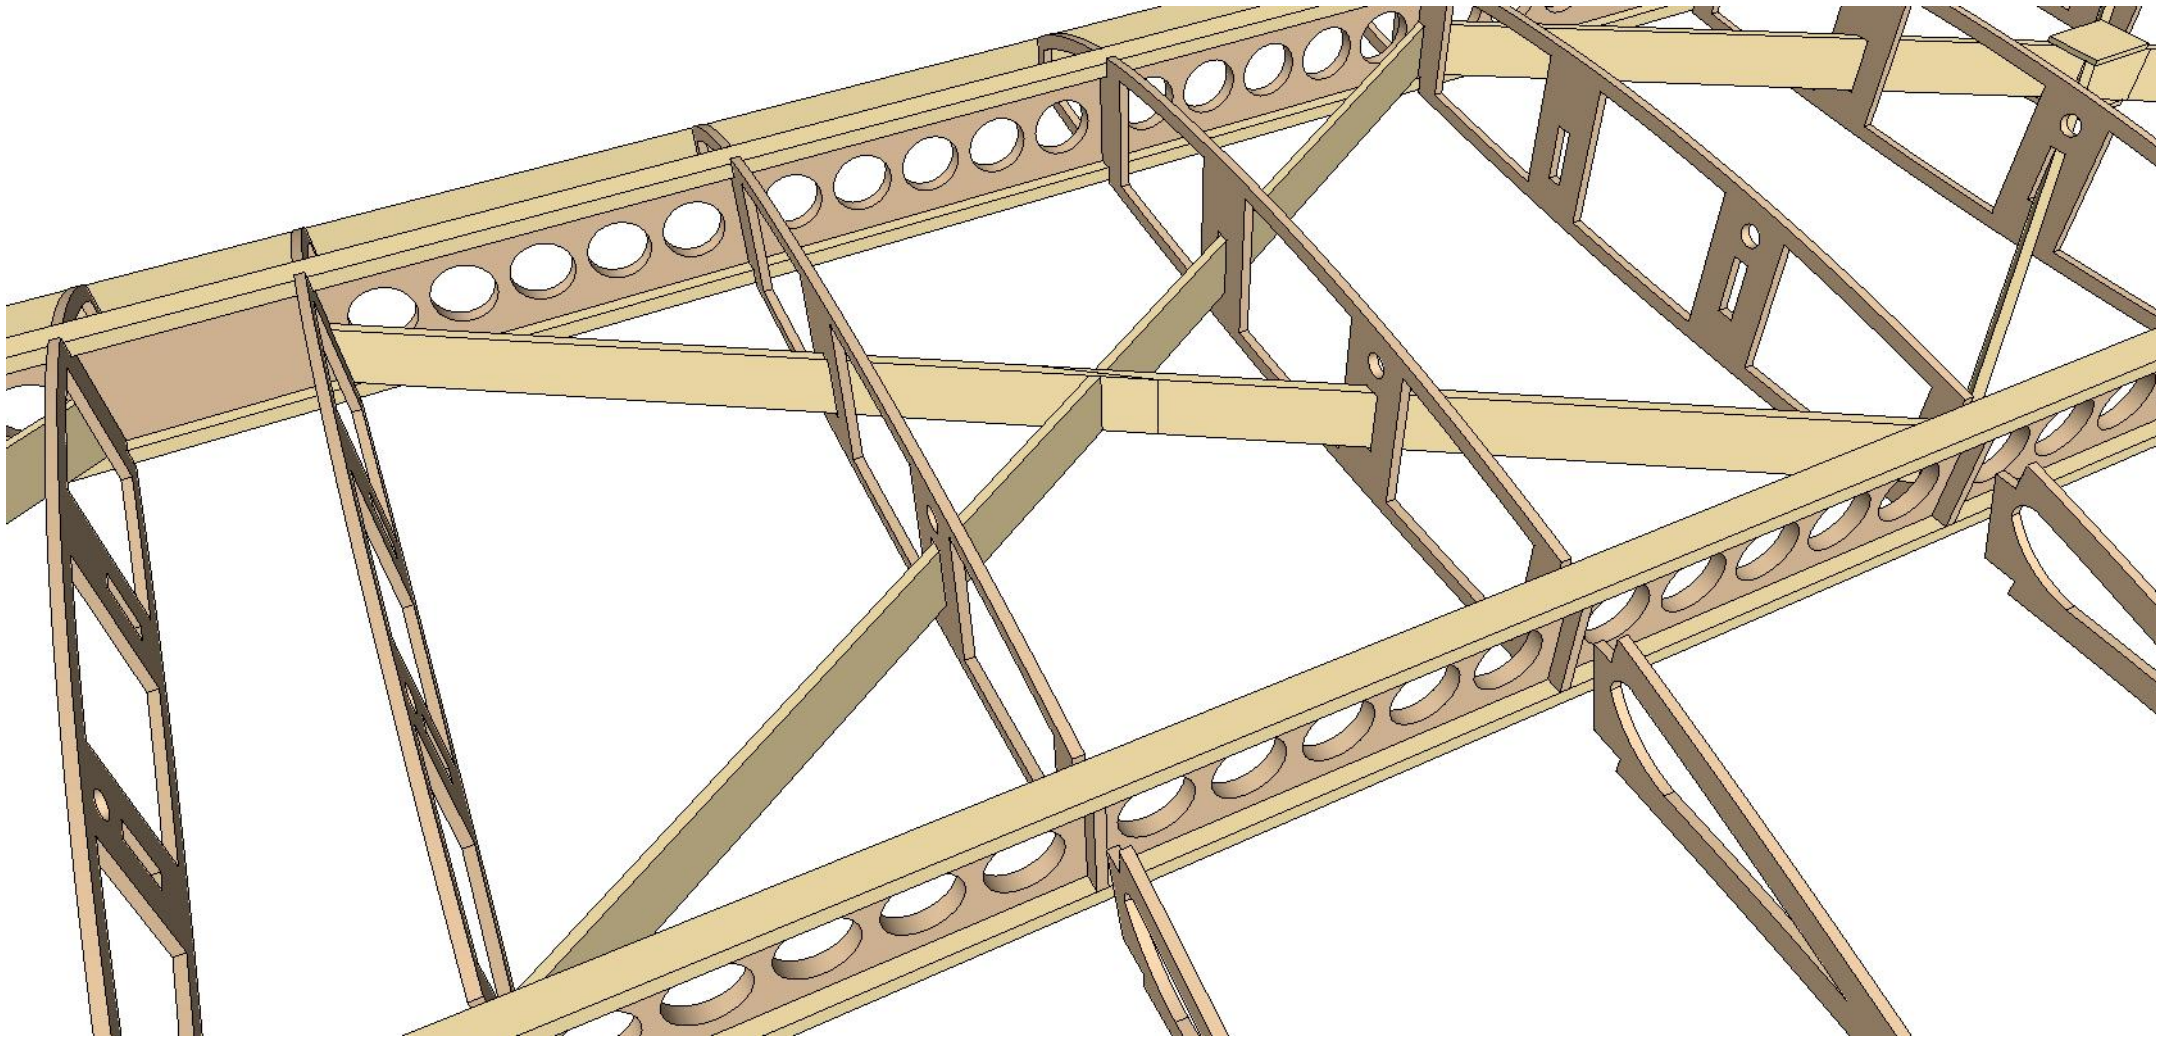

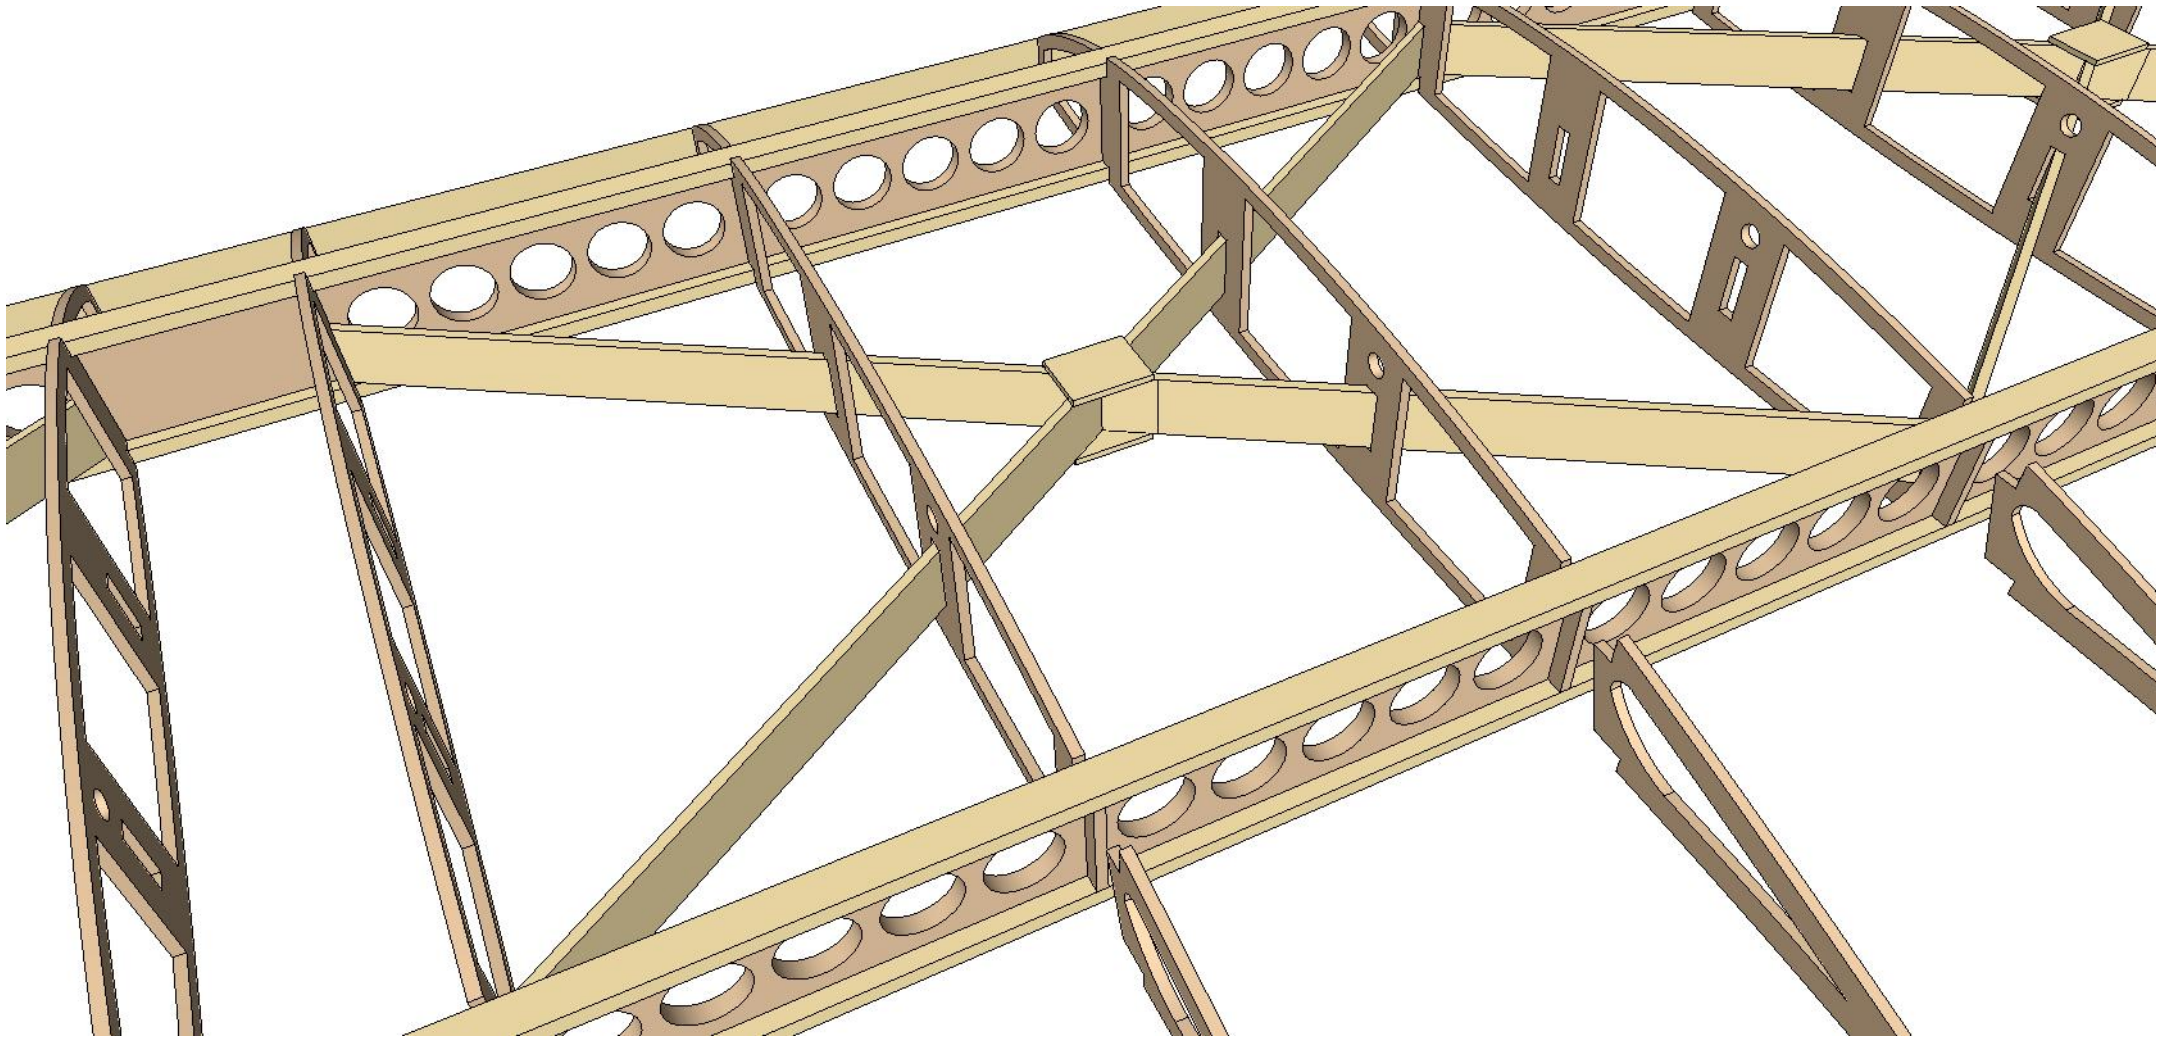





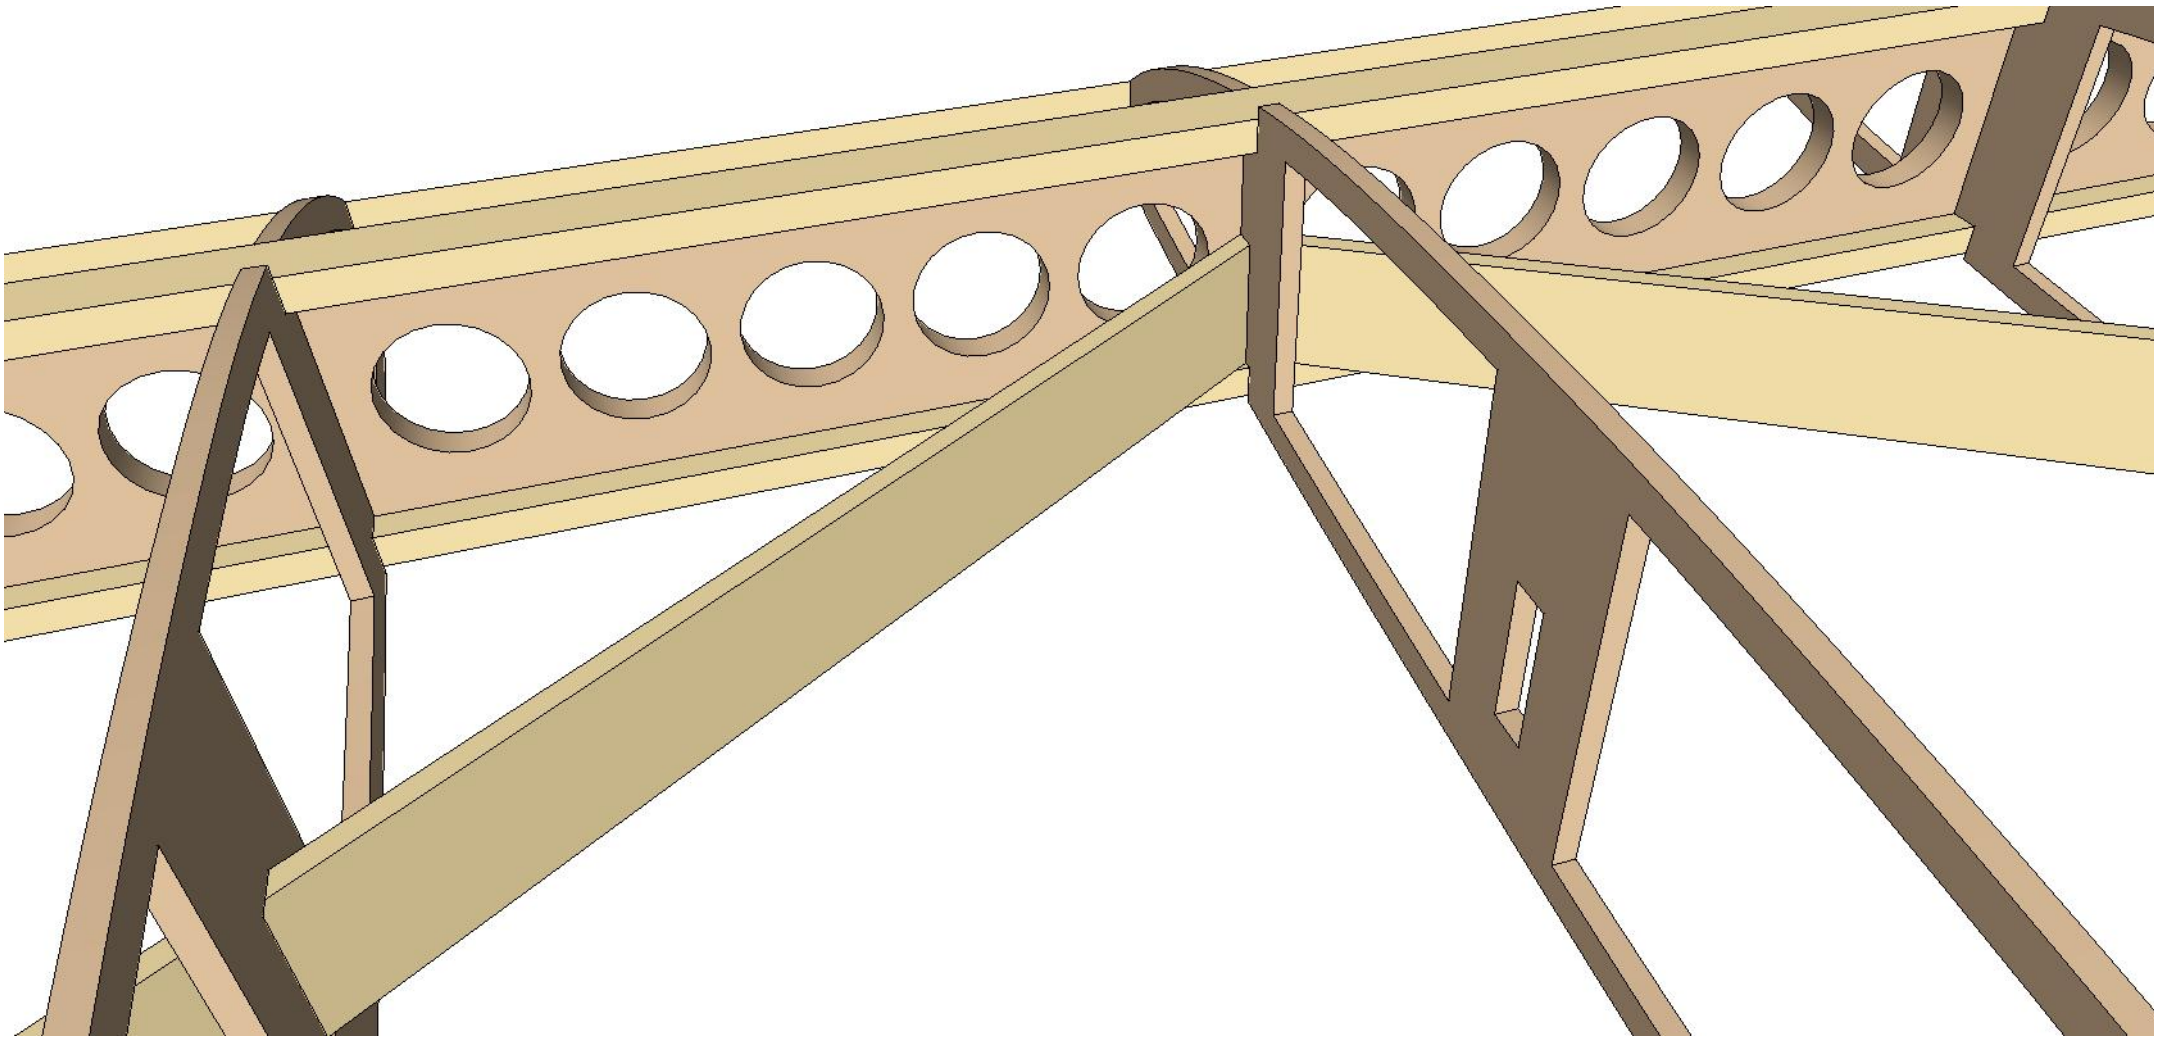

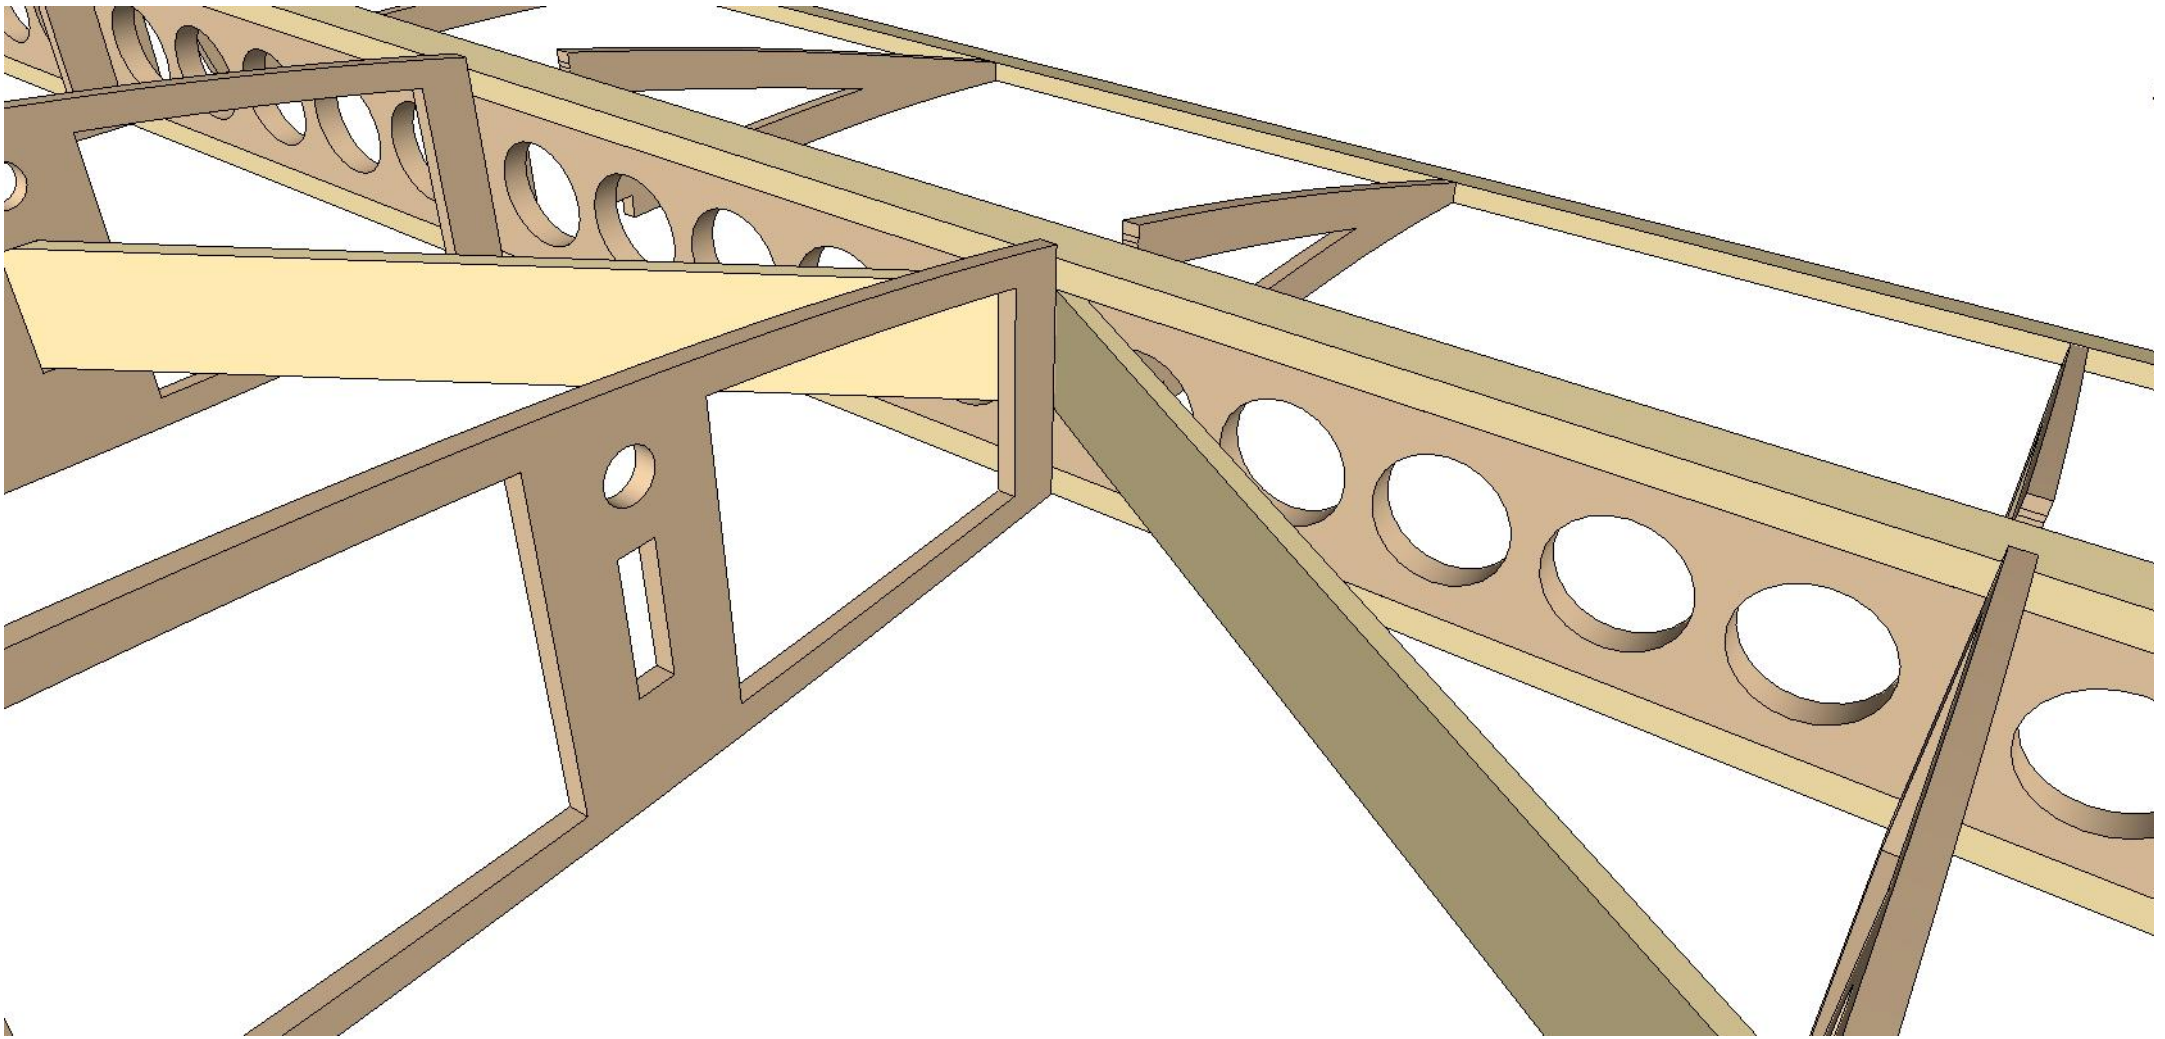




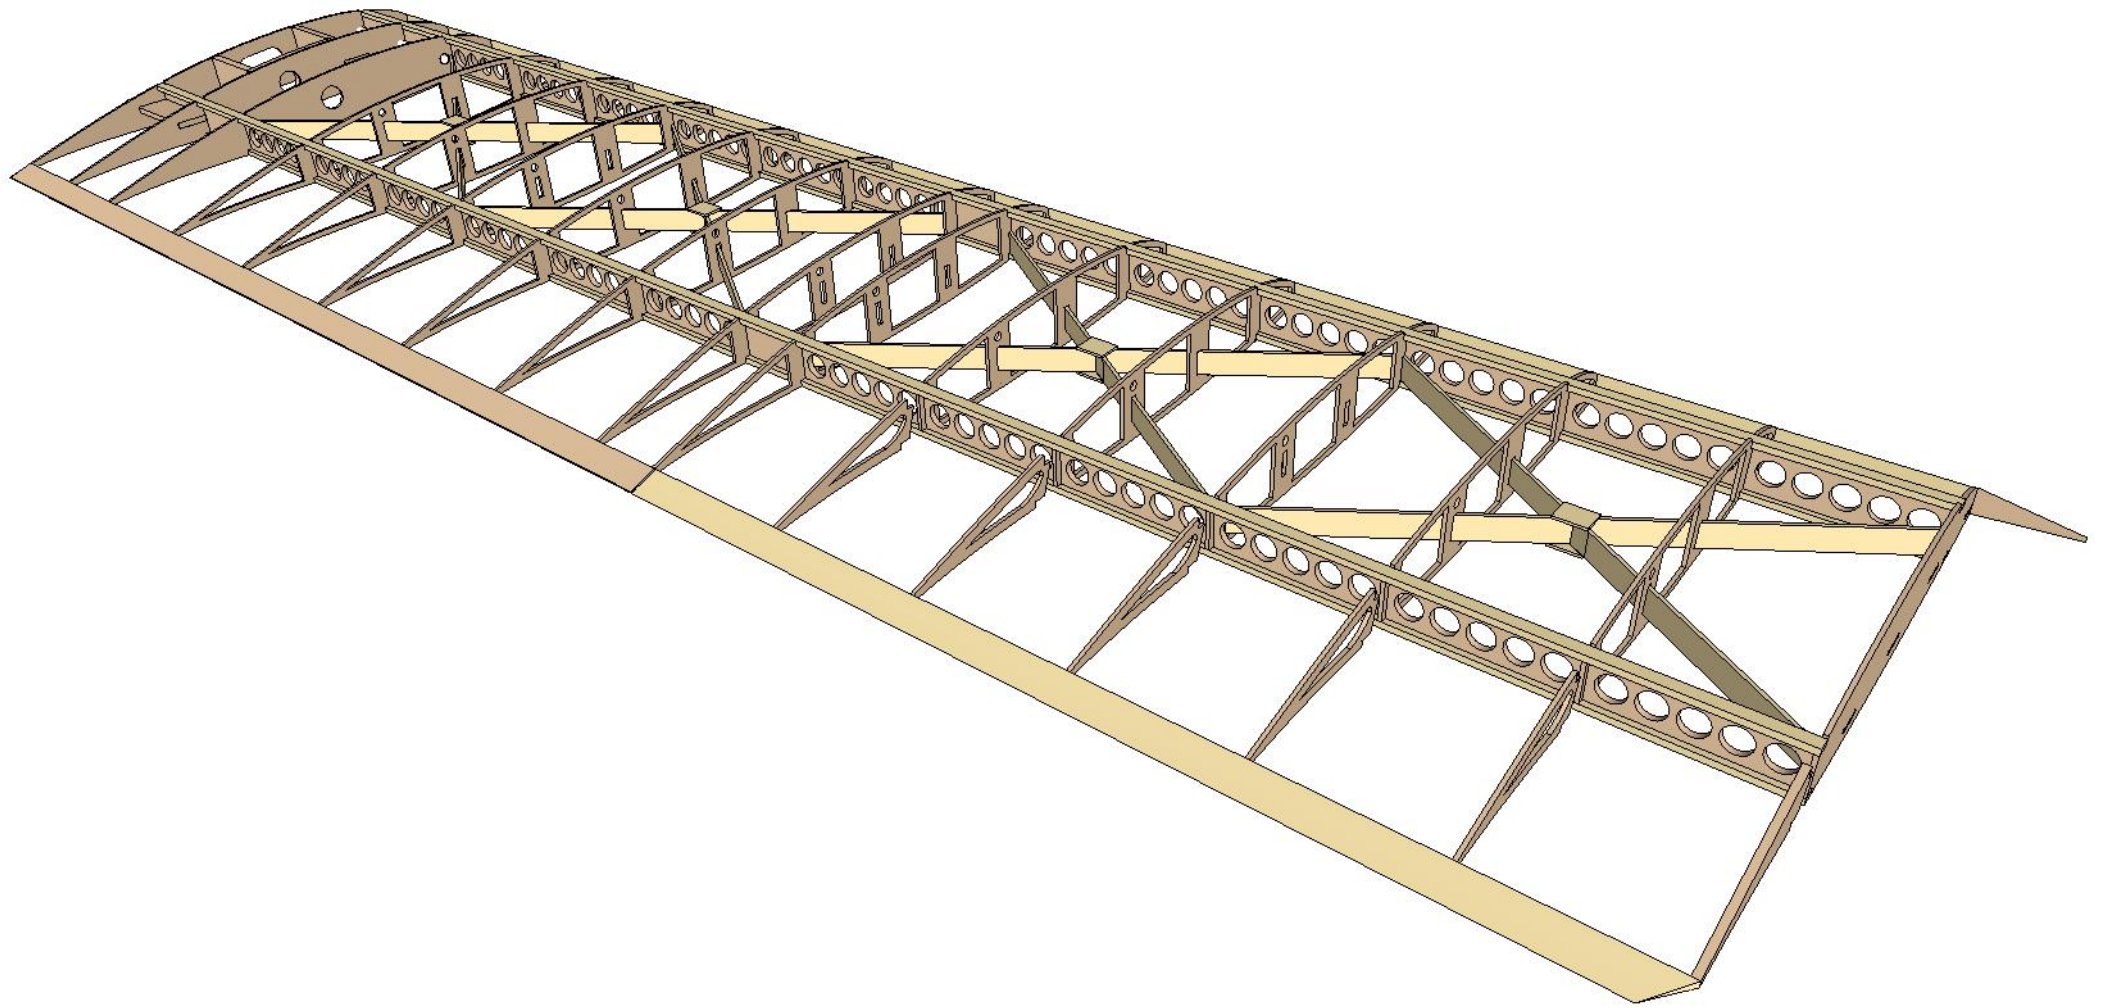

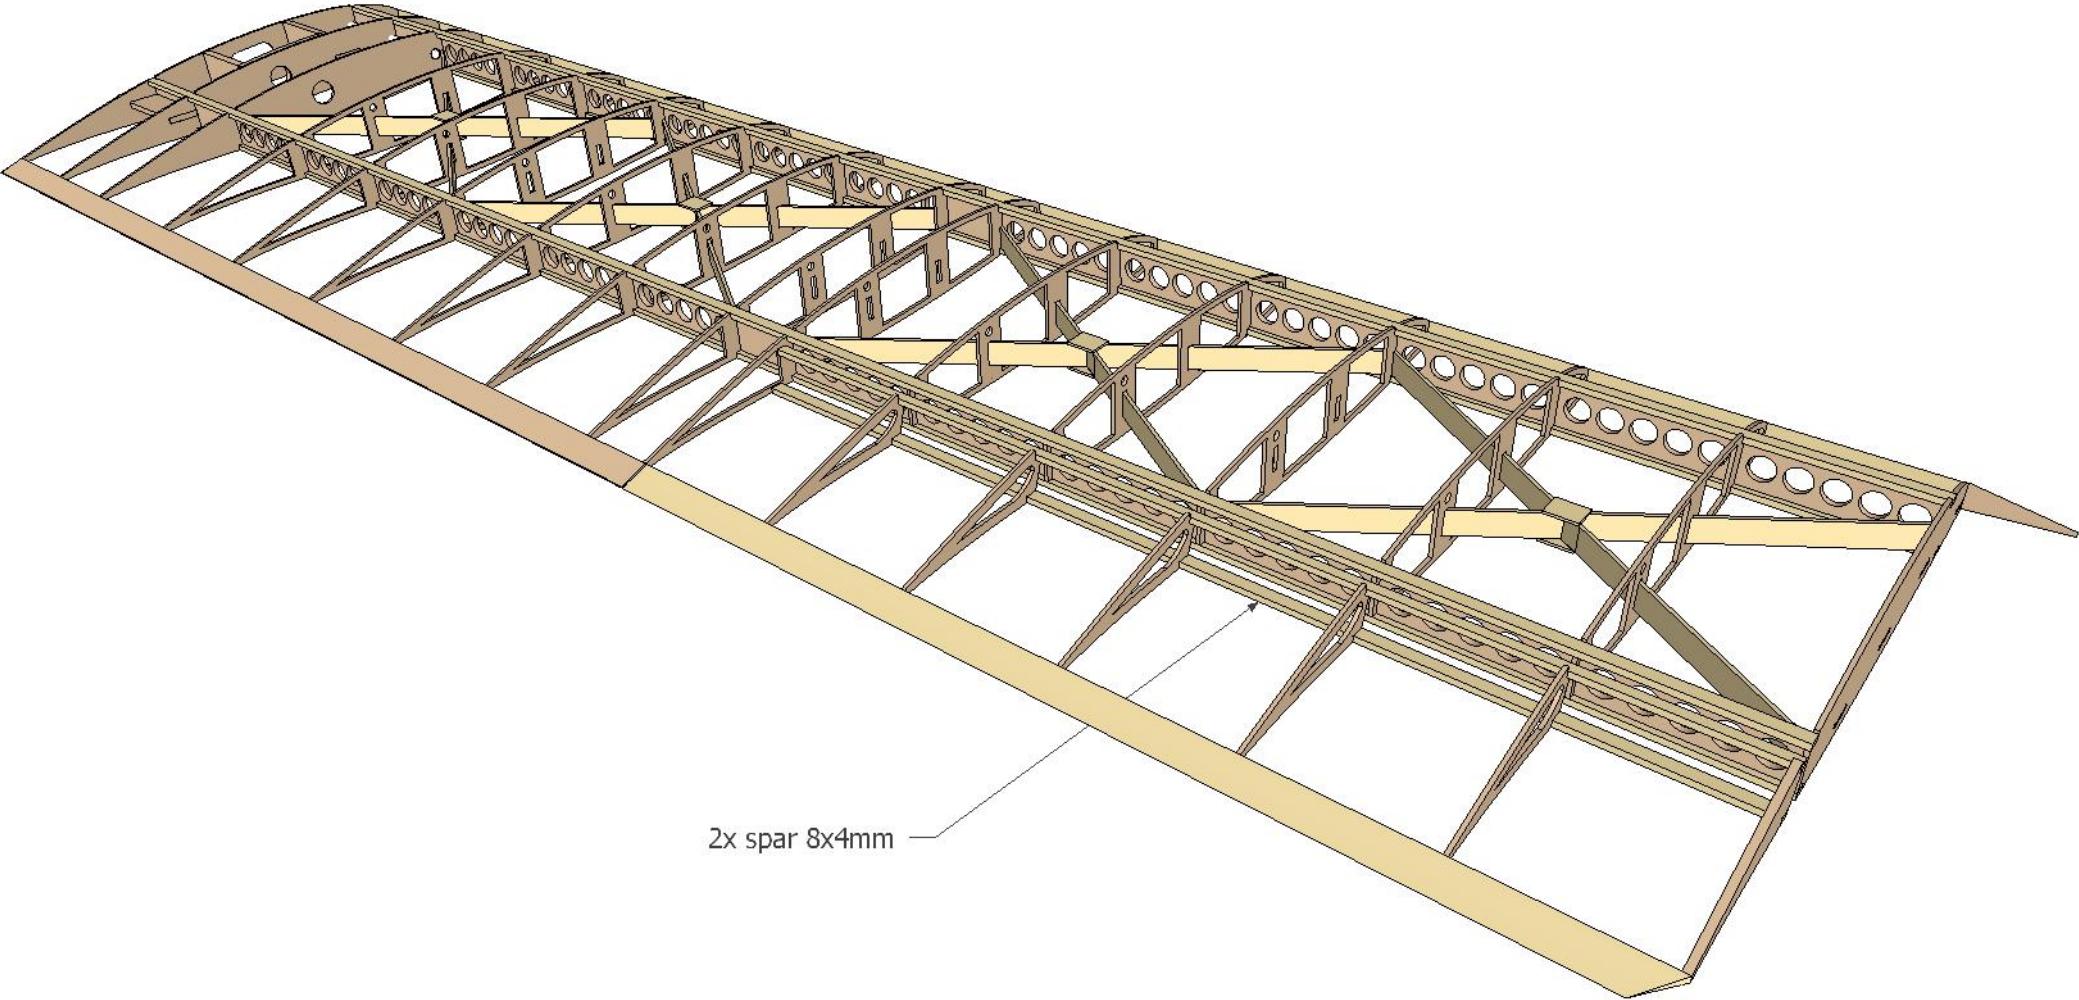


2x spar 8x4mm

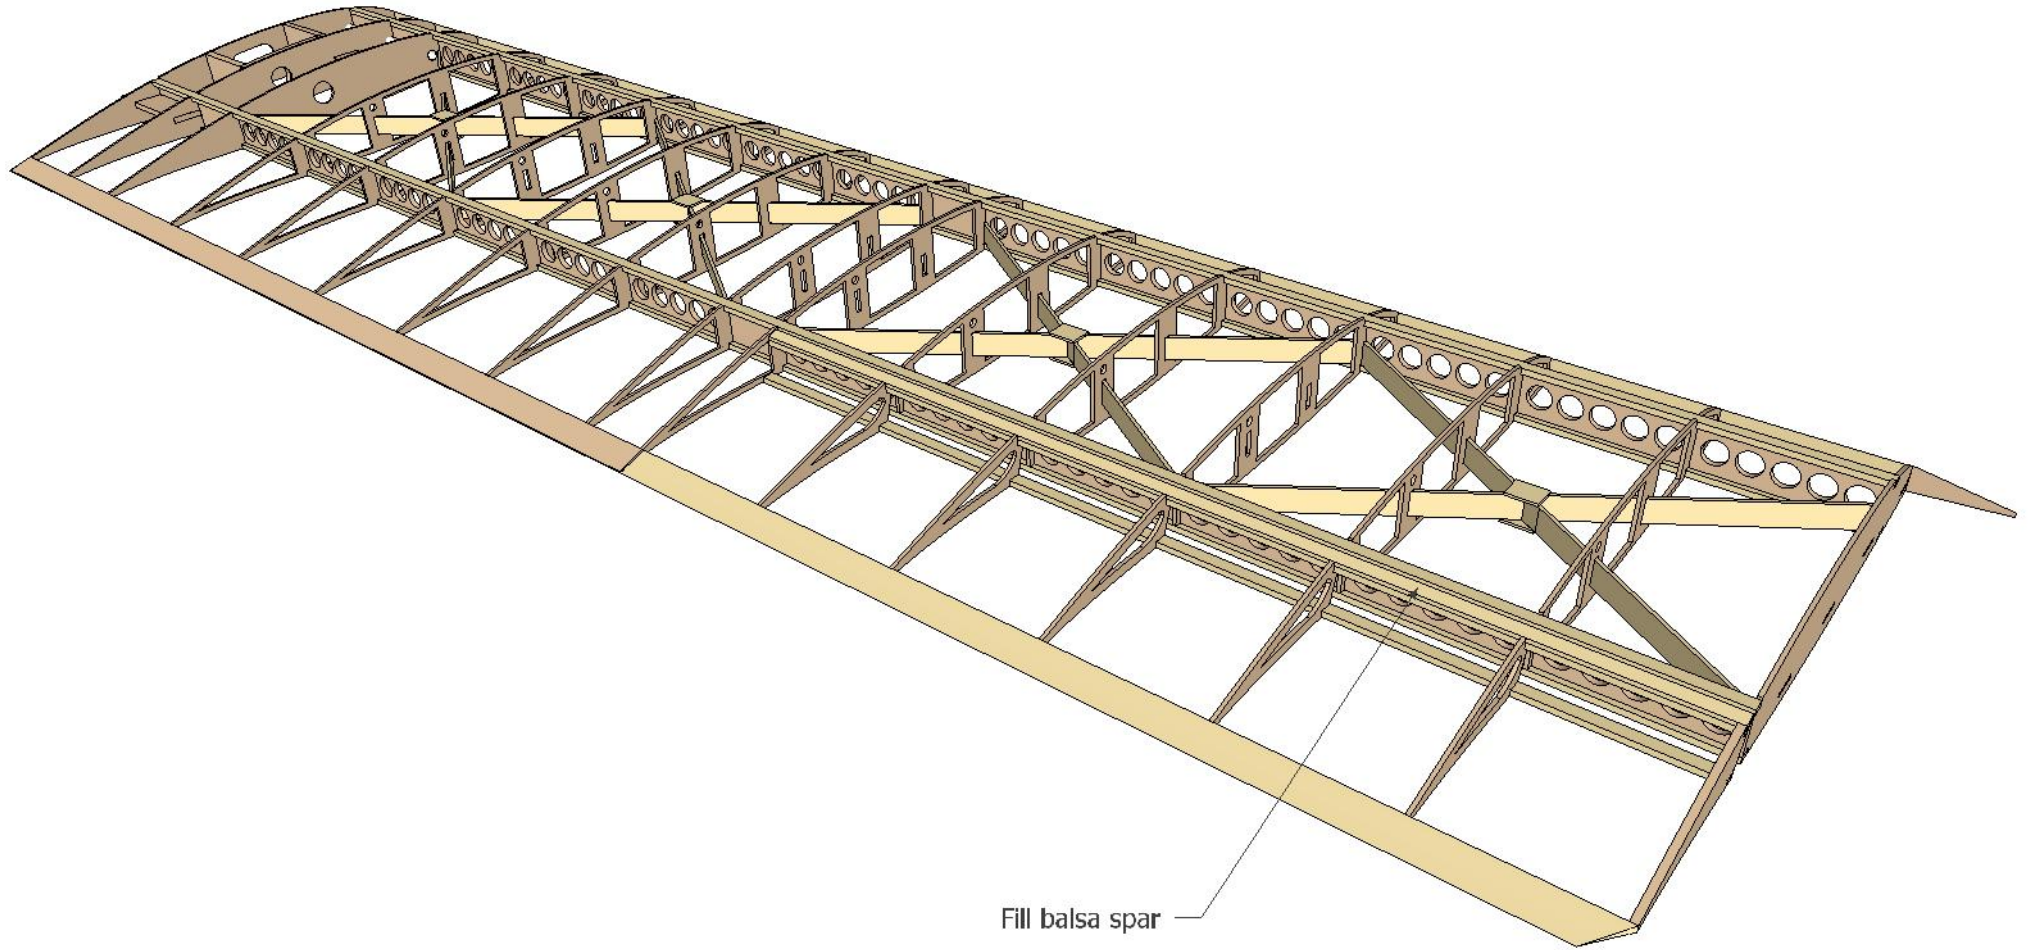



Fill balsa spar



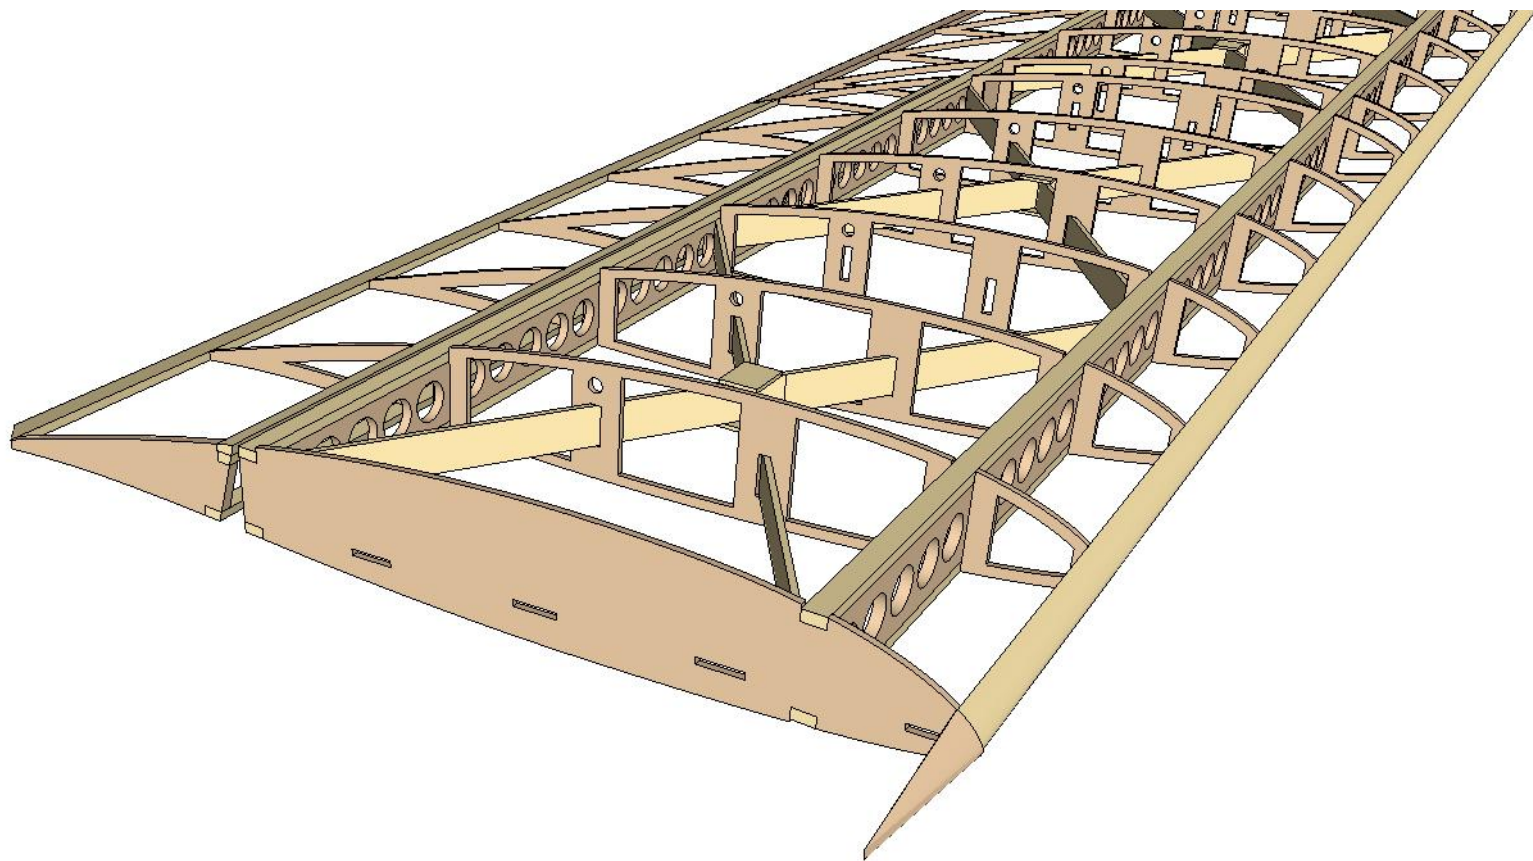




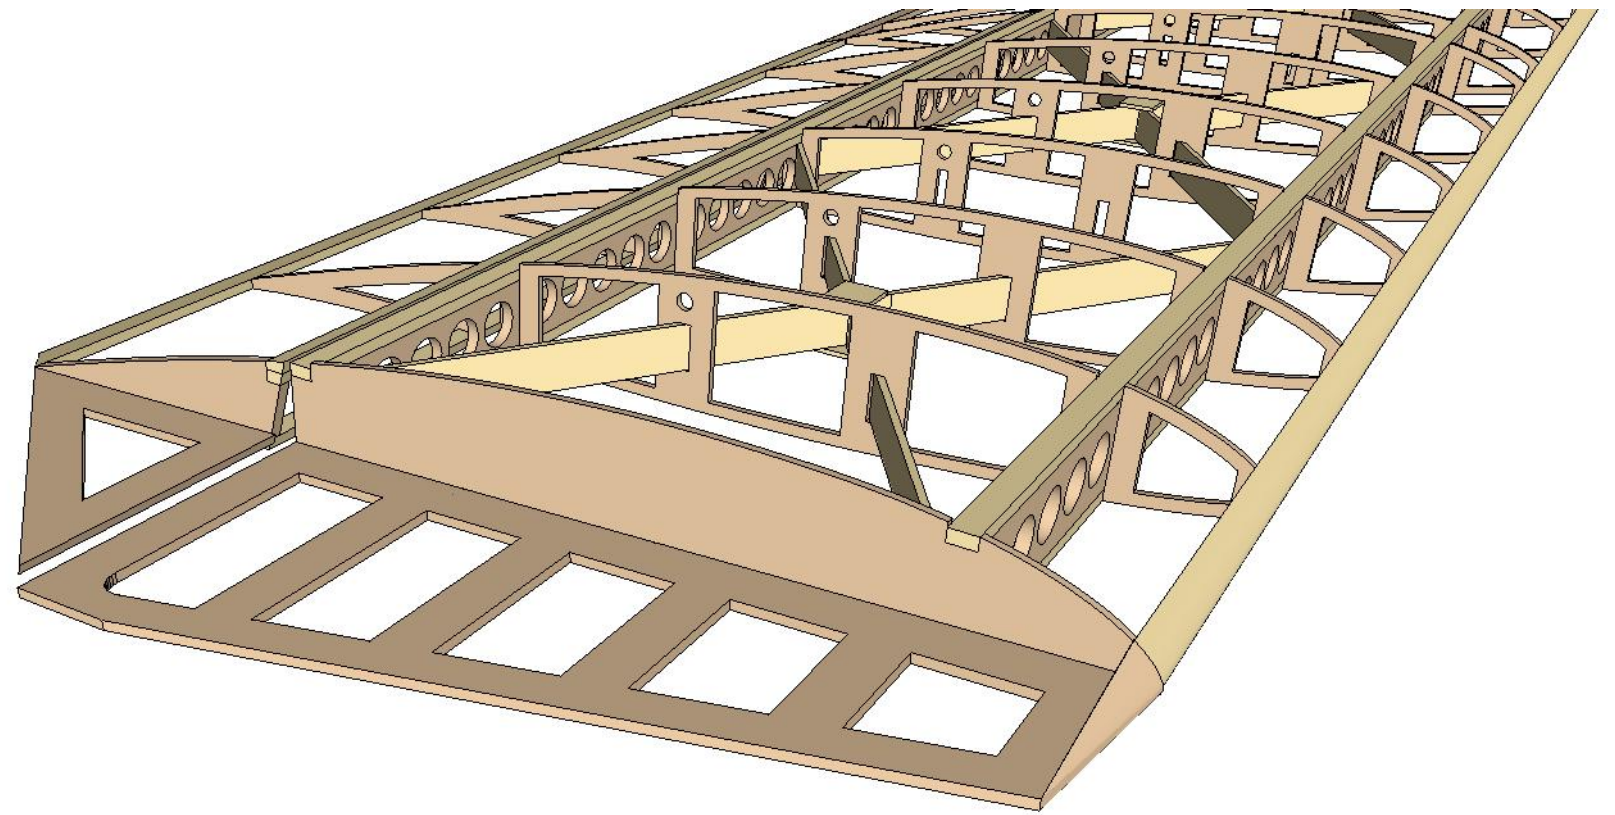

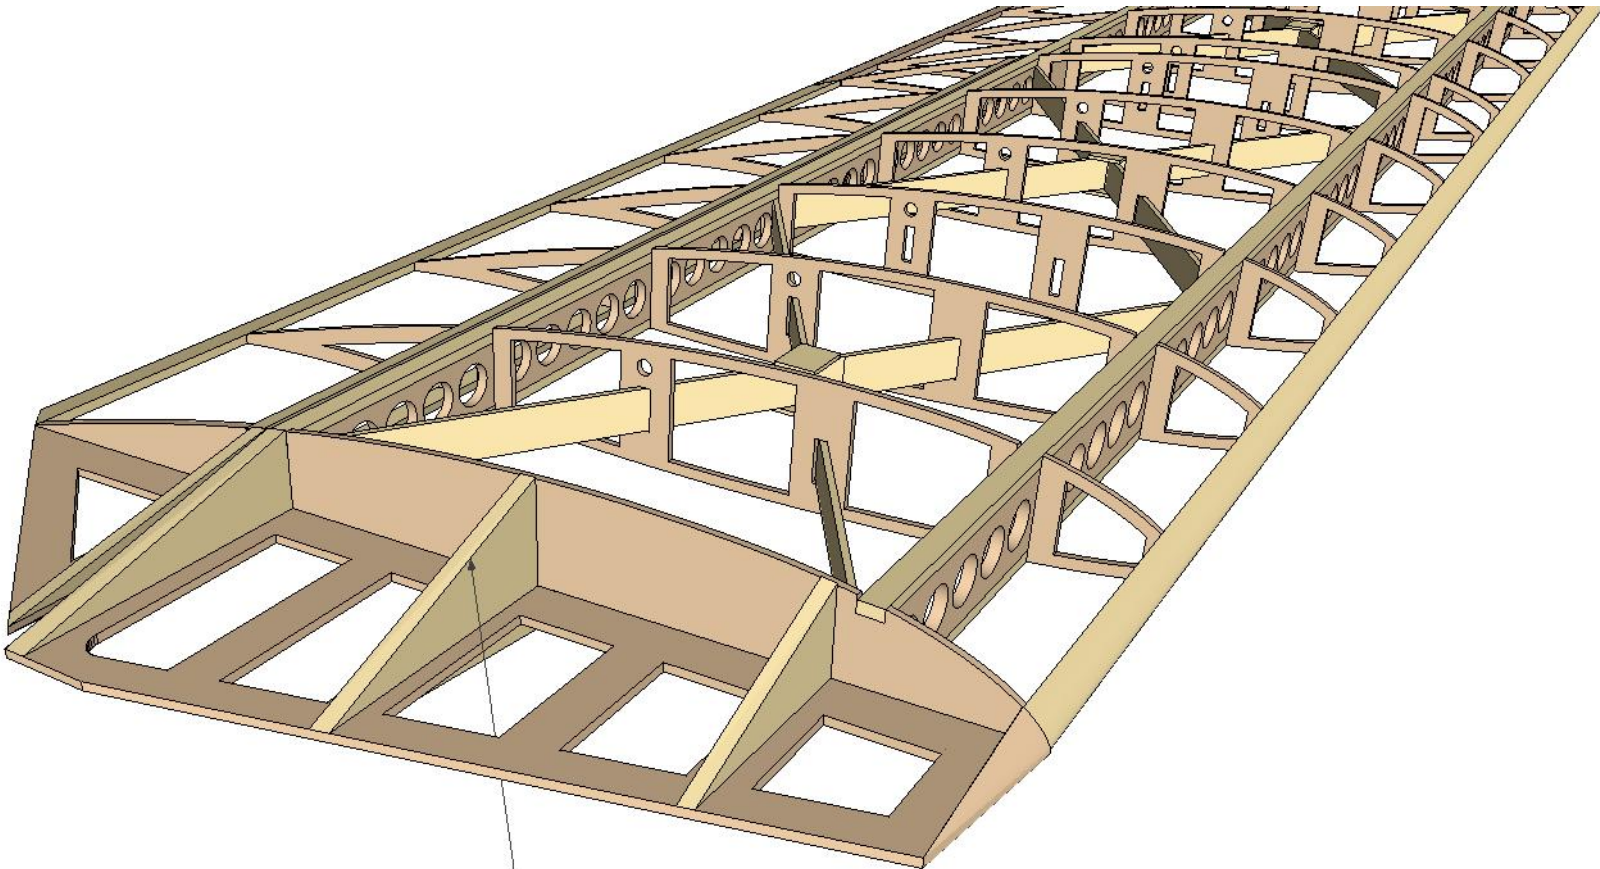


Balsa block 8 mm

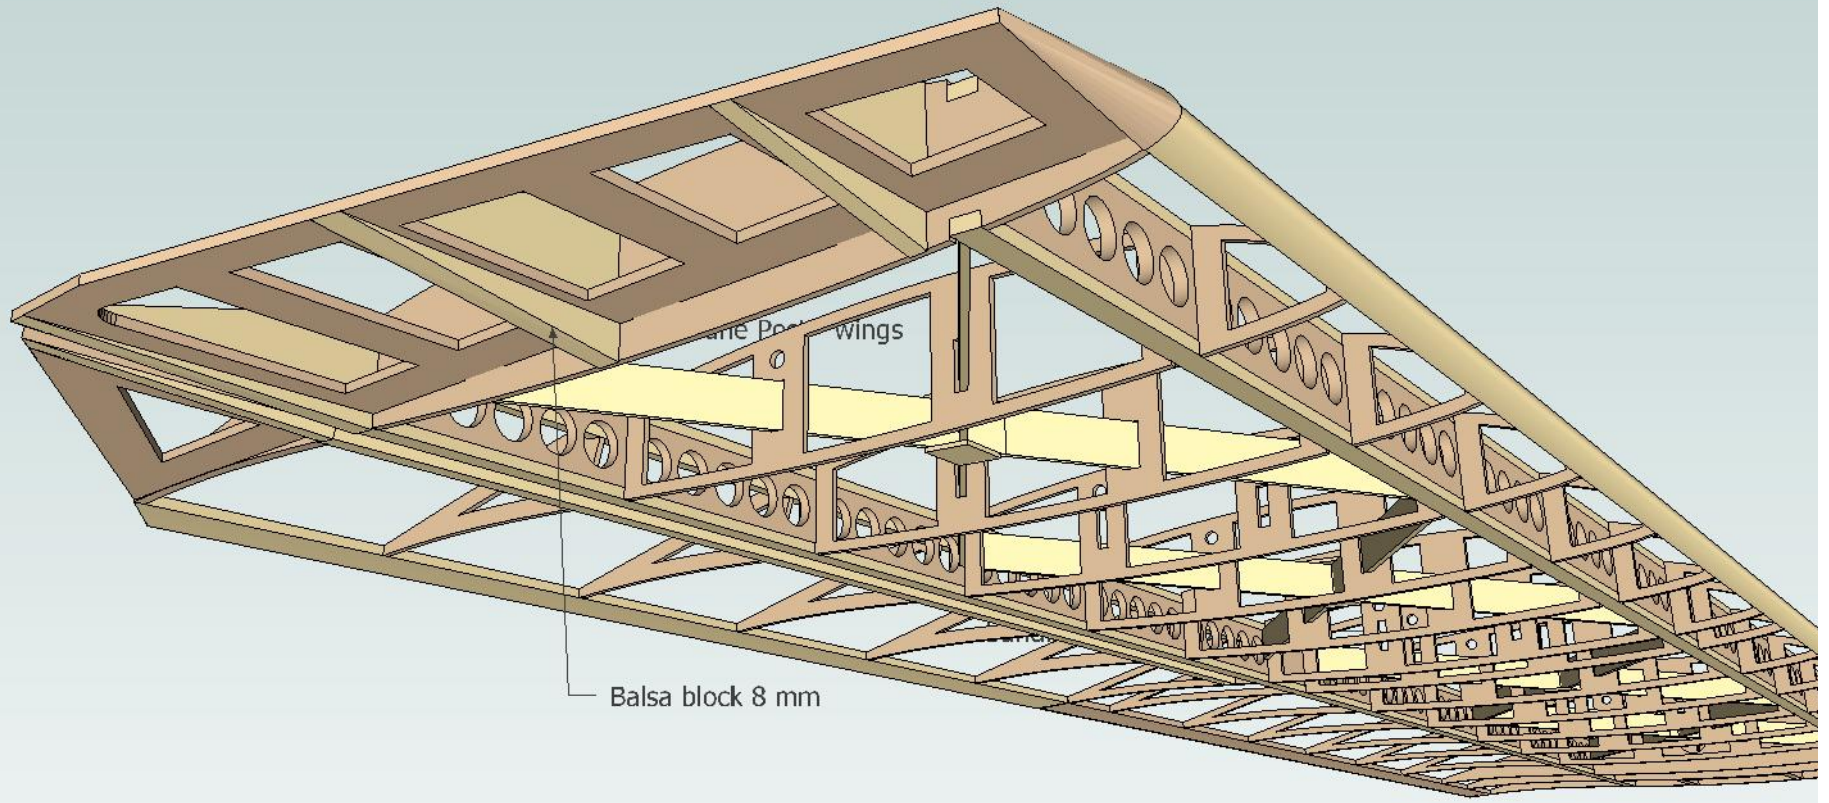


Balsa block 8 mm

Wing Post wings




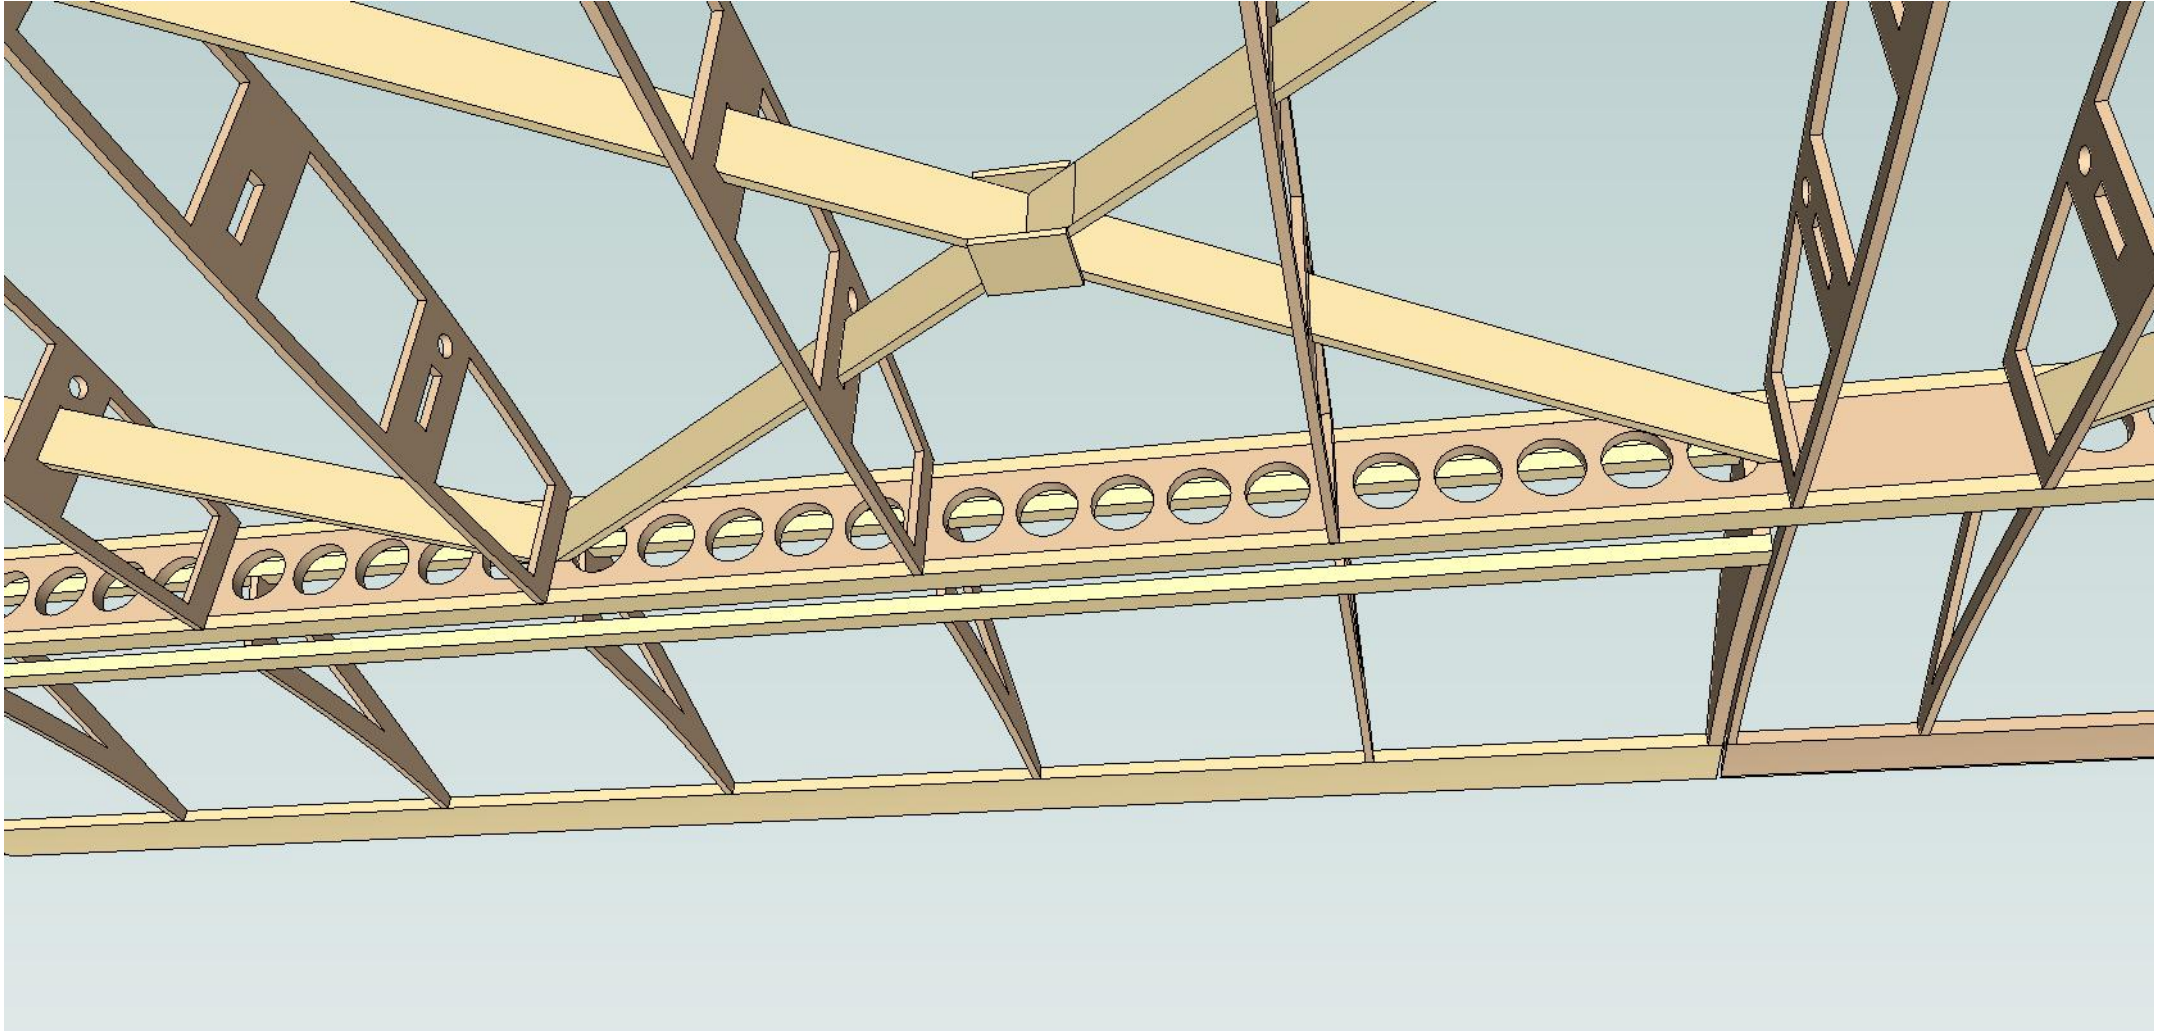

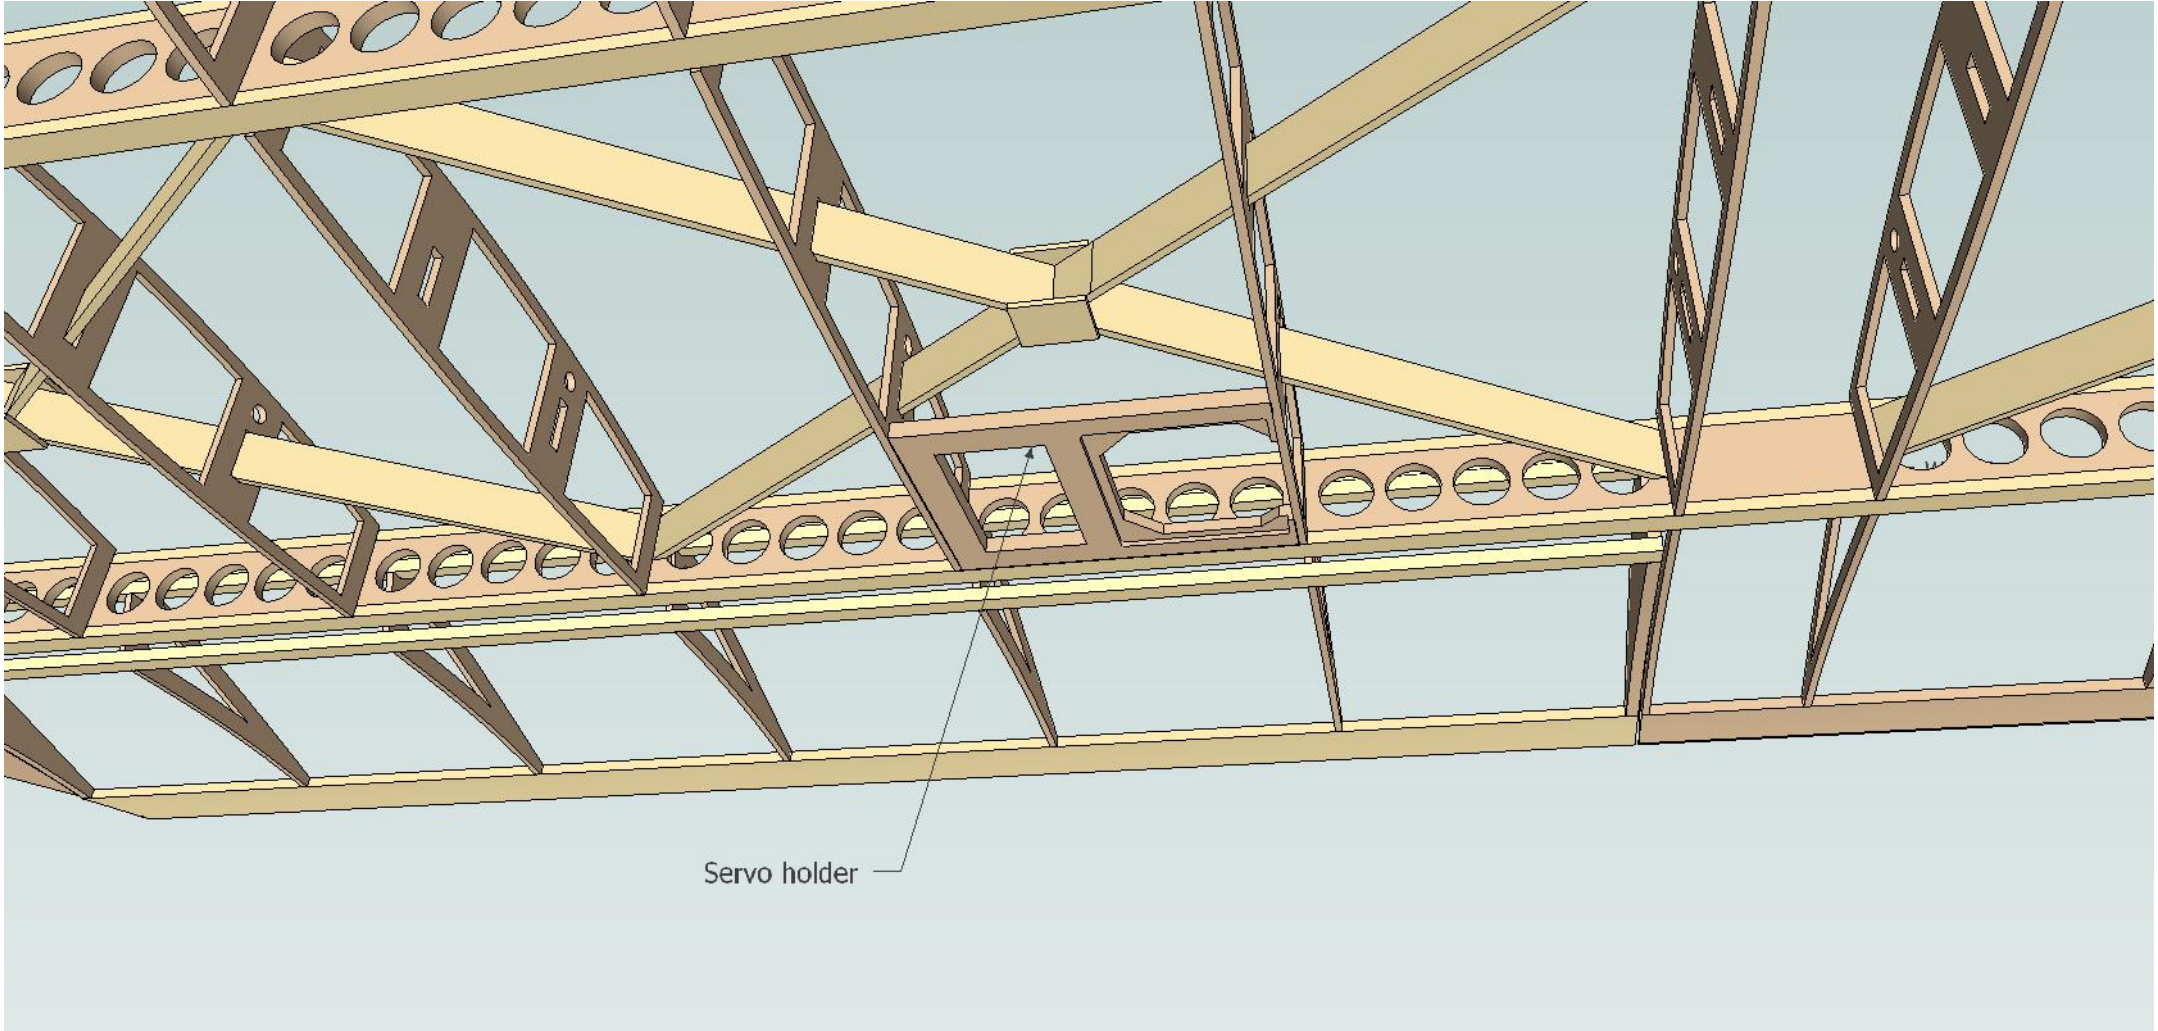



Servo holder



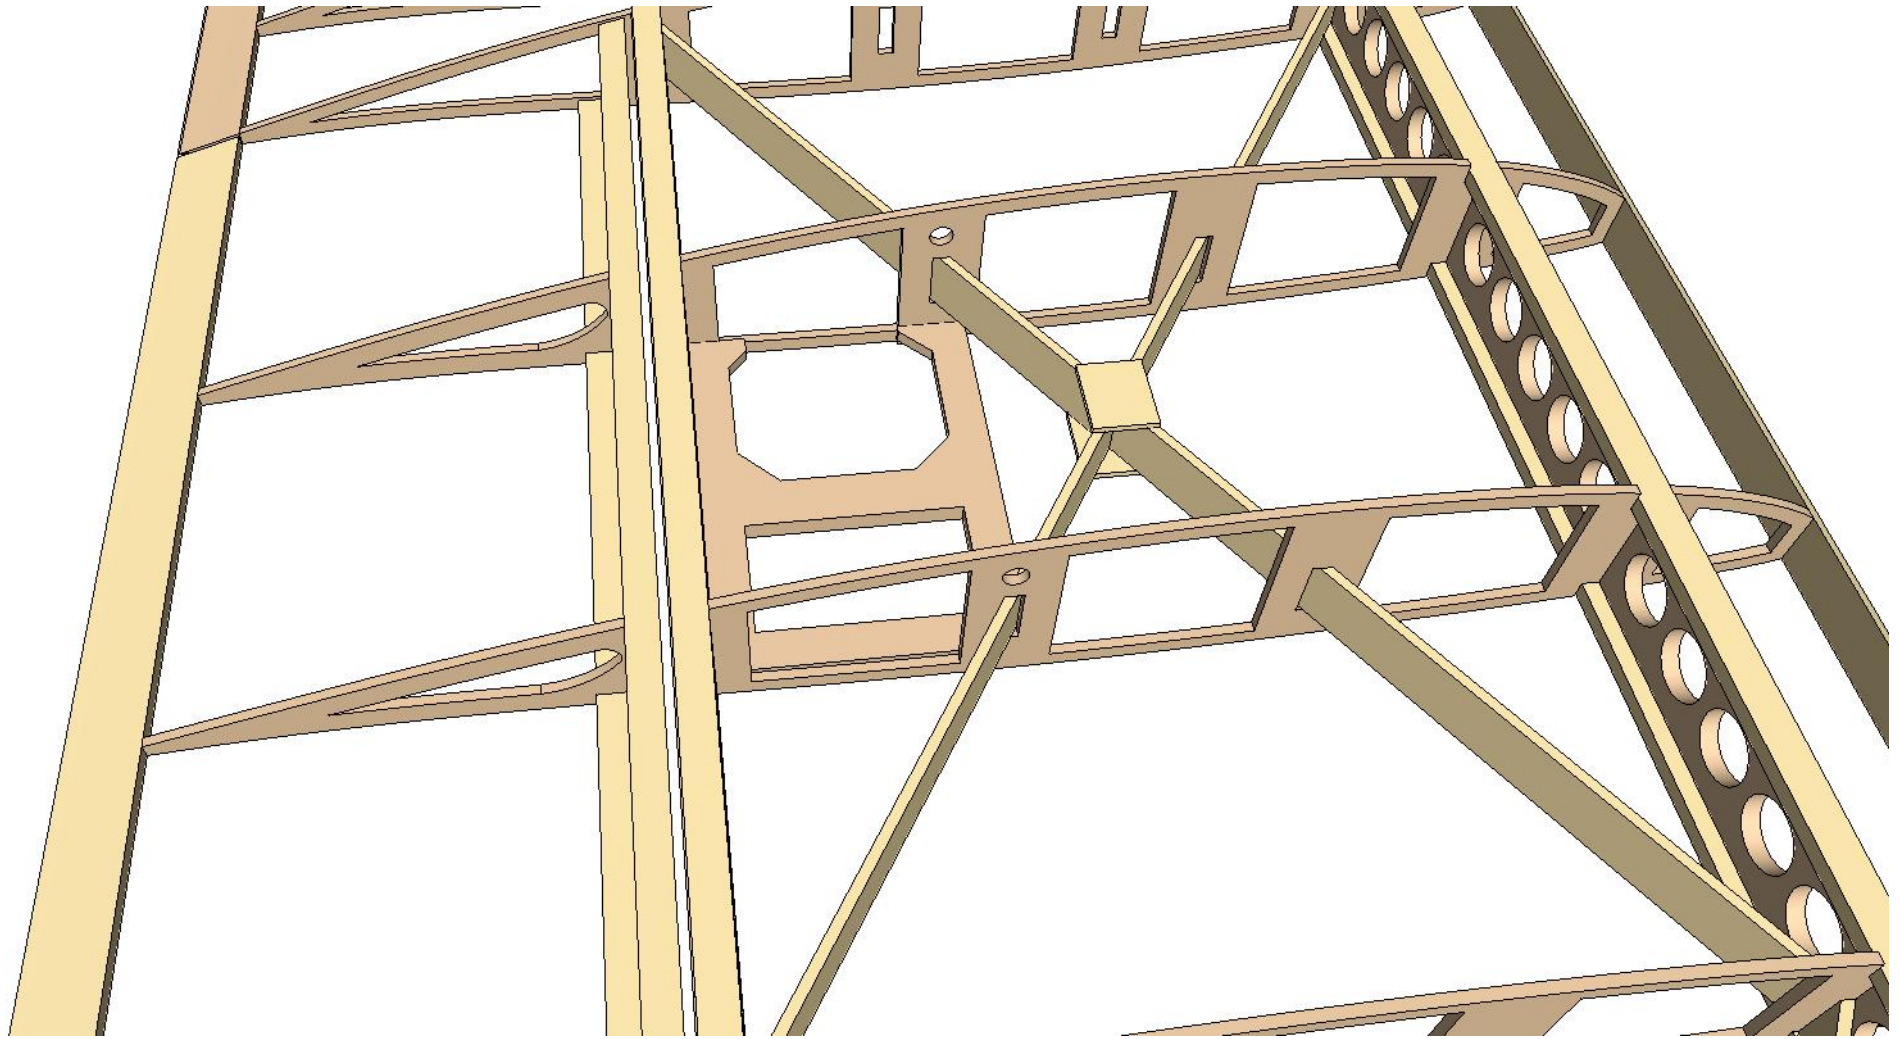



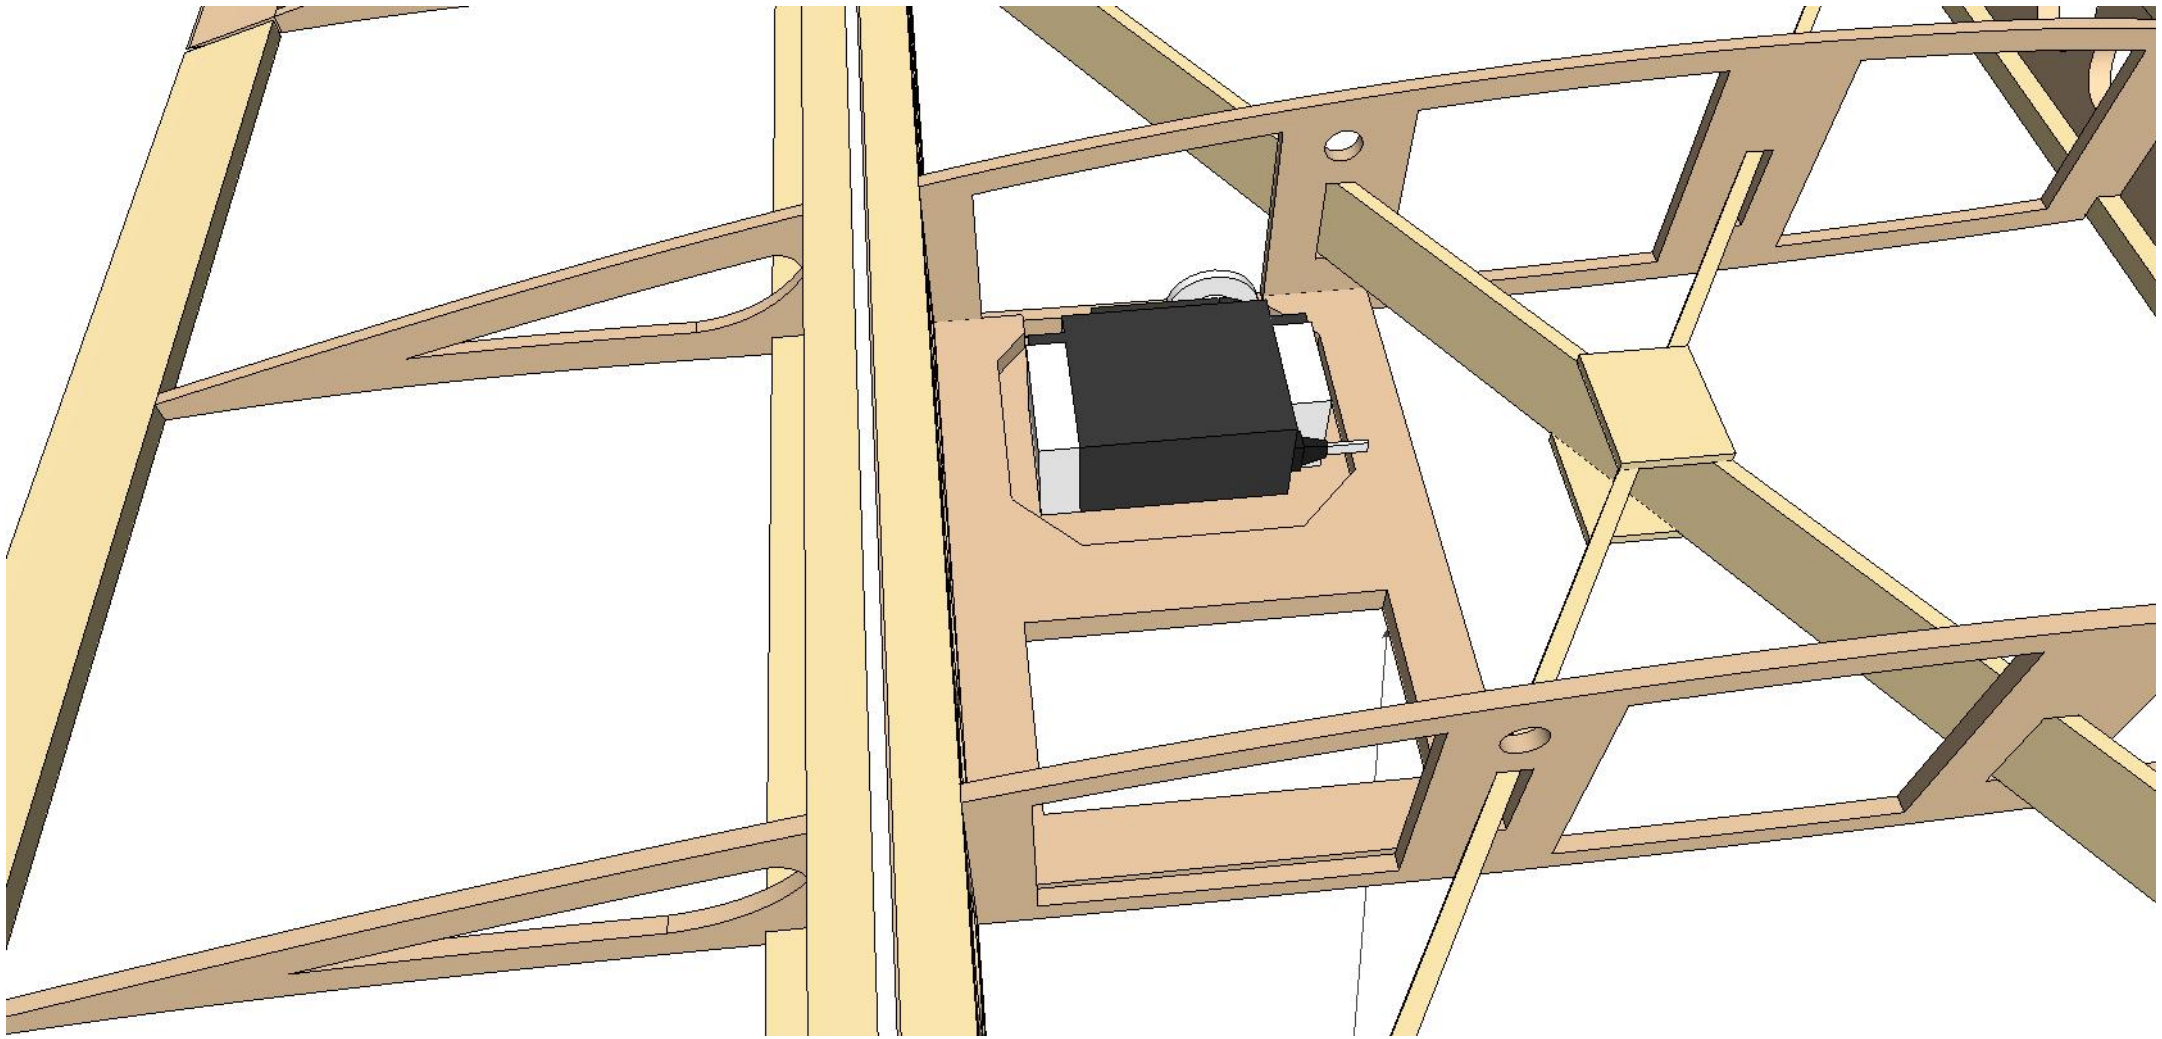

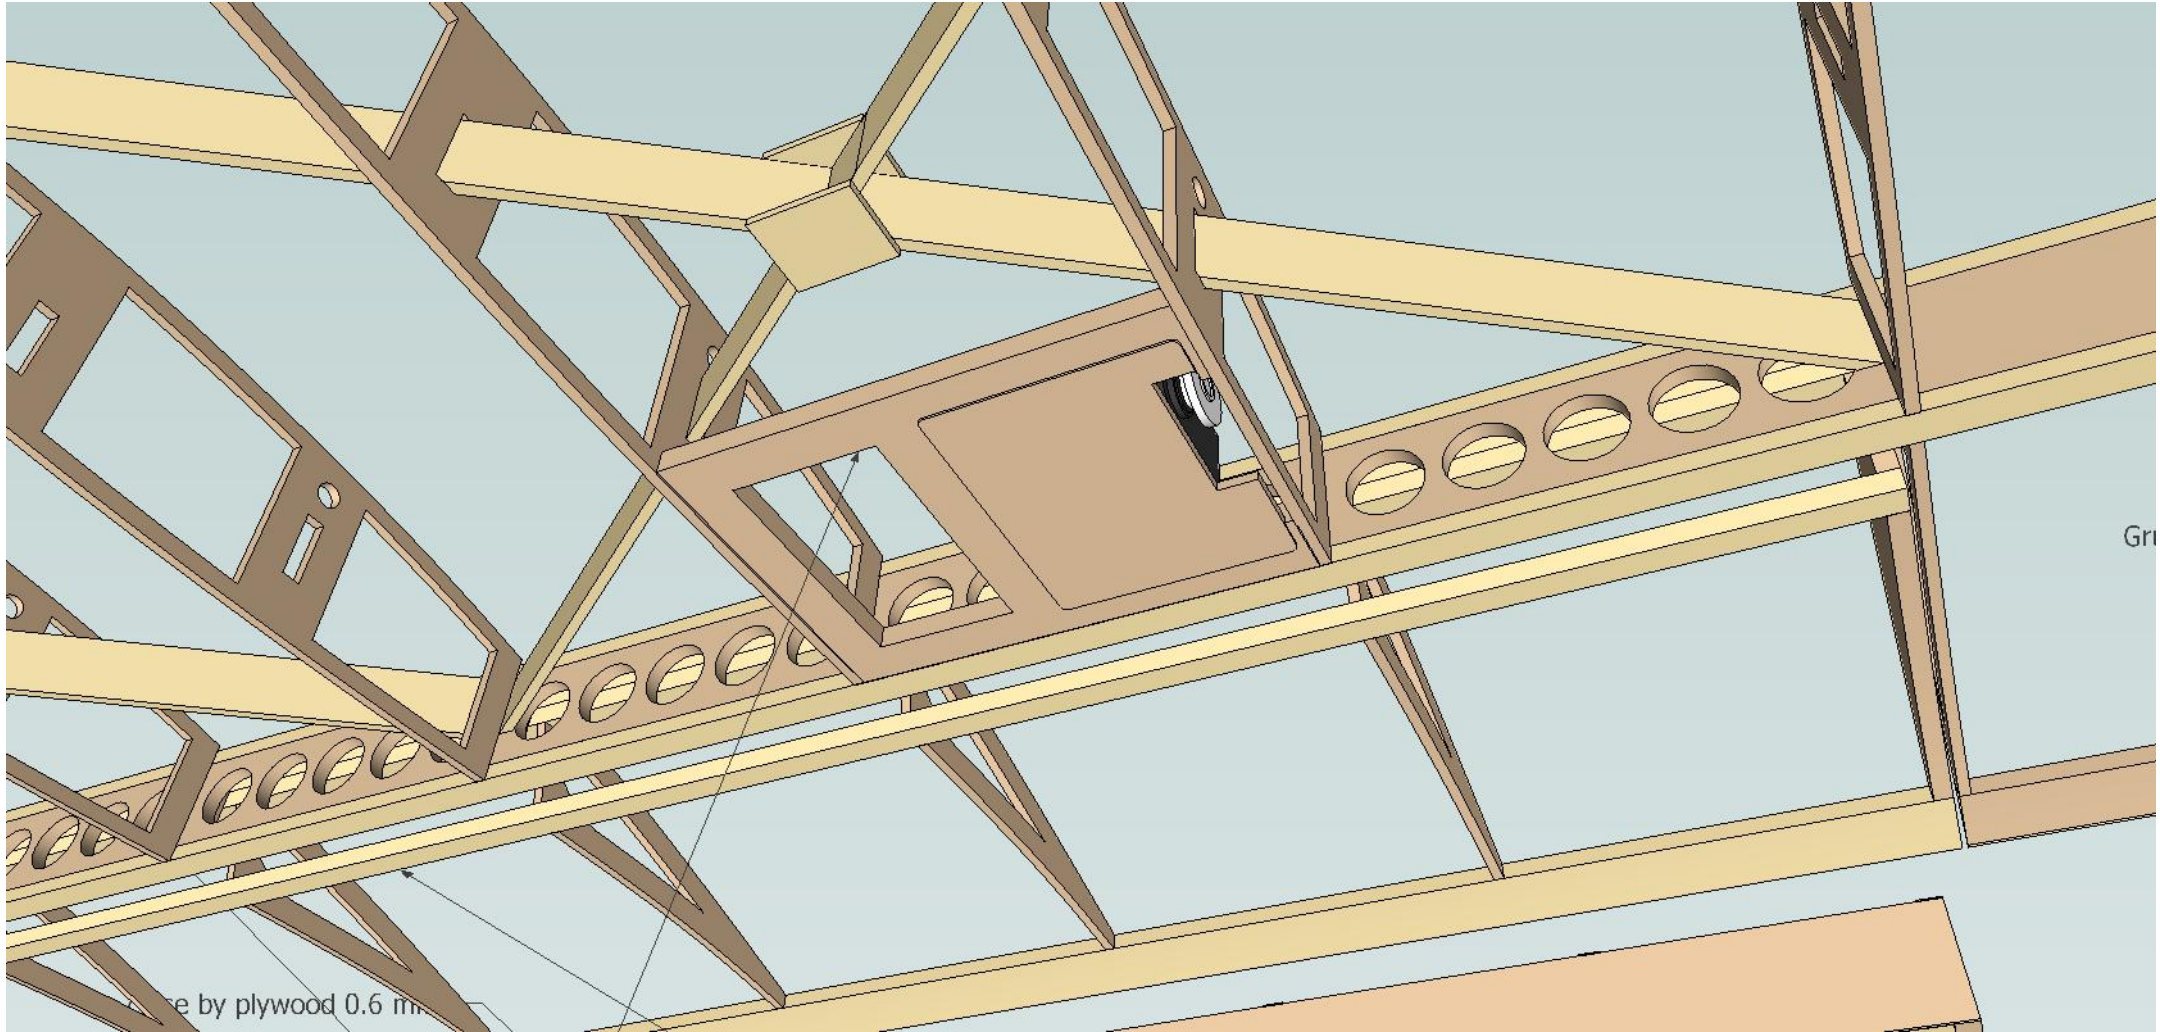


Gr


...e by plywood 0.6 mm








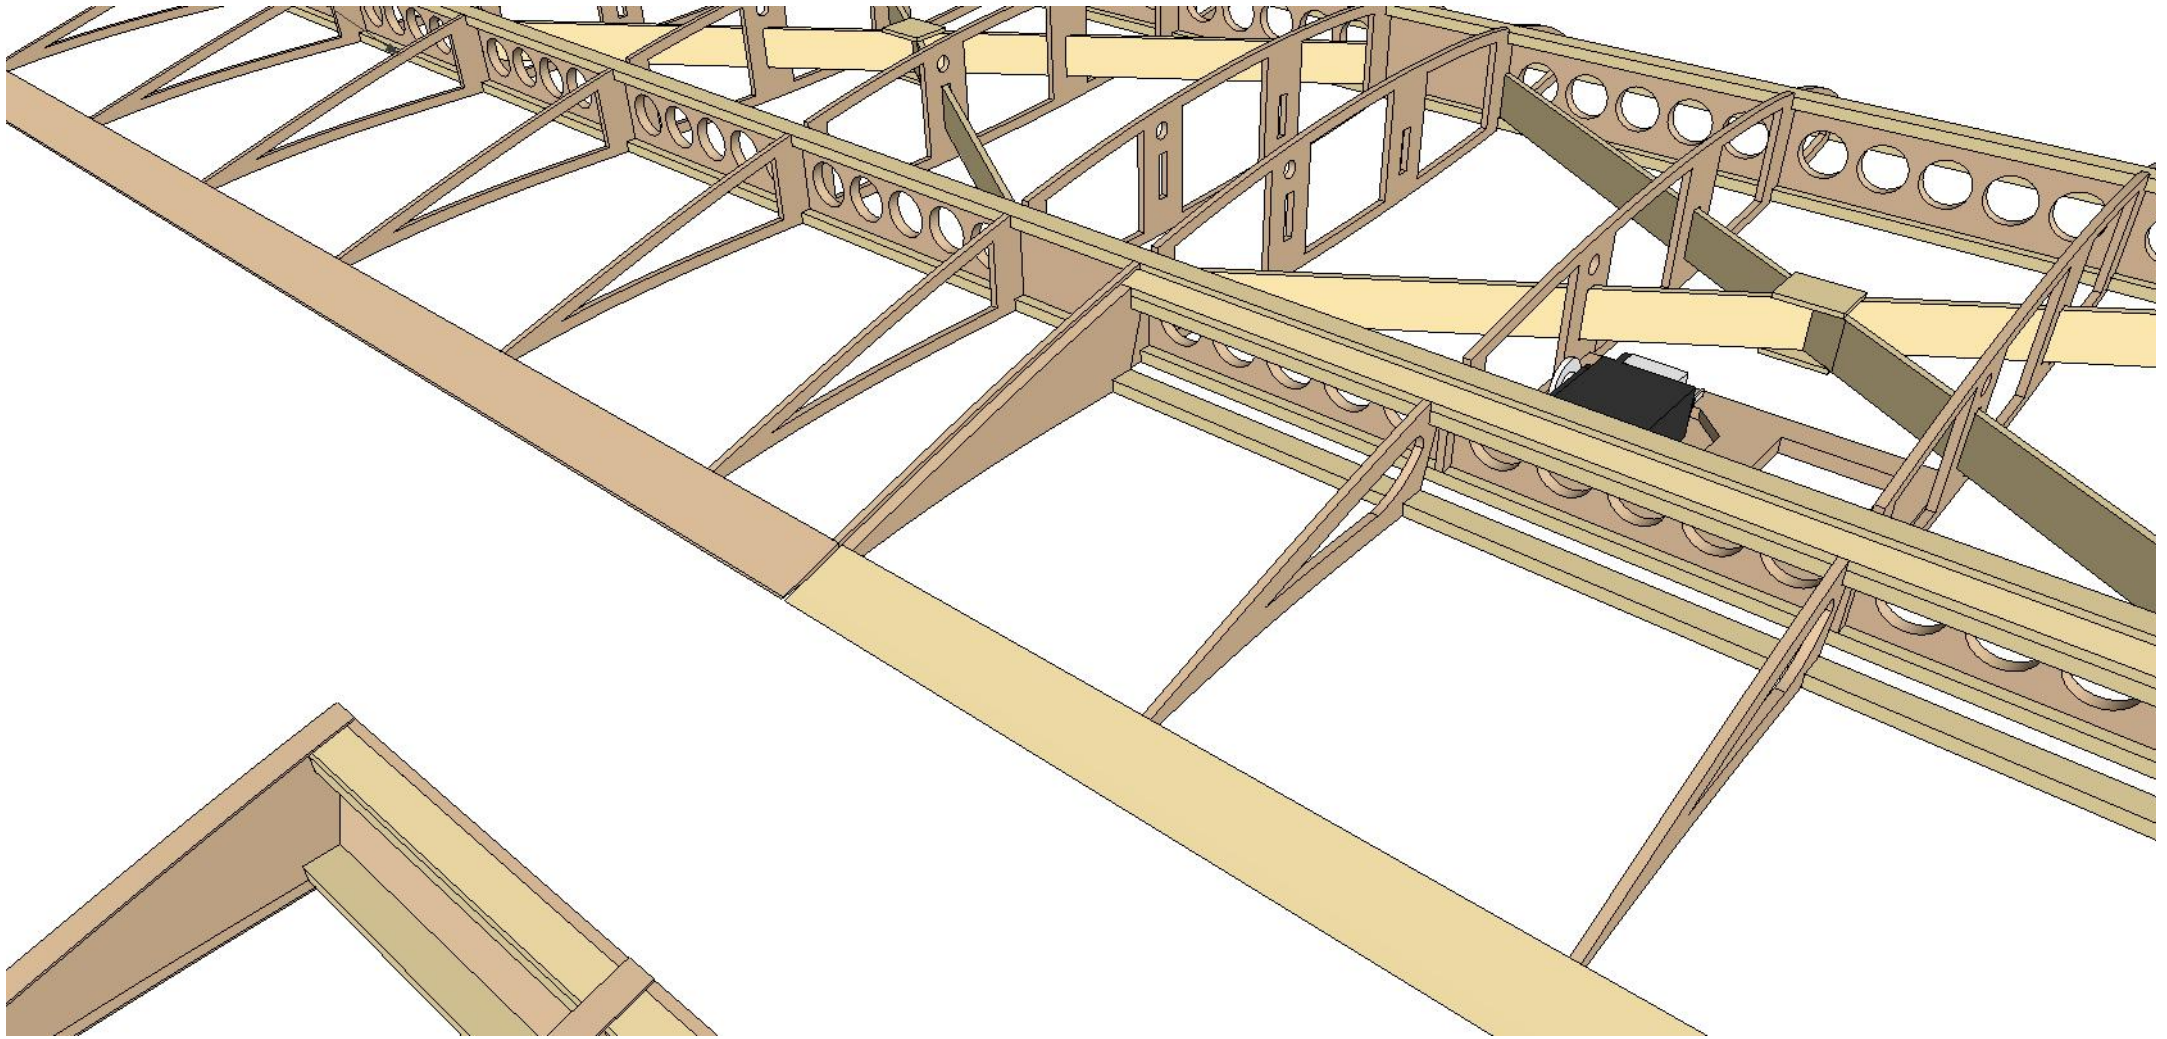

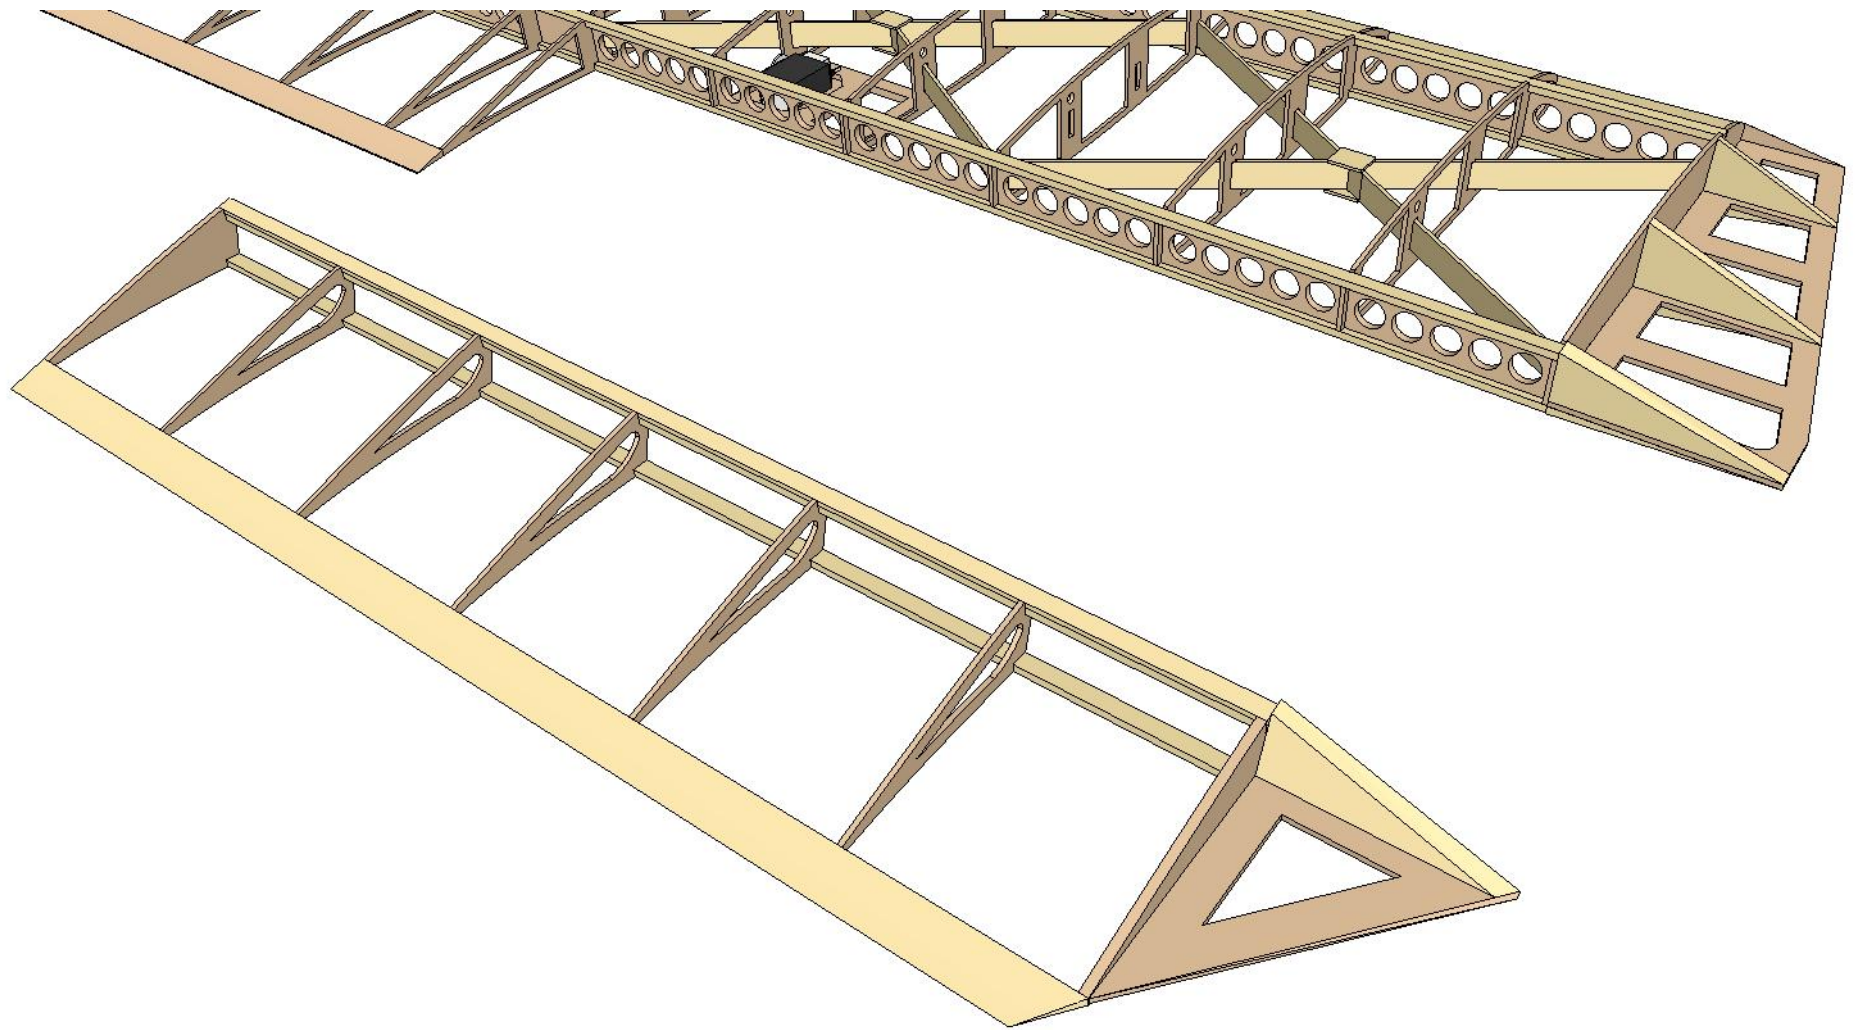





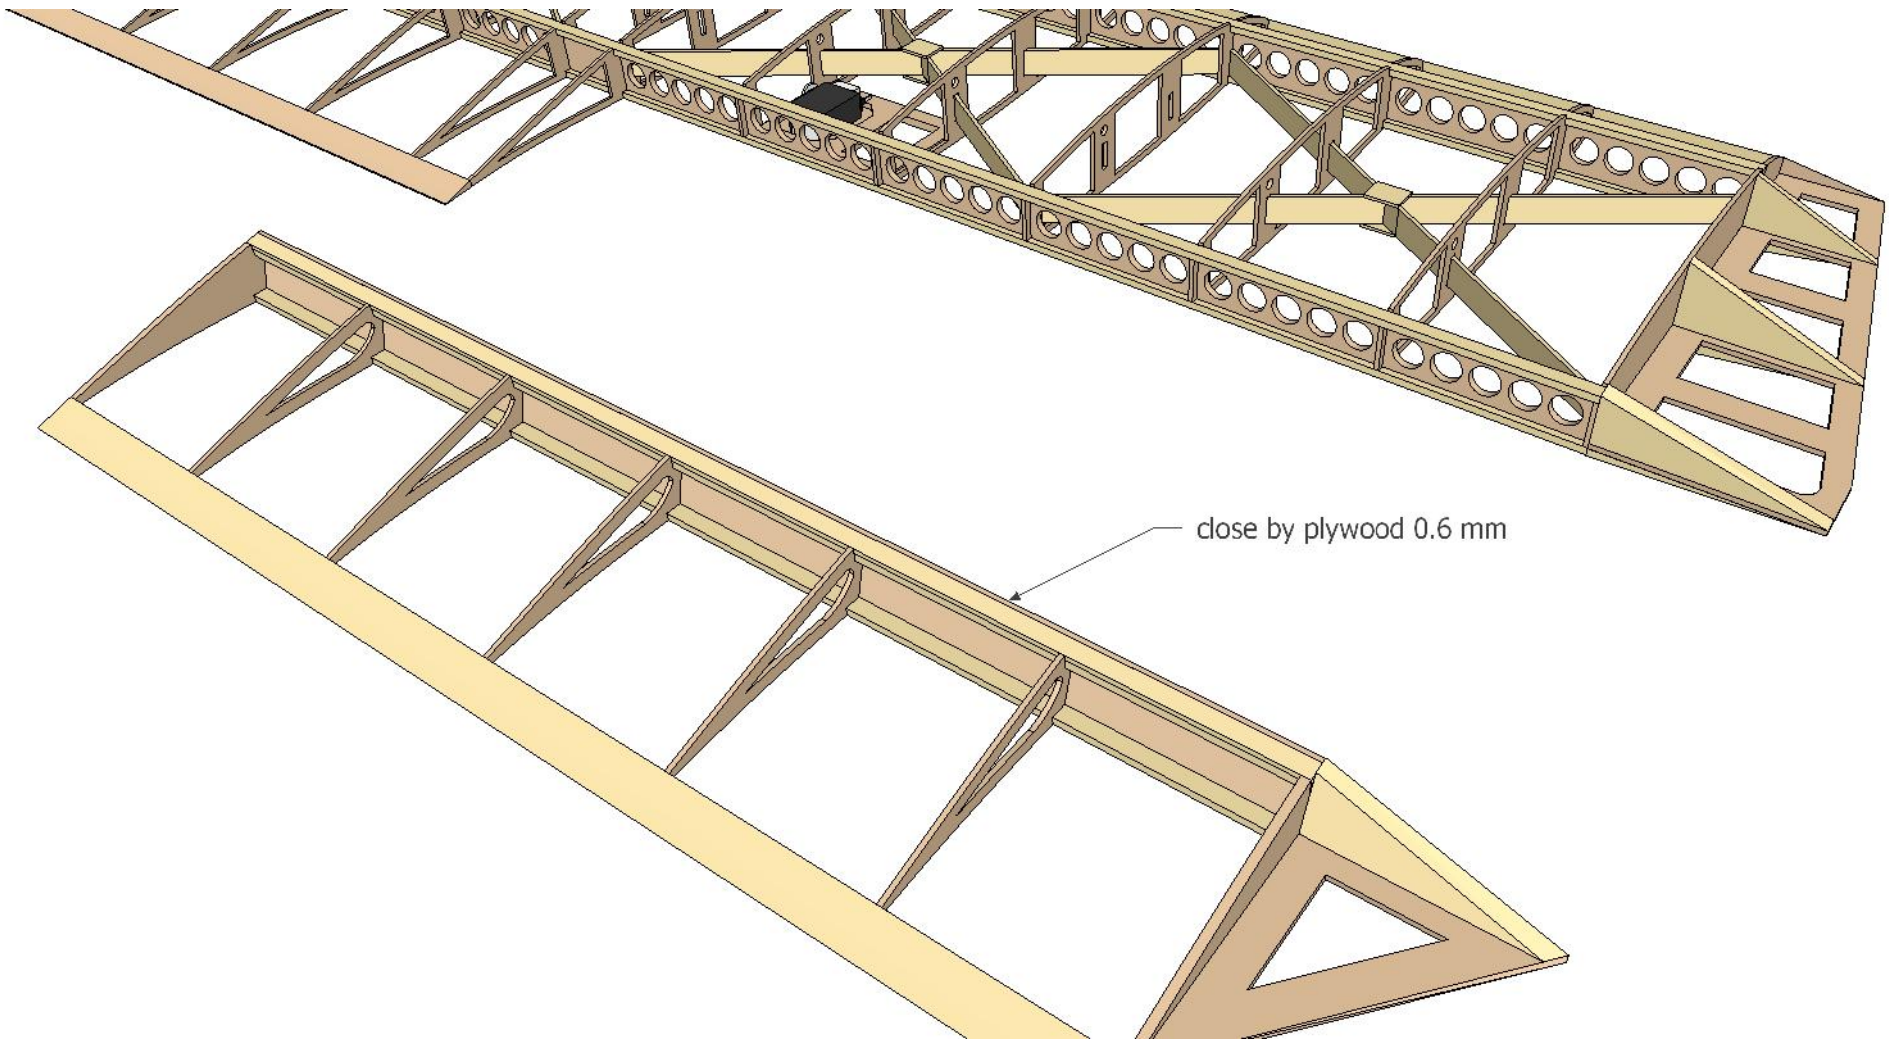


close by plywood 0.6 mm




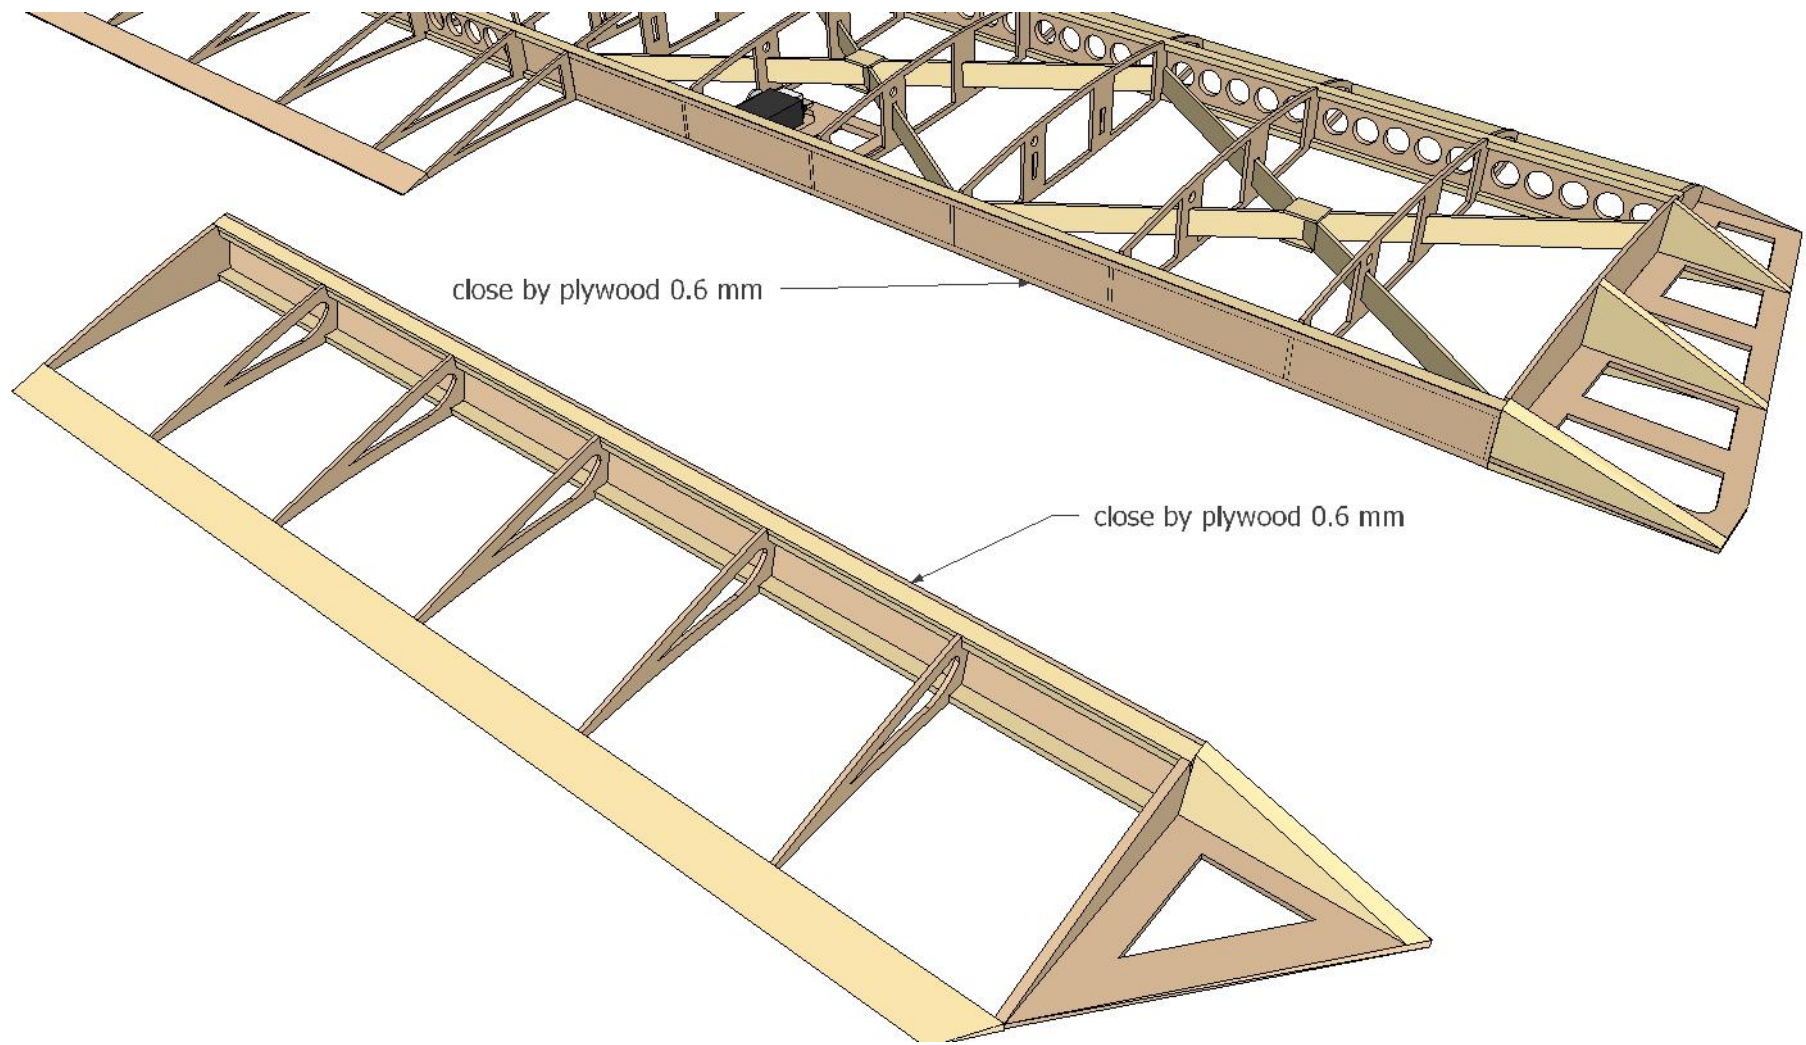

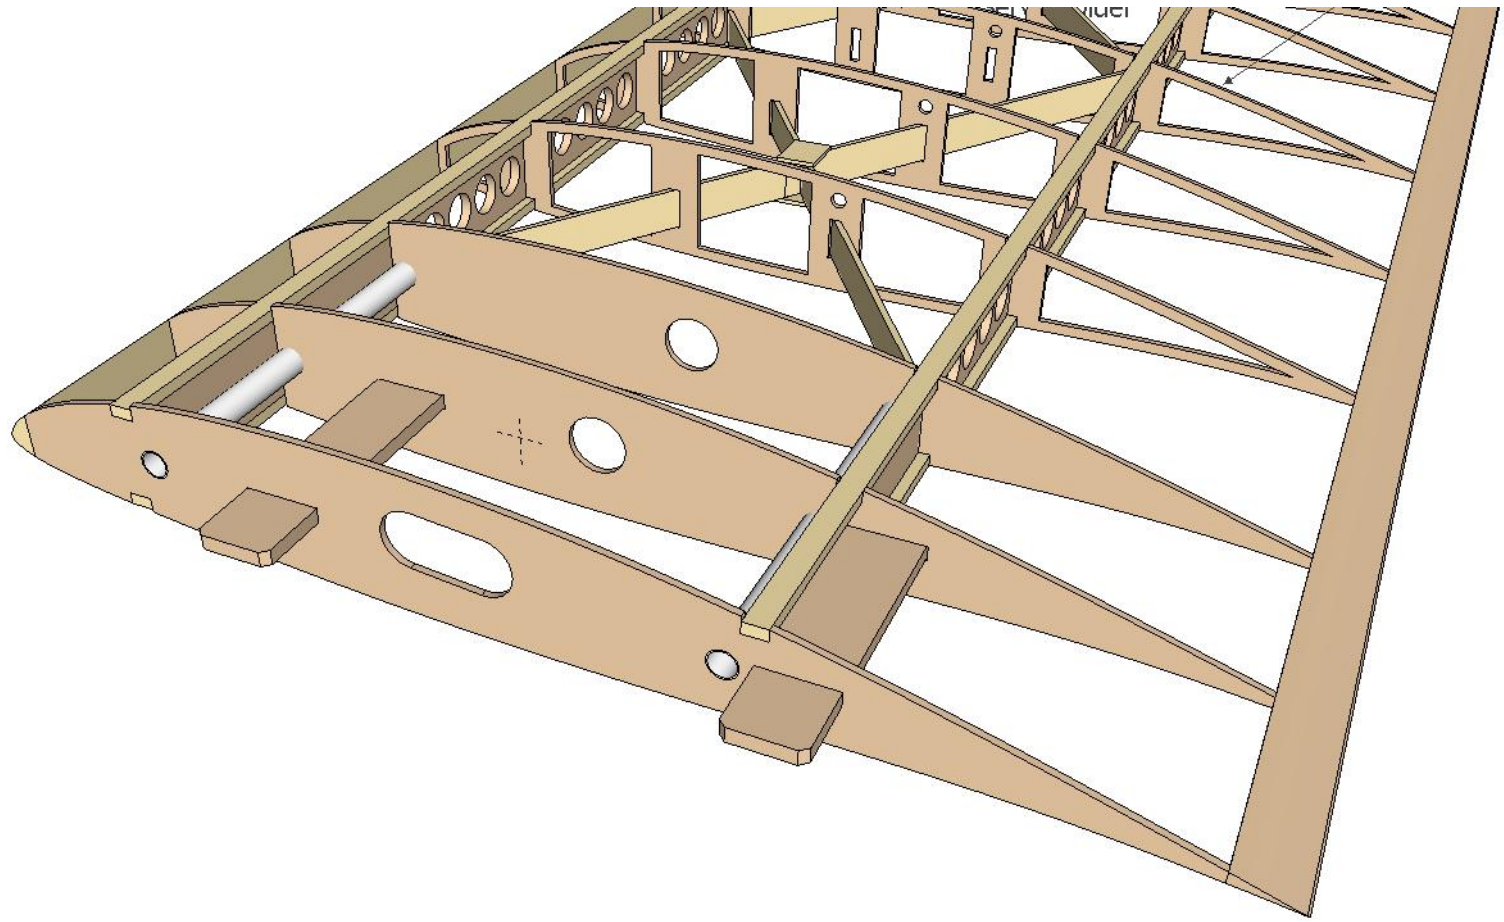


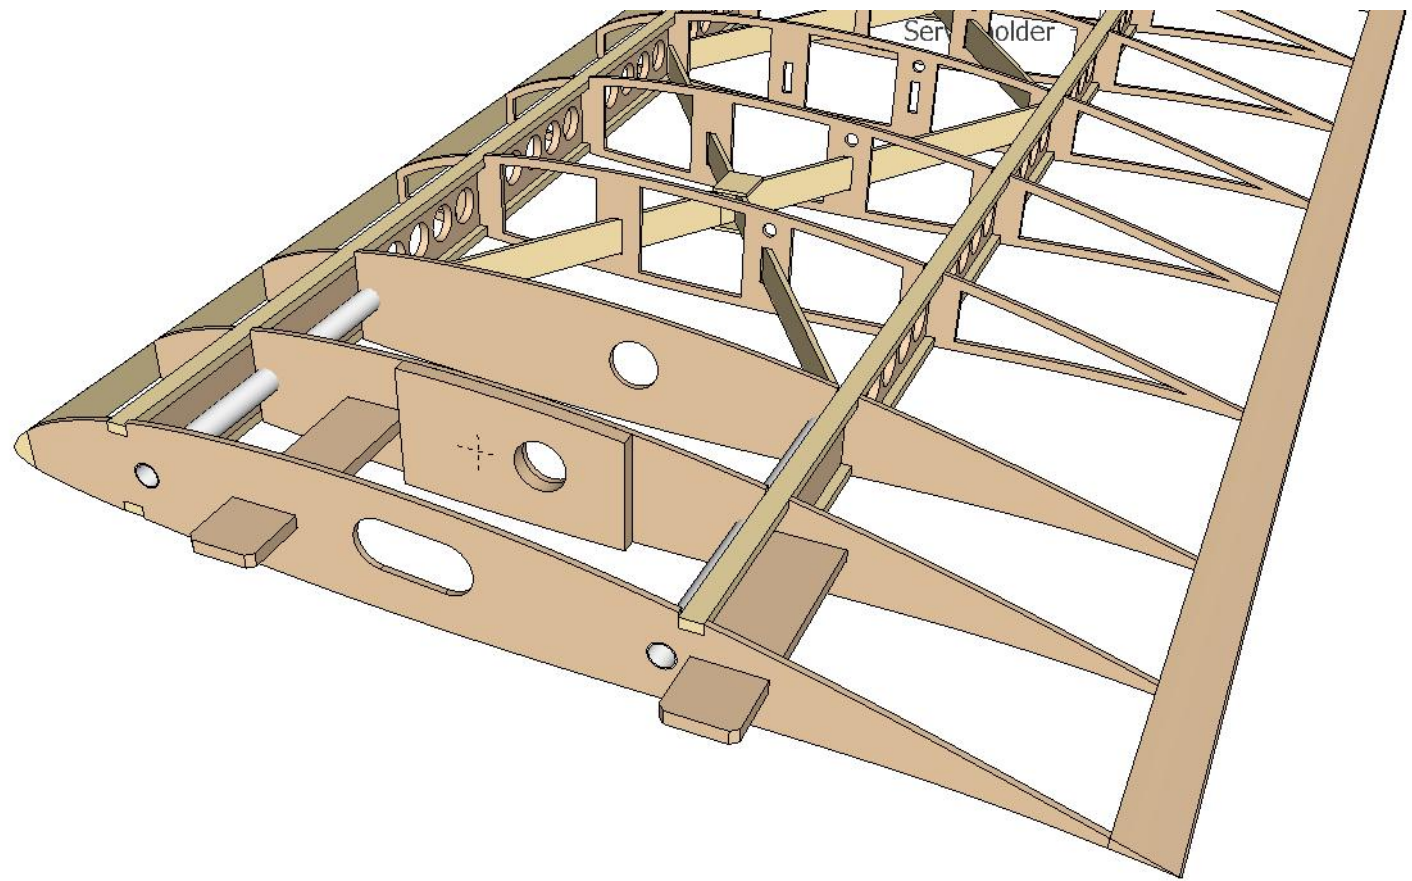




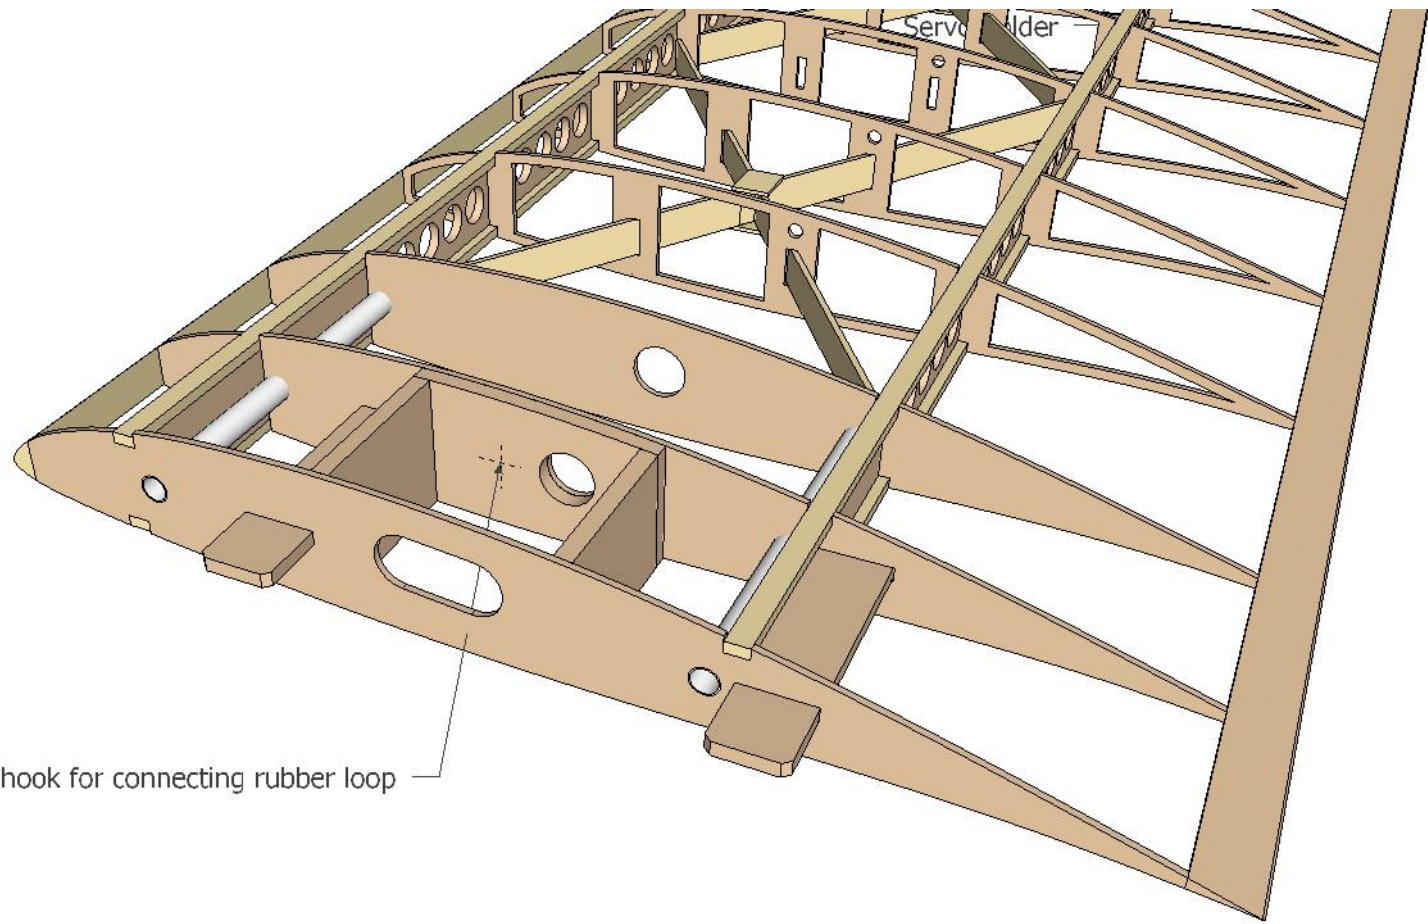


Burying the hook for connecting rubber loop

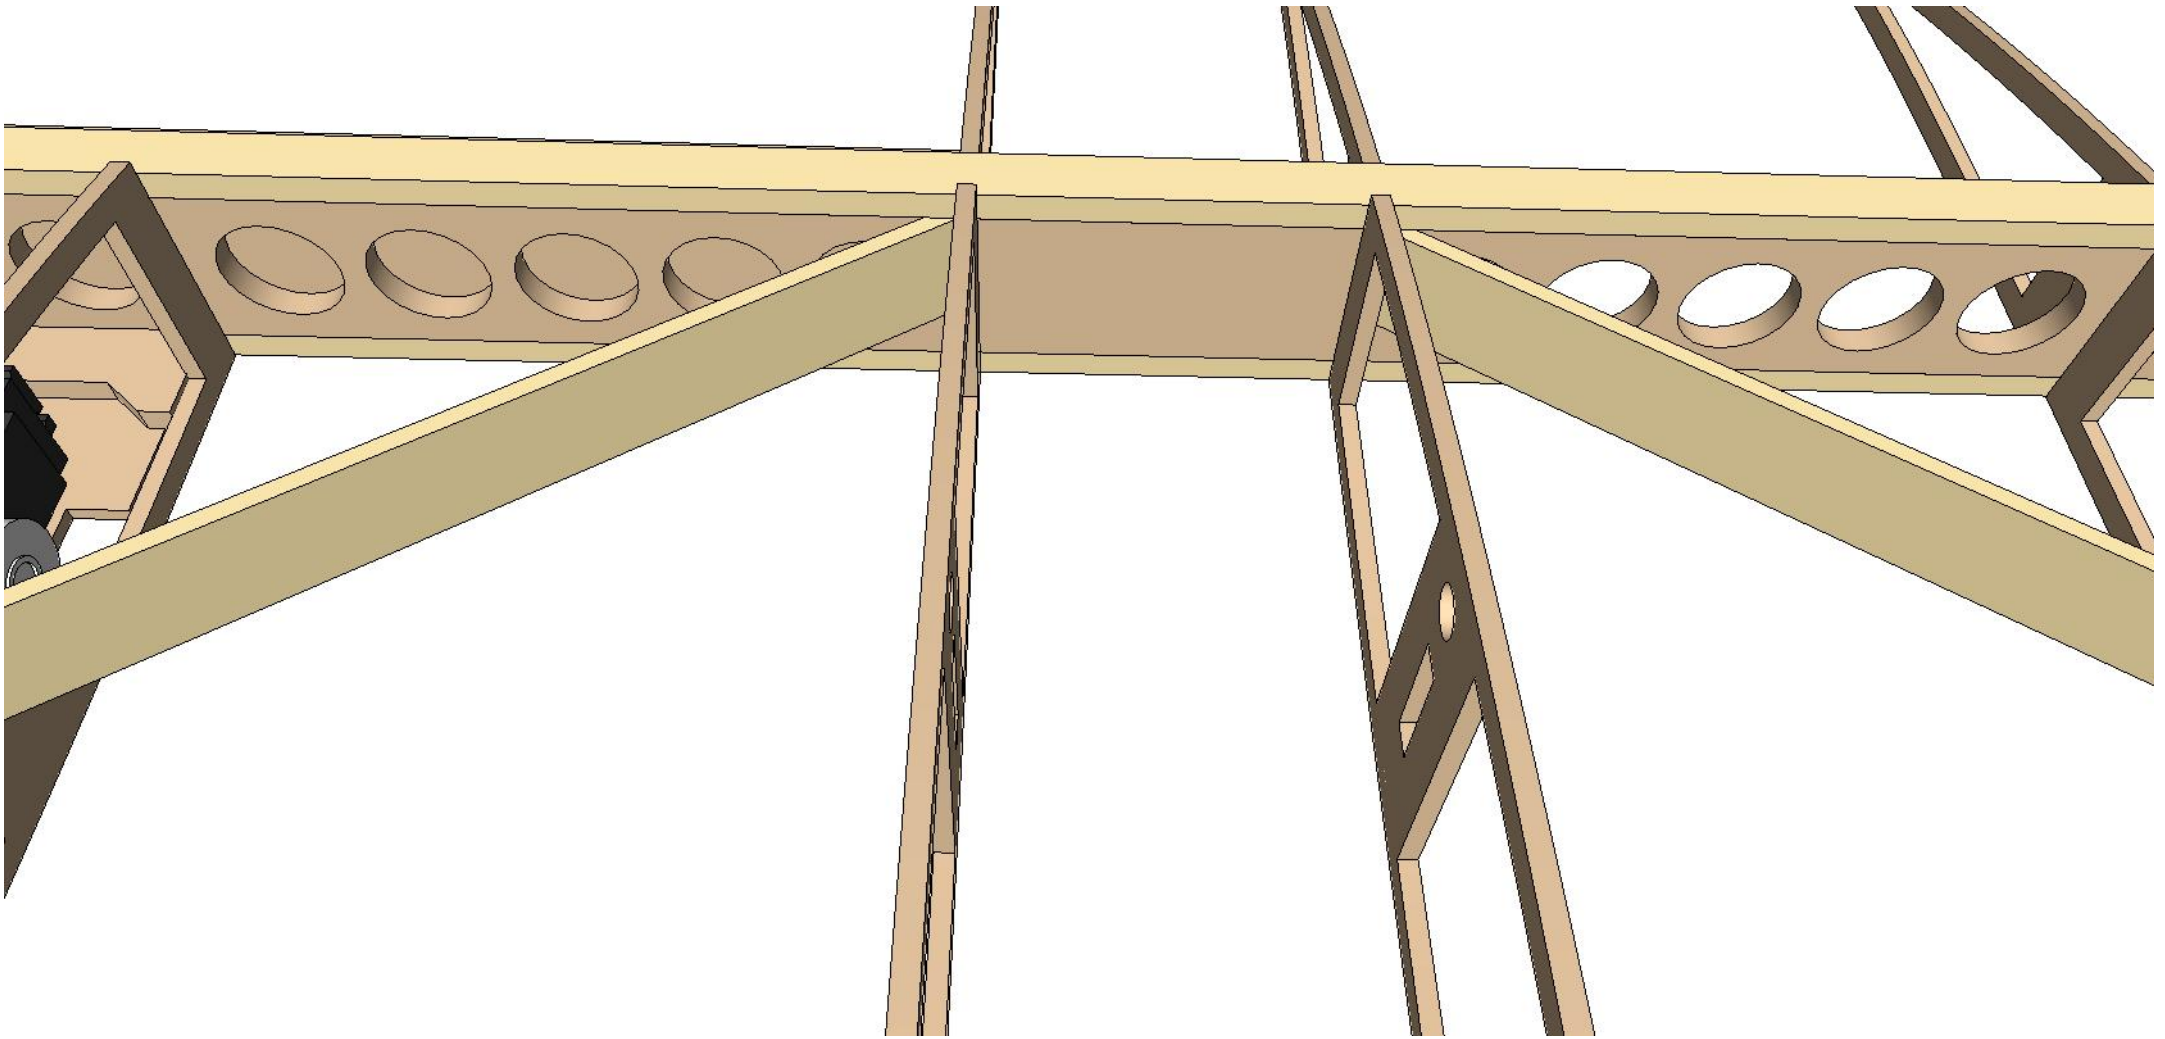


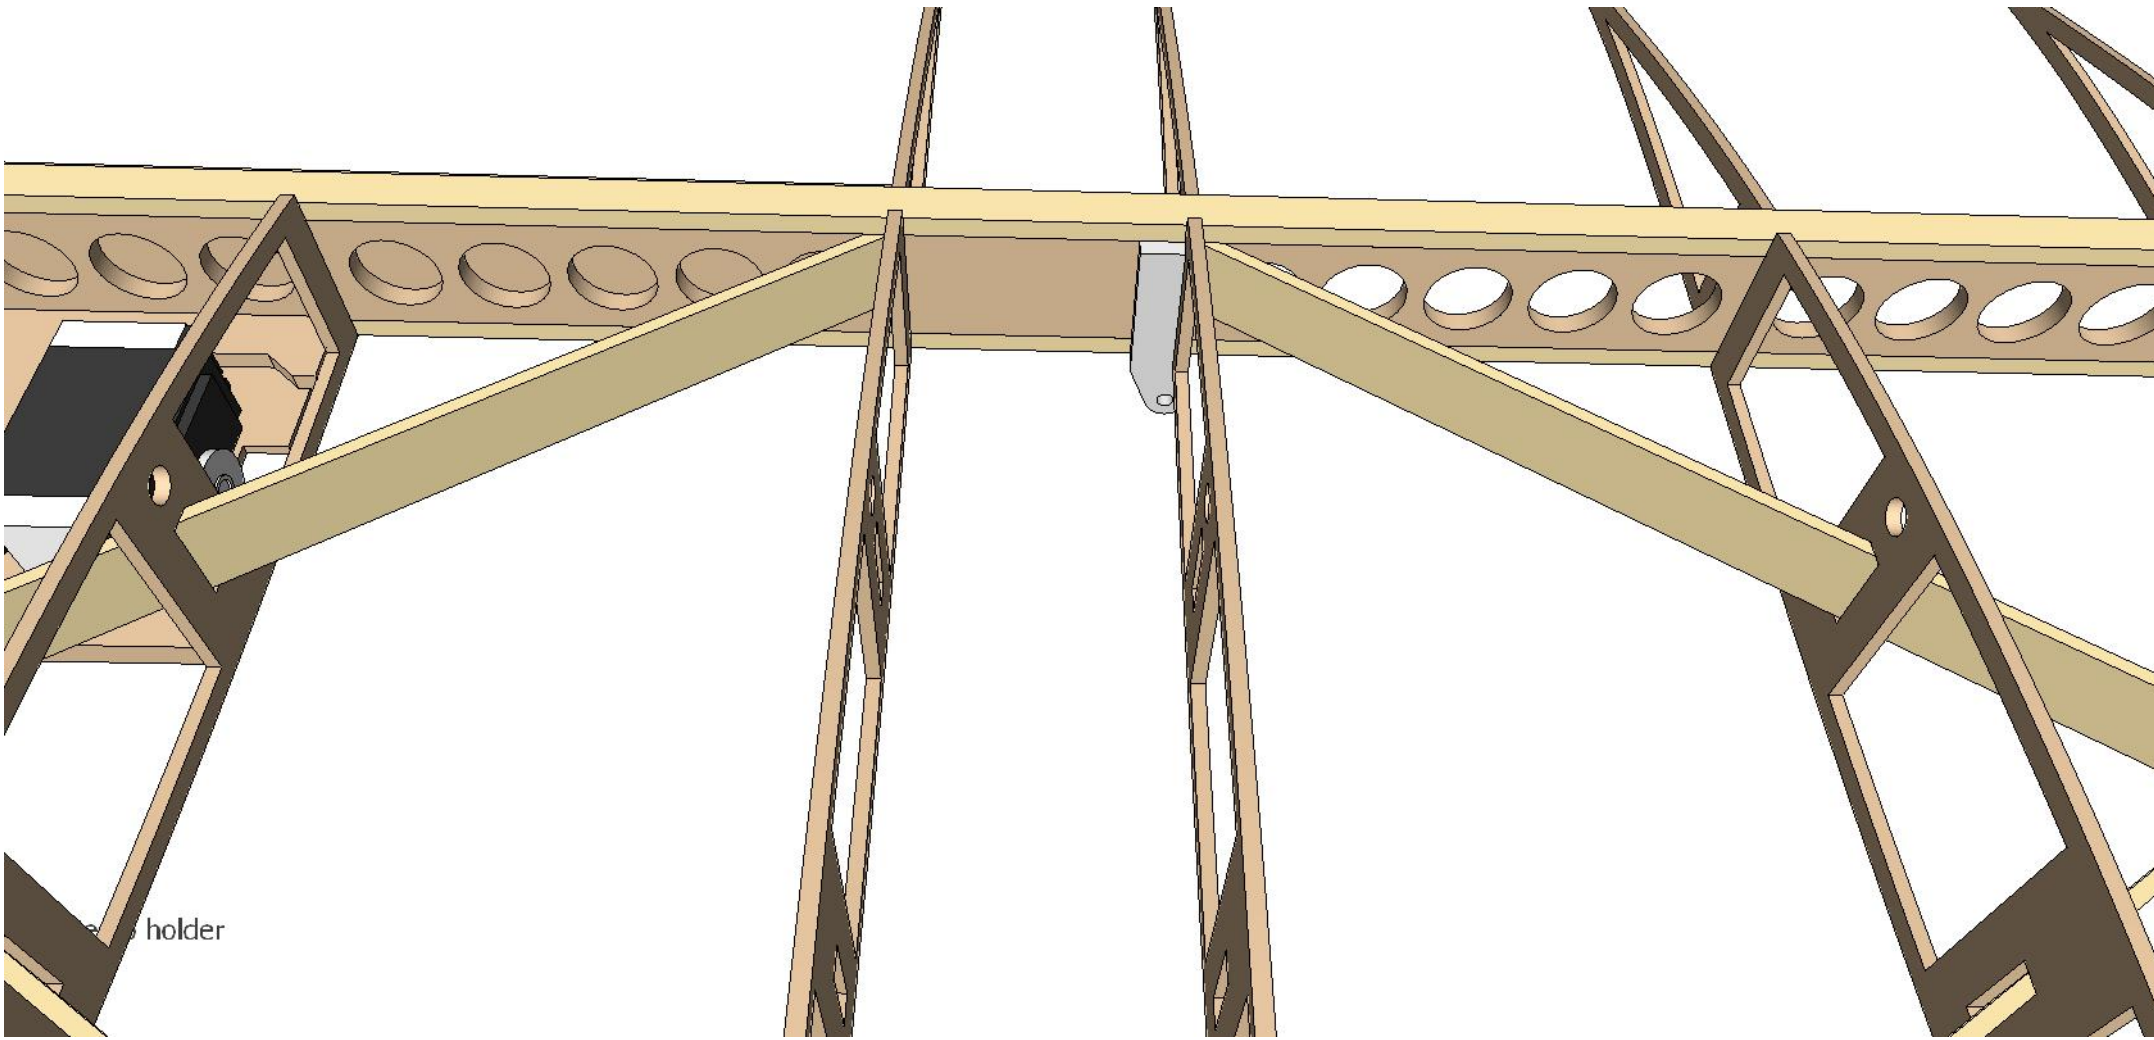


holder




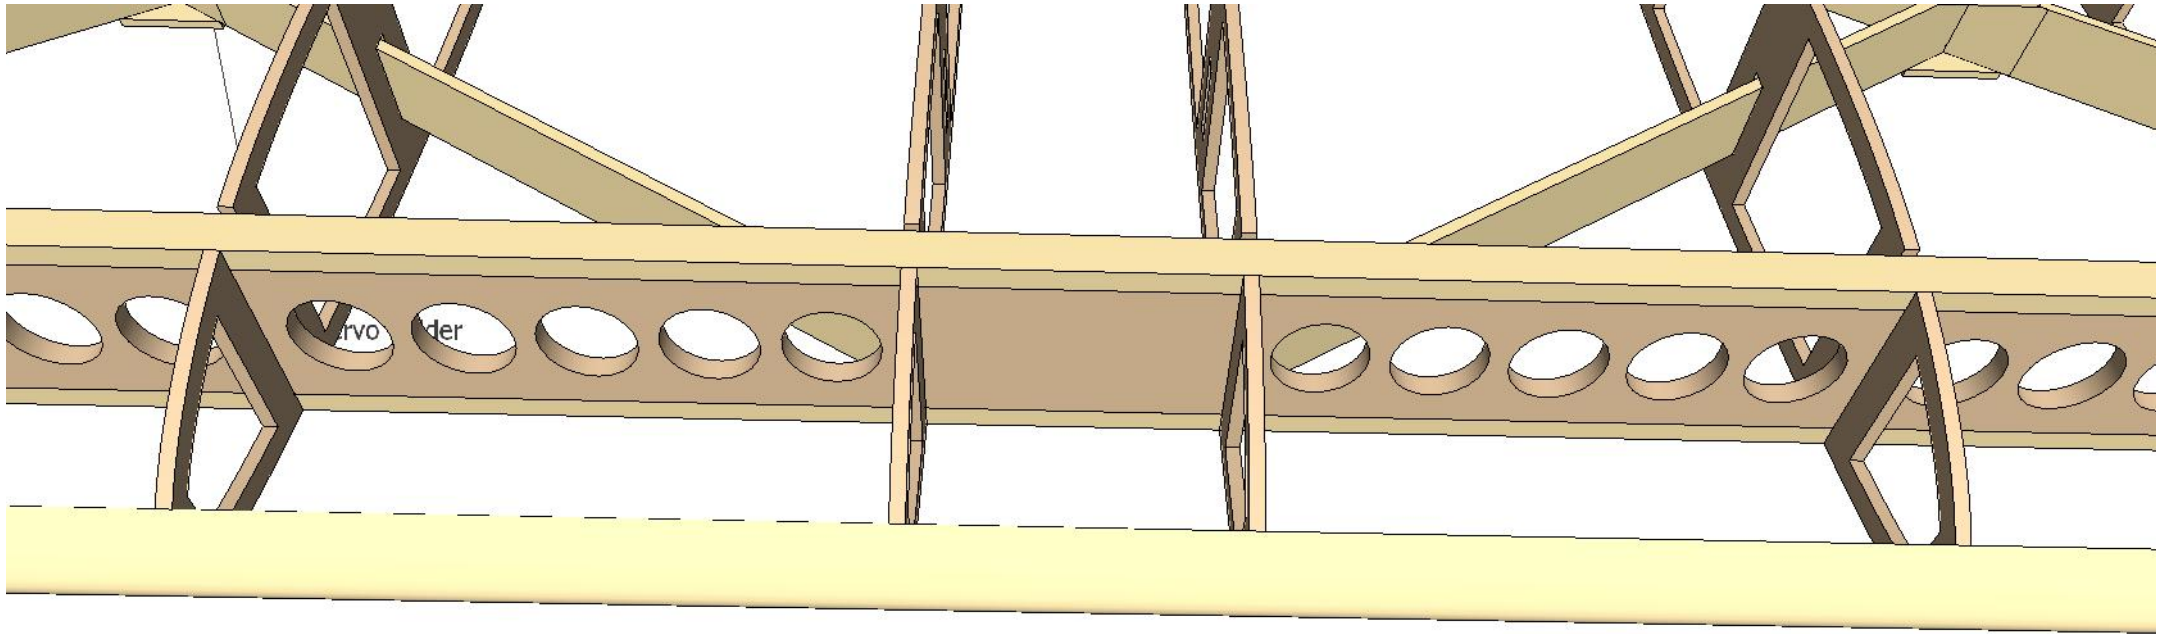

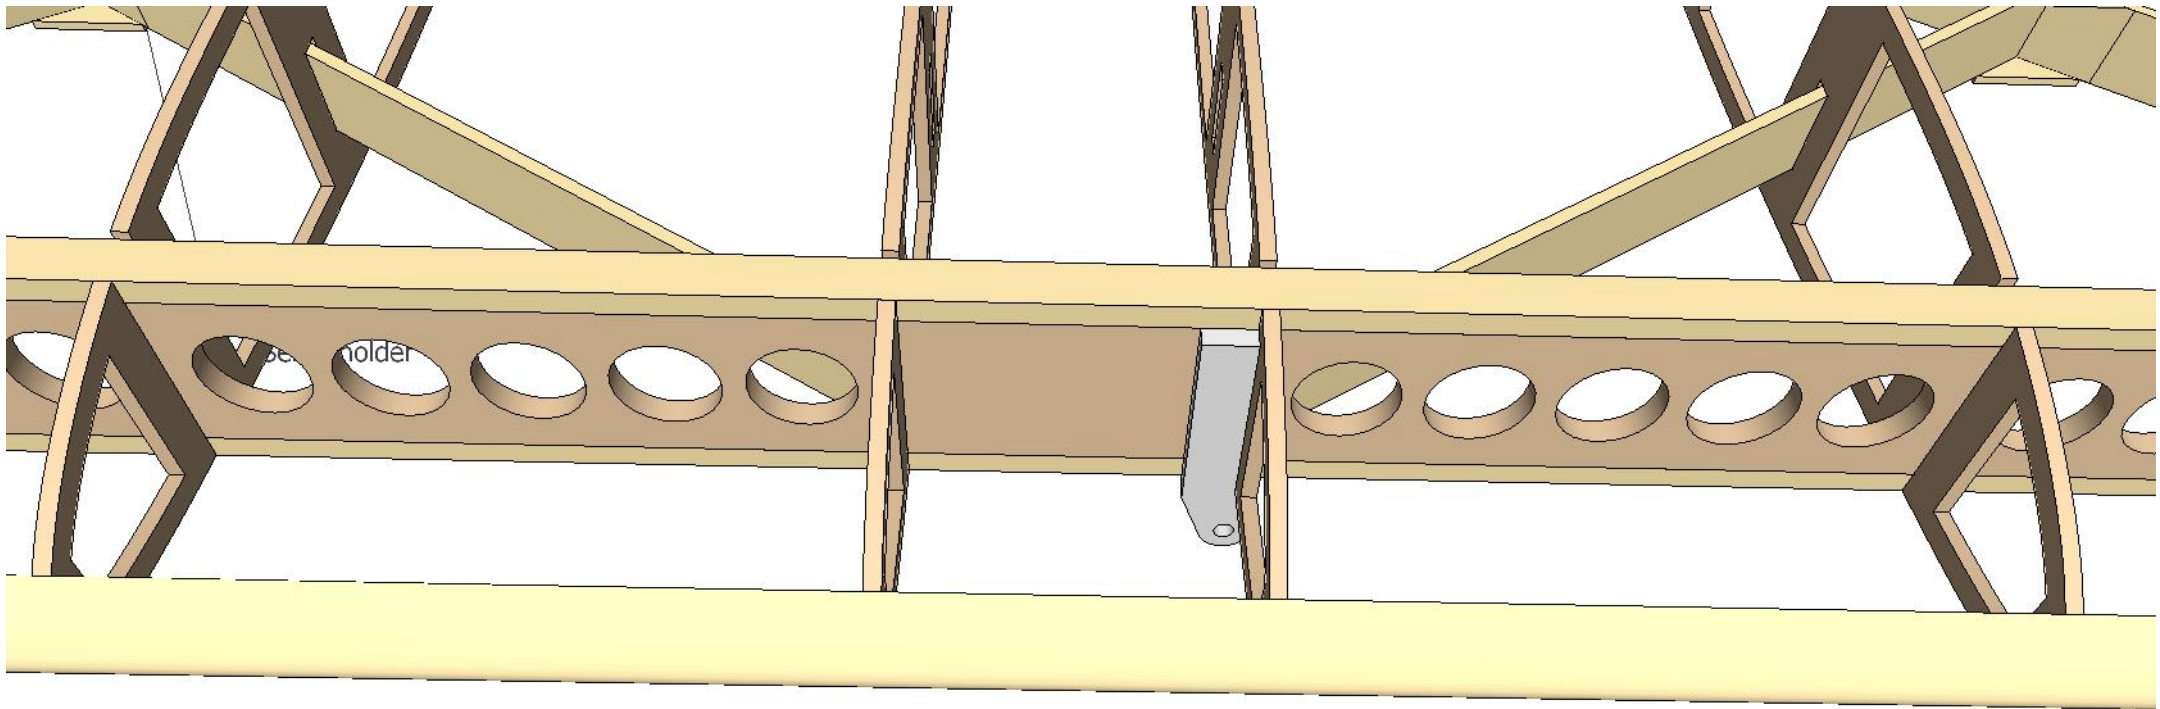

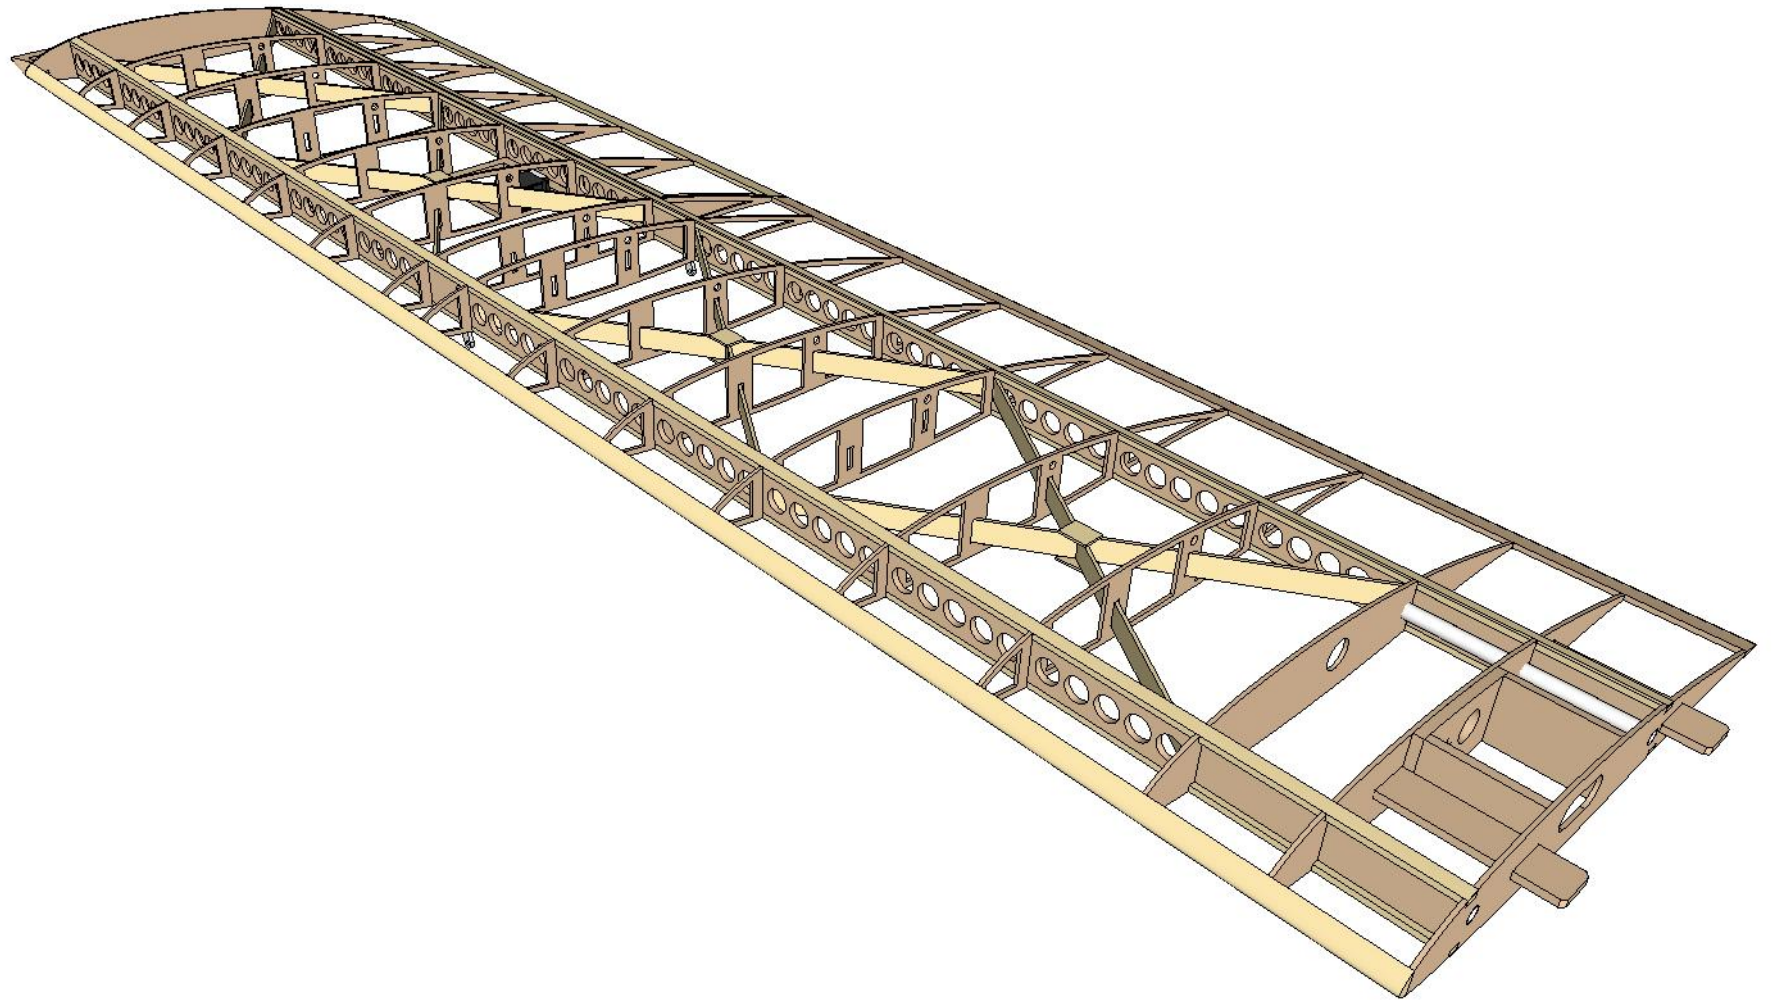




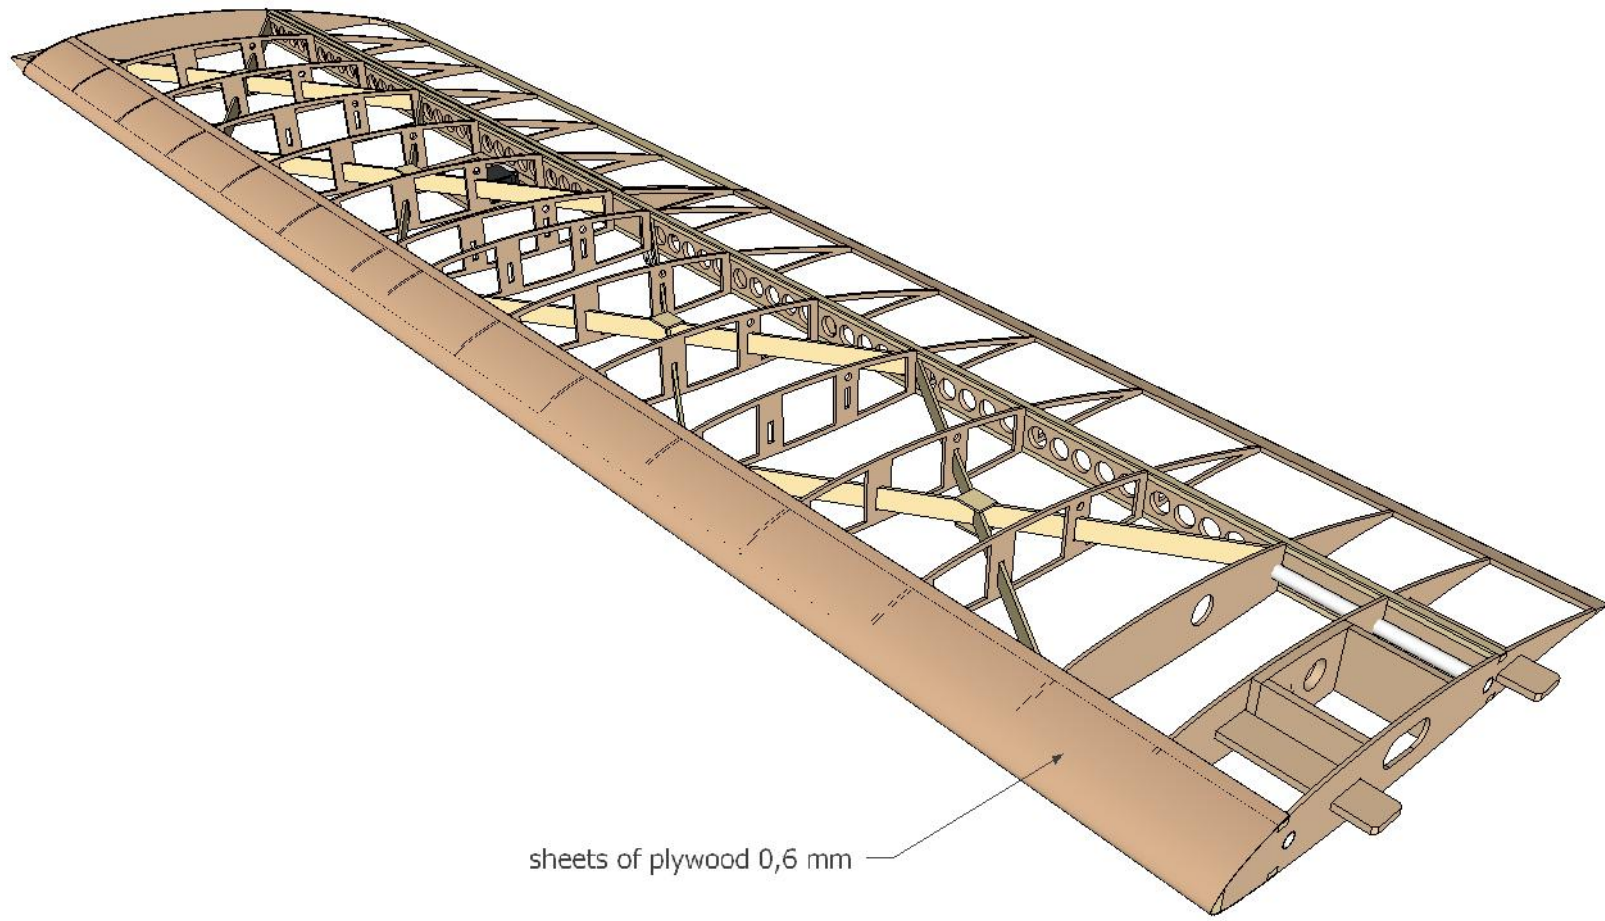


sheets of plywood 0,6 mm



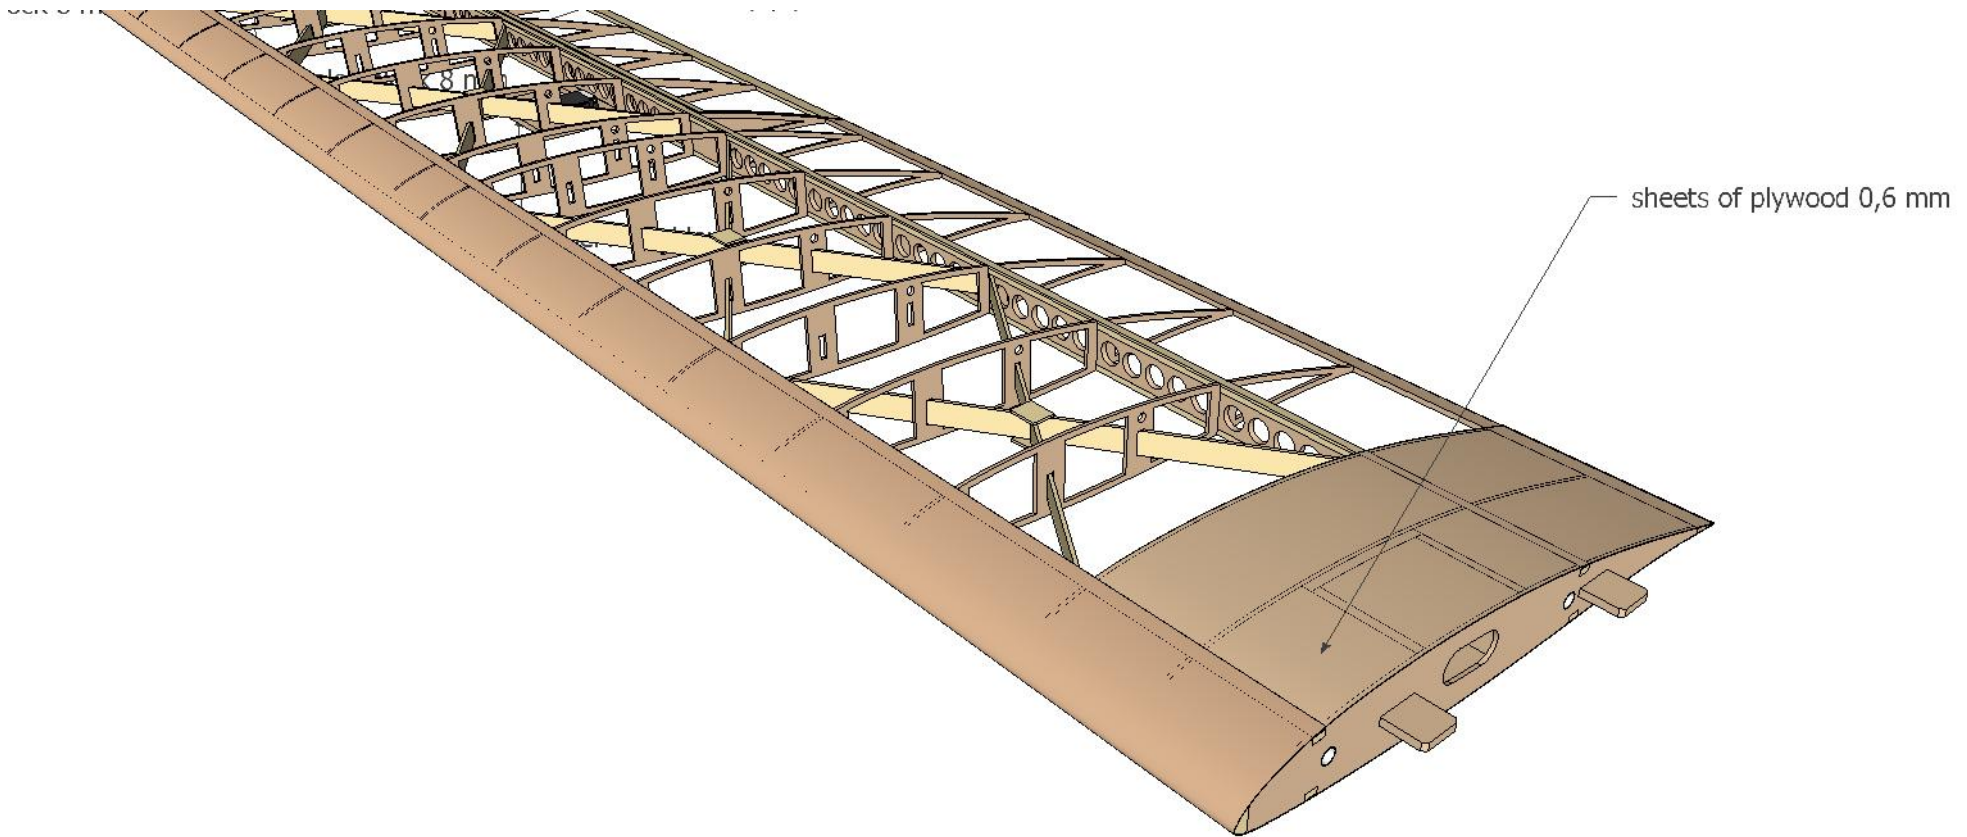



sheets of plywood 0,6 mm



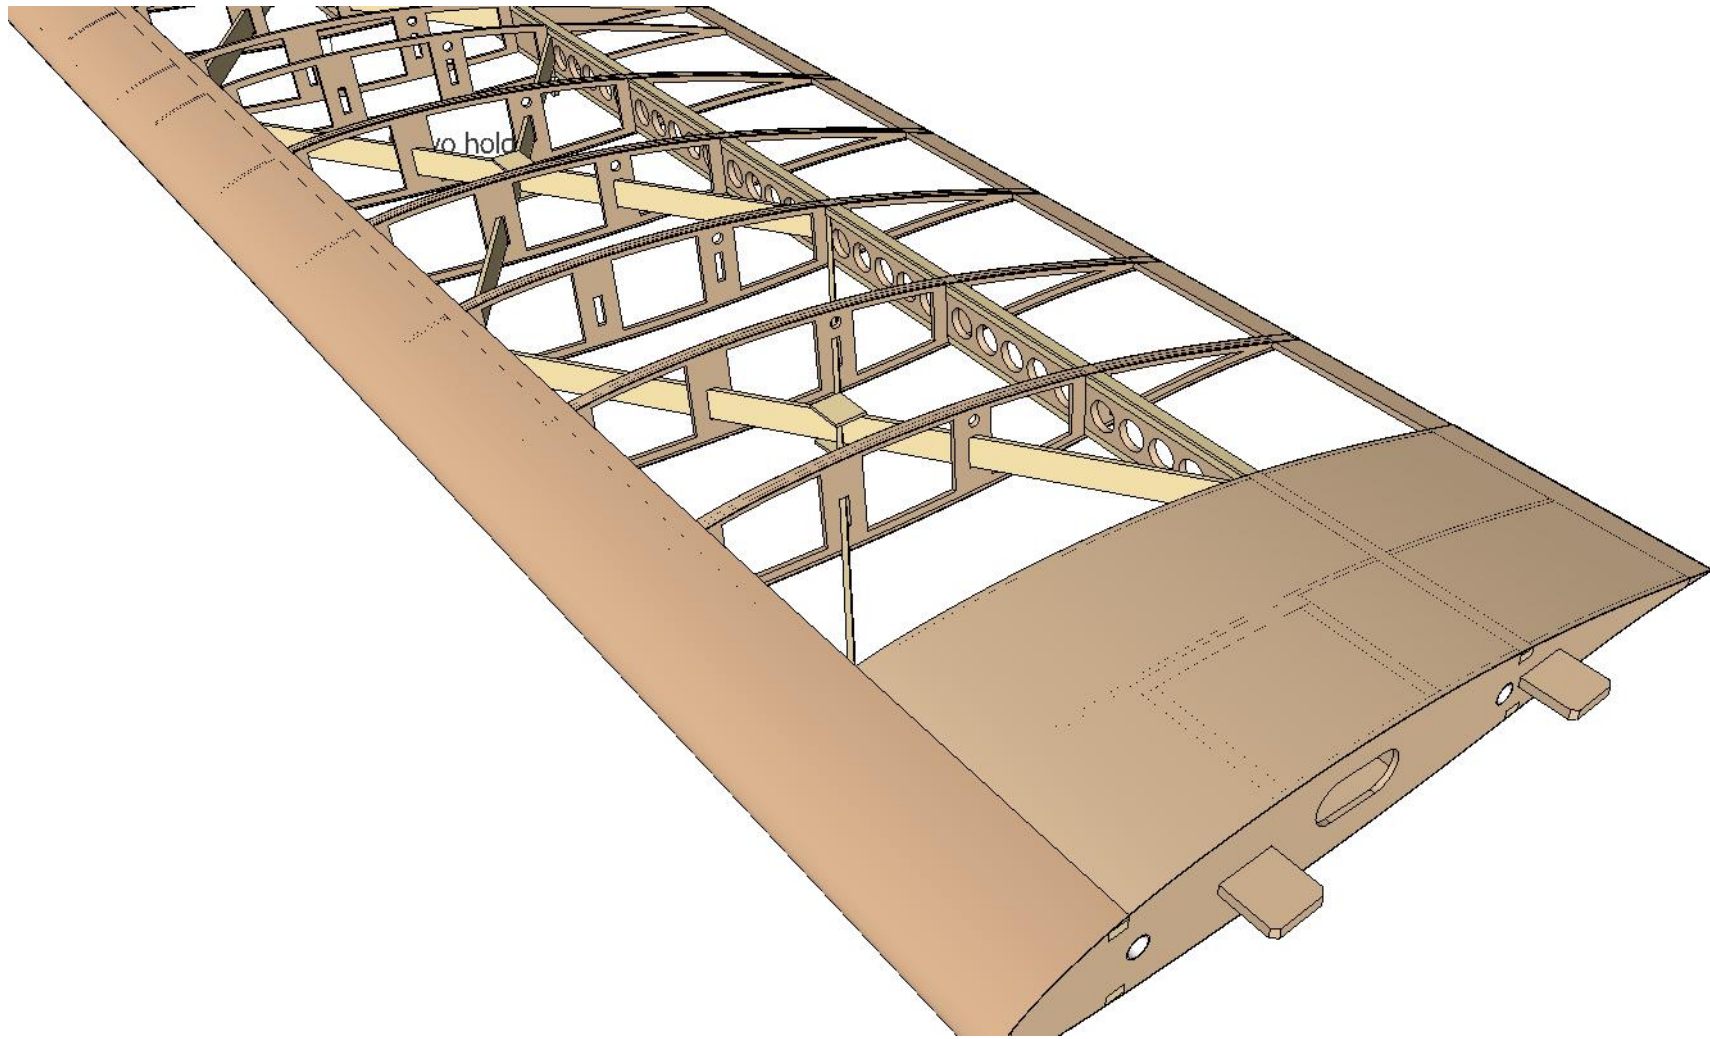

Balsa

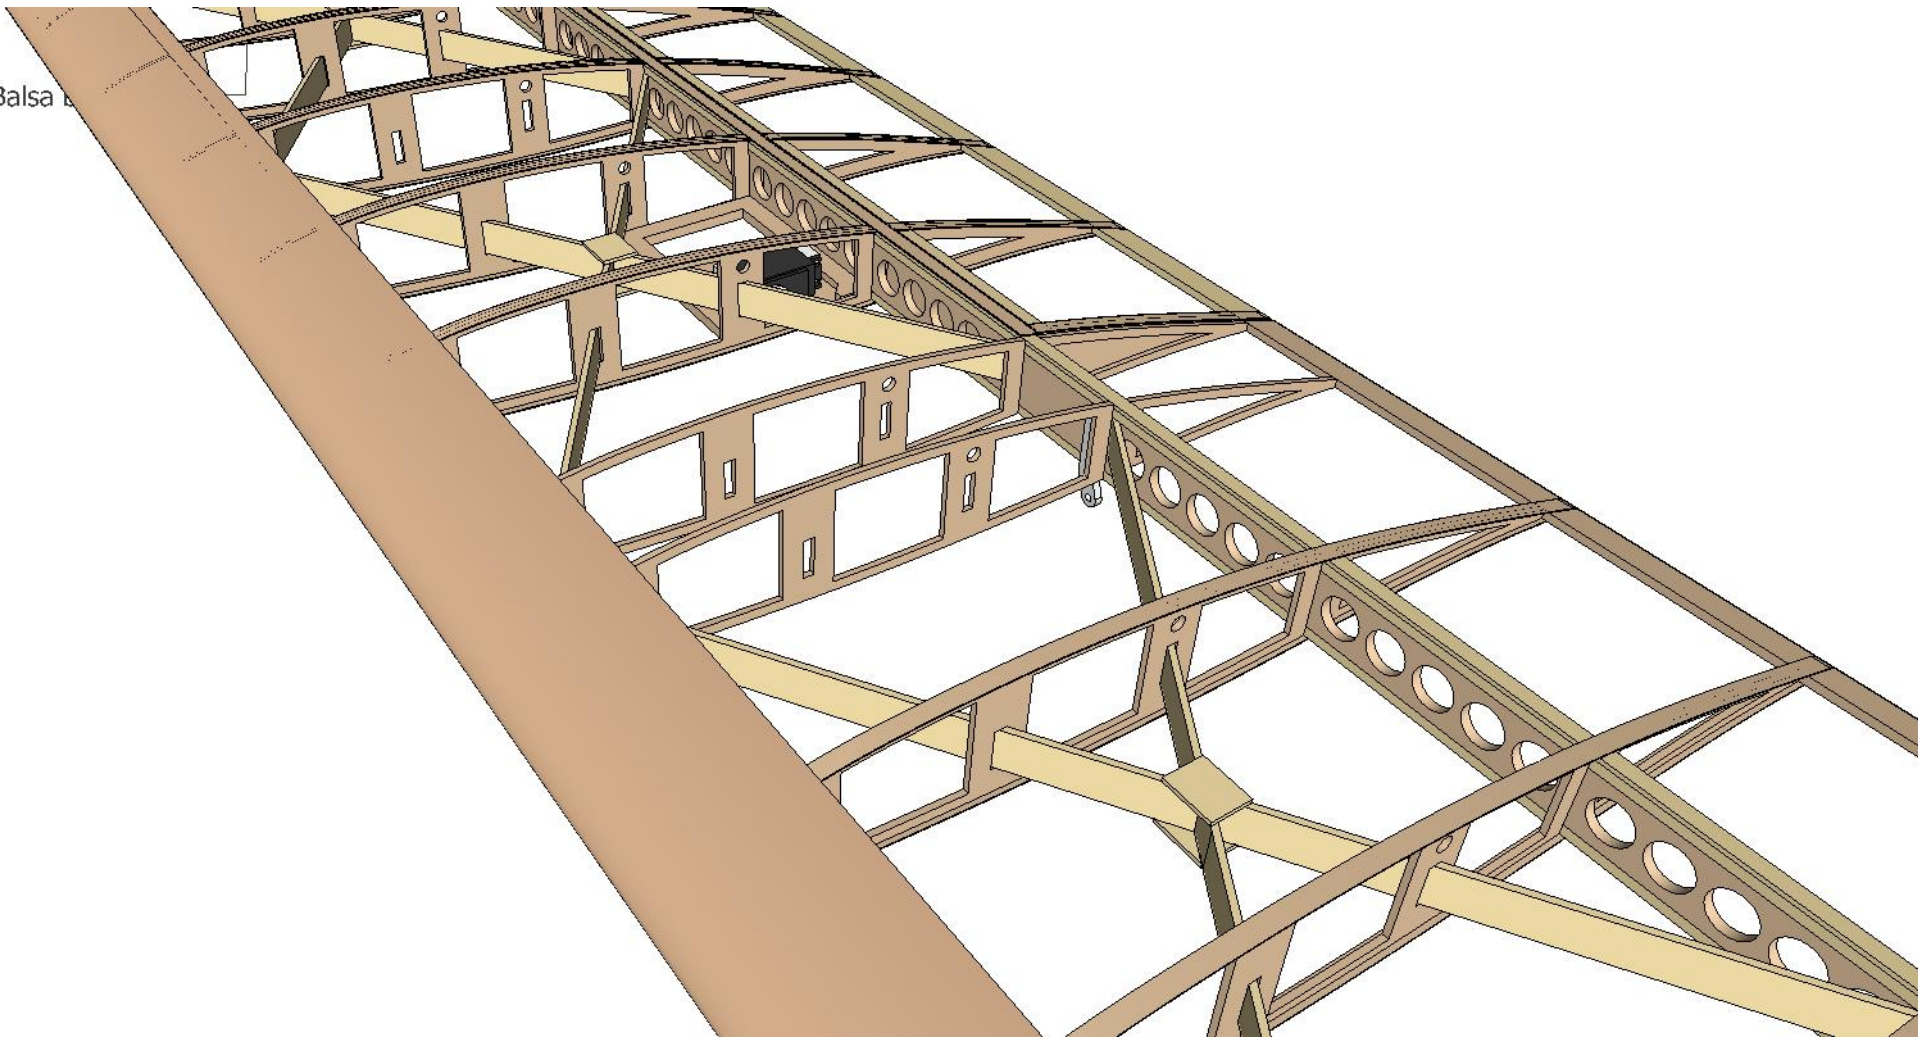

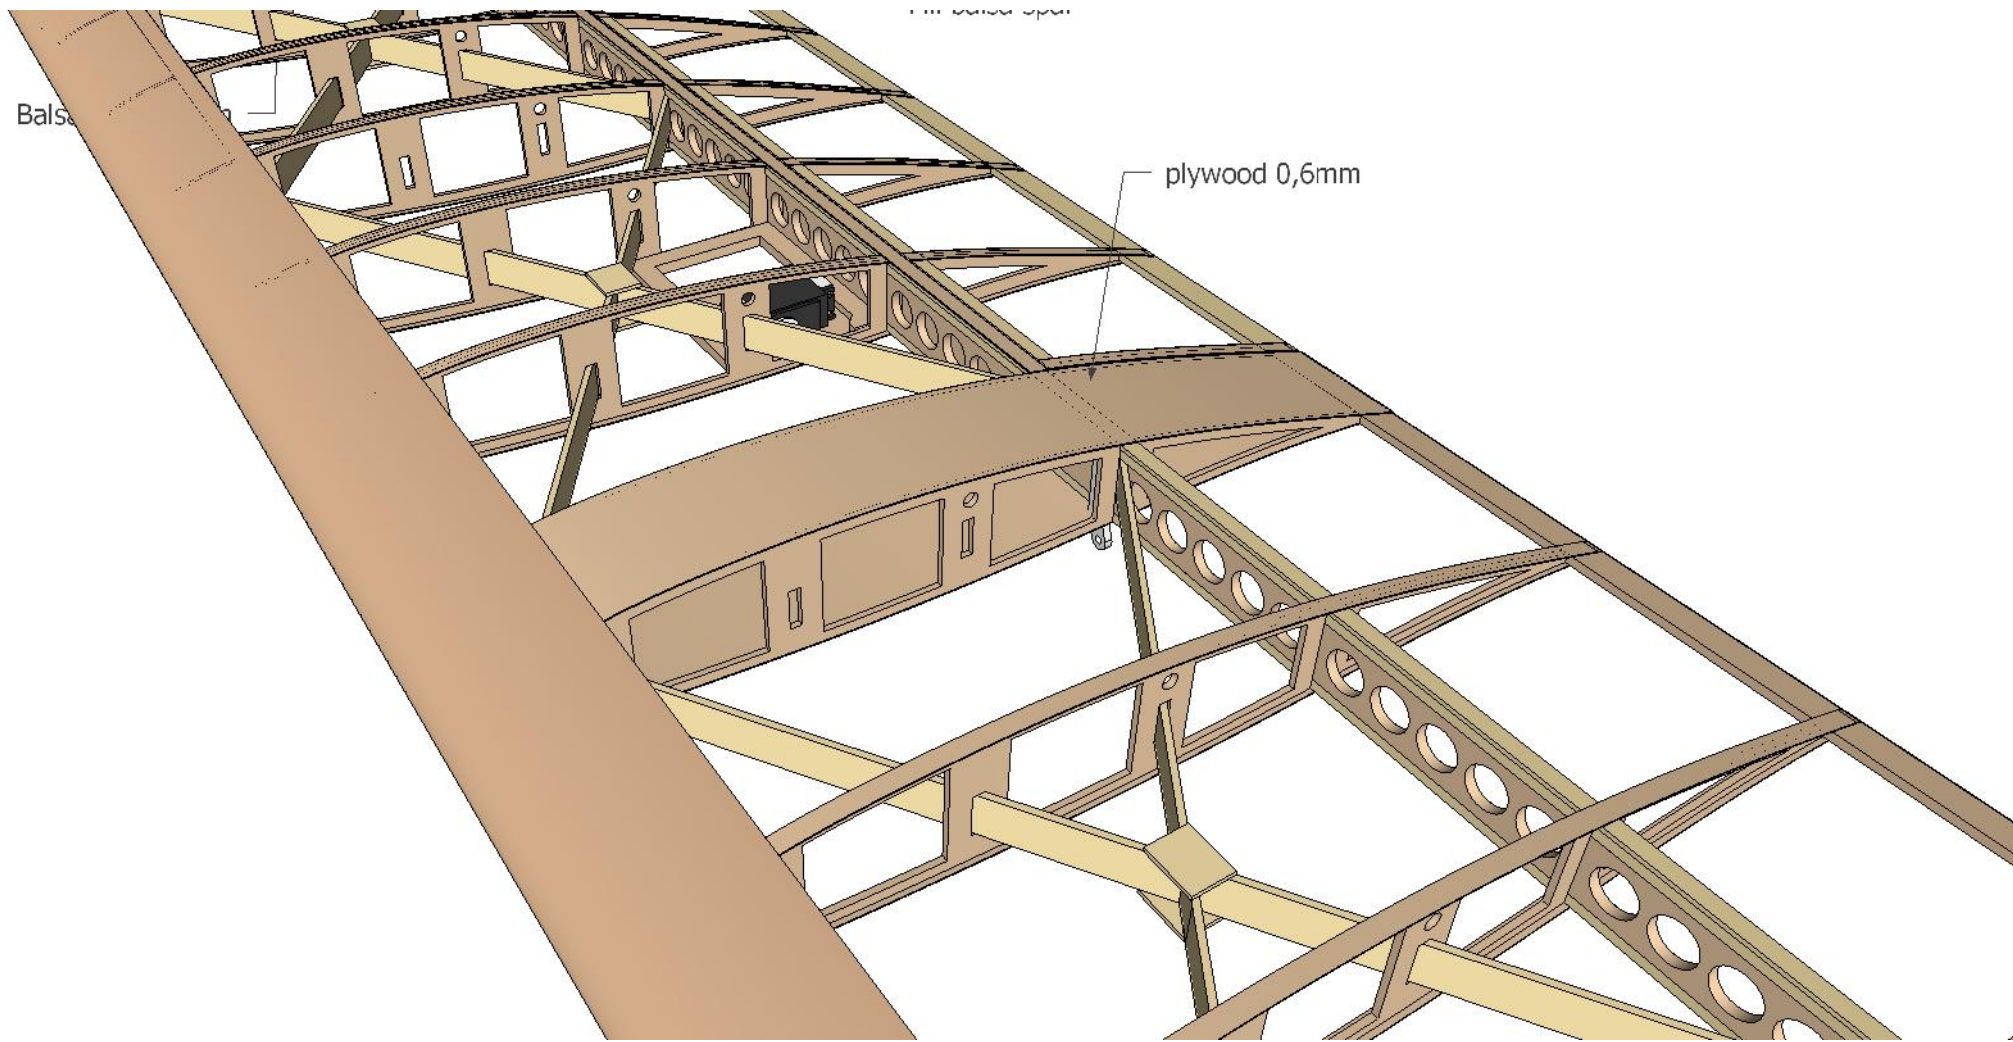



Balsa

1 m balsa spar

plywood 0,6mm



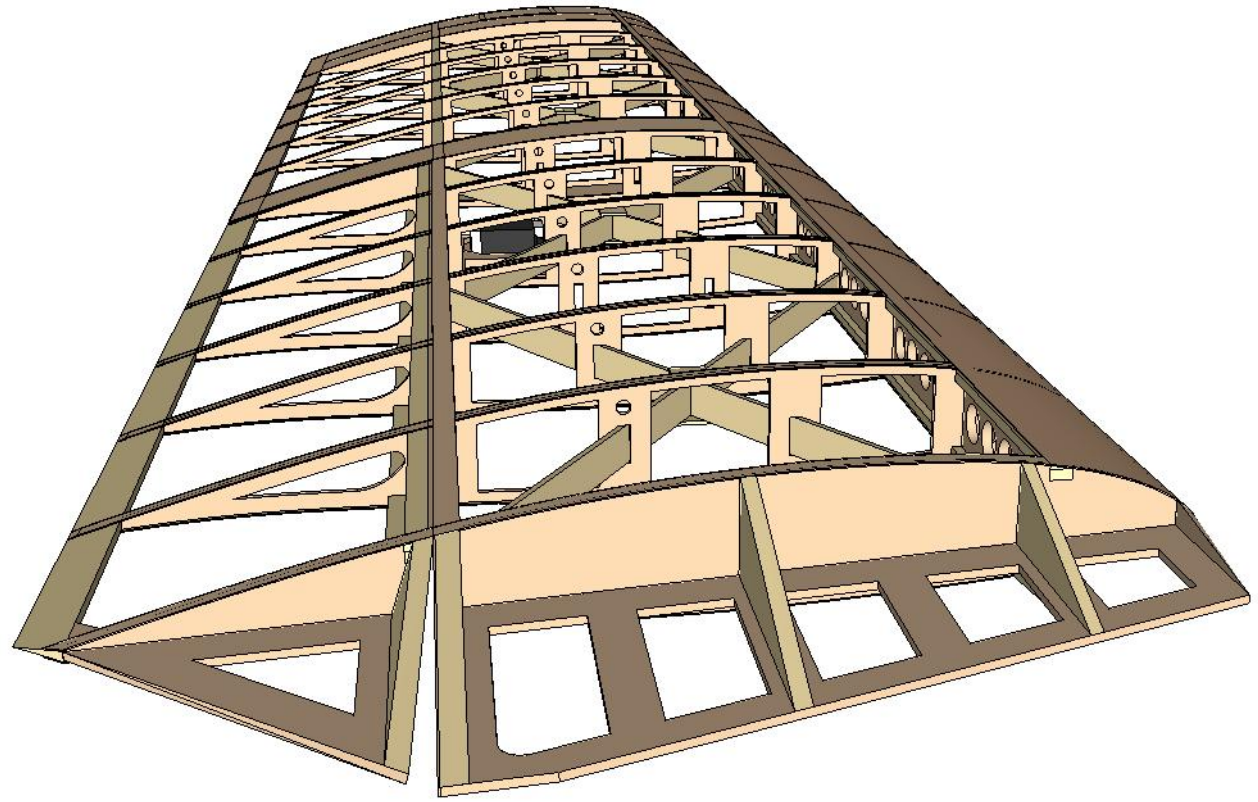

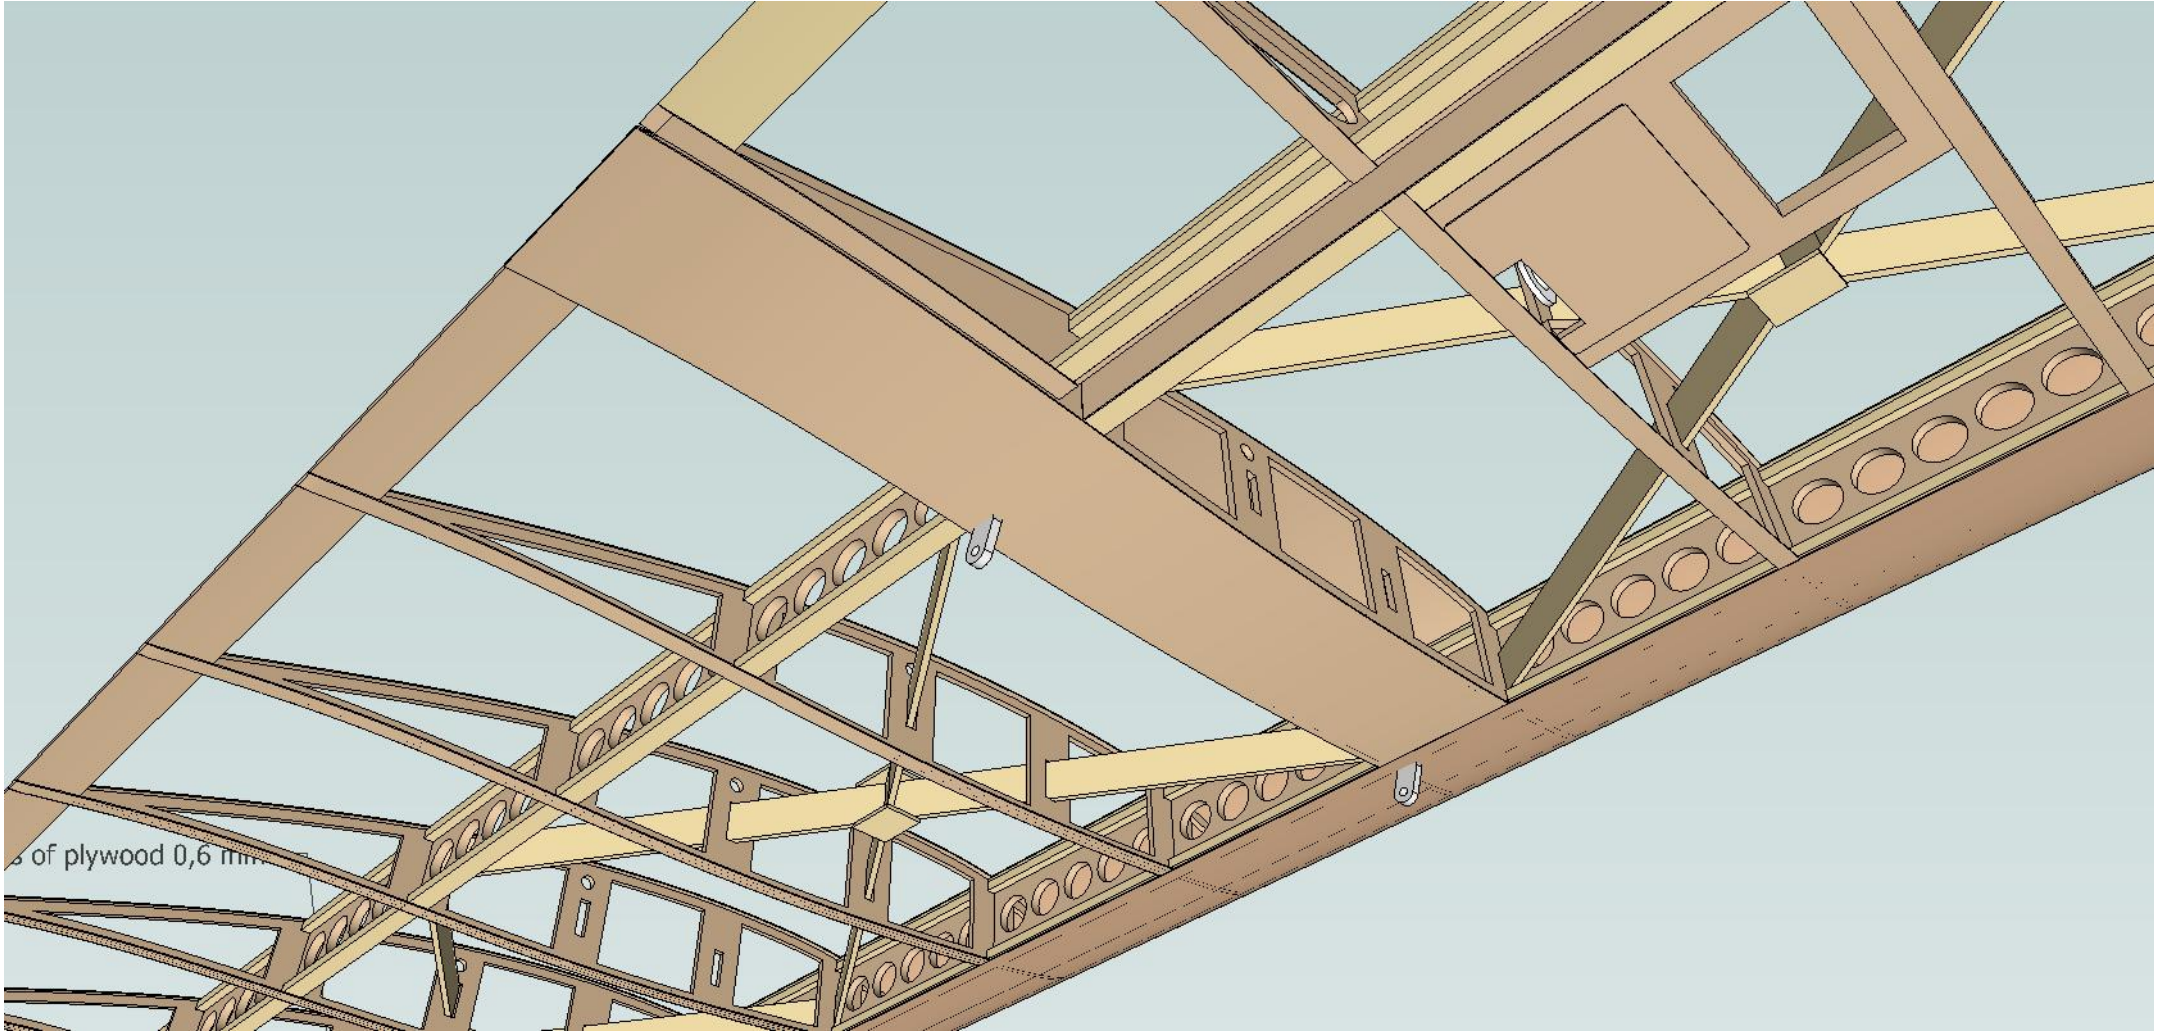

of plywood 0,6 mm